



# Alienware 17 R3 Display Replacement

Replace the display in Alienware 17 R3 laptop.

Written By: Jonathon Tschurwald



## INTRODUCTION

This guide will show you how to replace the display for your Alienware 17 R3 laptop. Ensure you have all the necessary tools before starting.

### TOOLS:

- [Phillips #1 Screwdriver](#) (1)
- [iFixit Opening Tools](#) (1)
- [Anti-Static Wrist Strap](#) (1)

## Step 1 — Display



- Turn the computer off.
- Disconnect the charging cable from the computer.

**⚠** Failure to unplug the charging cable could result in damaging the computer or seriously injuring yourself.

- Flip the computer upside down.
- **i** Wear the anti-static wrist strap to prevent any electrical shock to the components. Shocks may damage the components.

## Step 2



- Unscrew and remove the two 4mm Phillips screws from cover.

## Step 3



- Pull up and slide cover off.

## Step 4



- Unplug the black wire with the yellow tag to disconnect the battery.

## Step 5



- Using the plastic opening tool, pull display casing away from main body.

## Step 6



- Unscrew and remove the two 2mm Phillips screws from the bottom of the display.

## Step 7



- Disconnect plugs connecting the display to the main body.

## Step 8



- Lift display out.

To reassemble your device, follow these instructions in reverse order.