




Alienware M11xR2 Base Cover Replacement

Written By: darrius

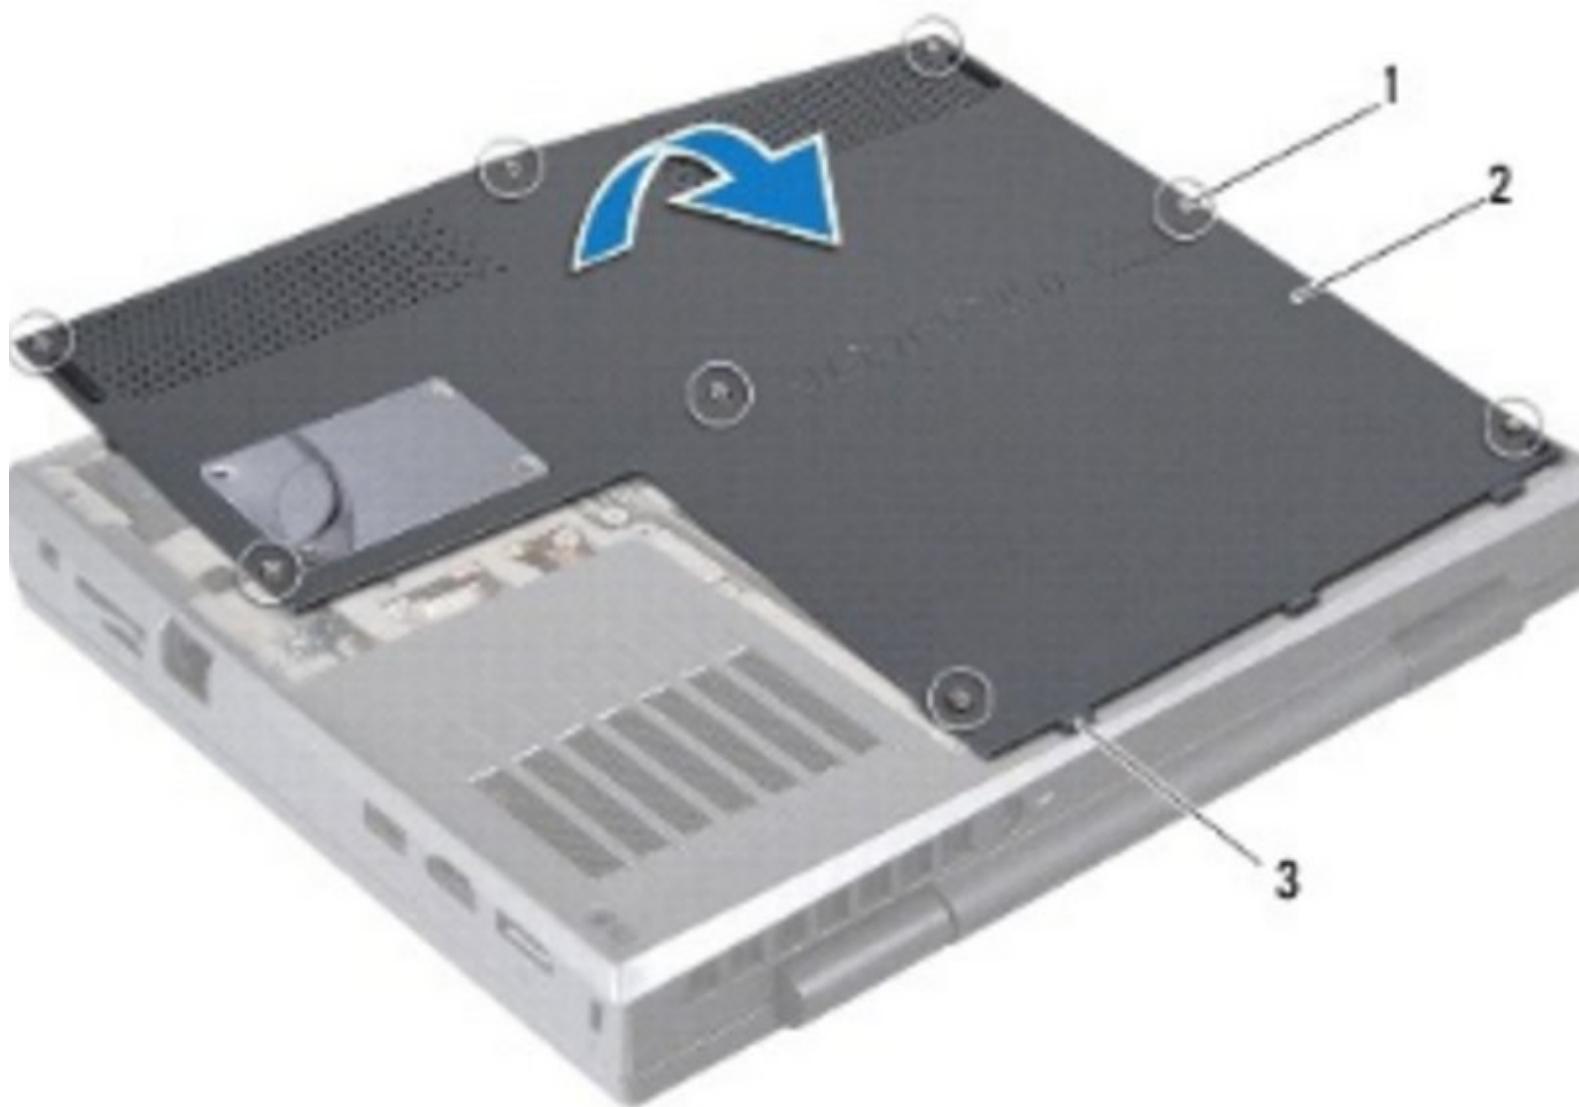


INTRODUCTION

How to remove and replace the Base Cover.

TOOLS:

- Phillips #0 Screwdriver (1)

Step 1 — Removing the Base Cover

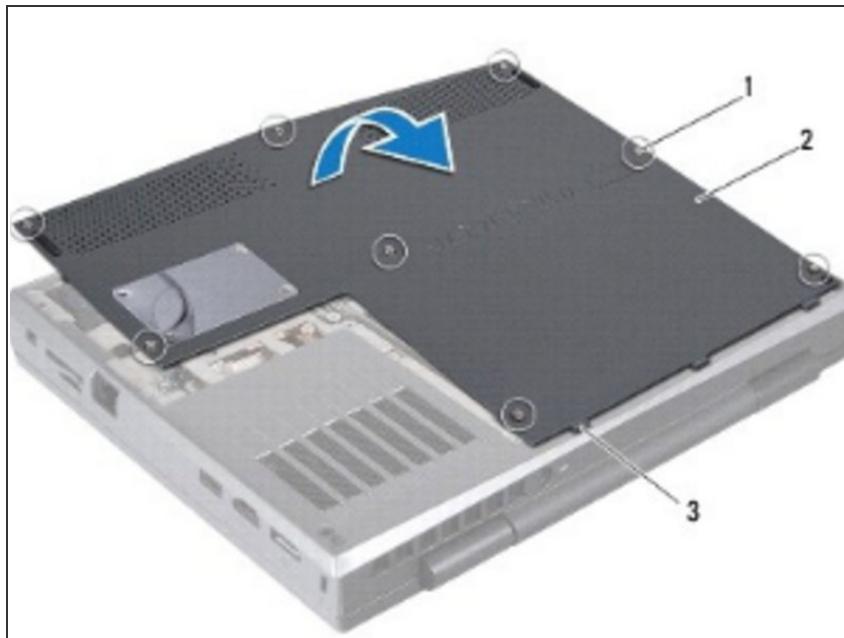


⚠️ **WARNING:** Before working inside your computer, read the safety information that shipped with your computer.

⚠️ **CAUTION:** To avoid electrostatic discharge, ground yourself by using a wrist grounding strap or by periodically touching an unpainted metal surface (such as a connector on your computer).


- Turn the computer over.

Step 2 — Loosen the Screws

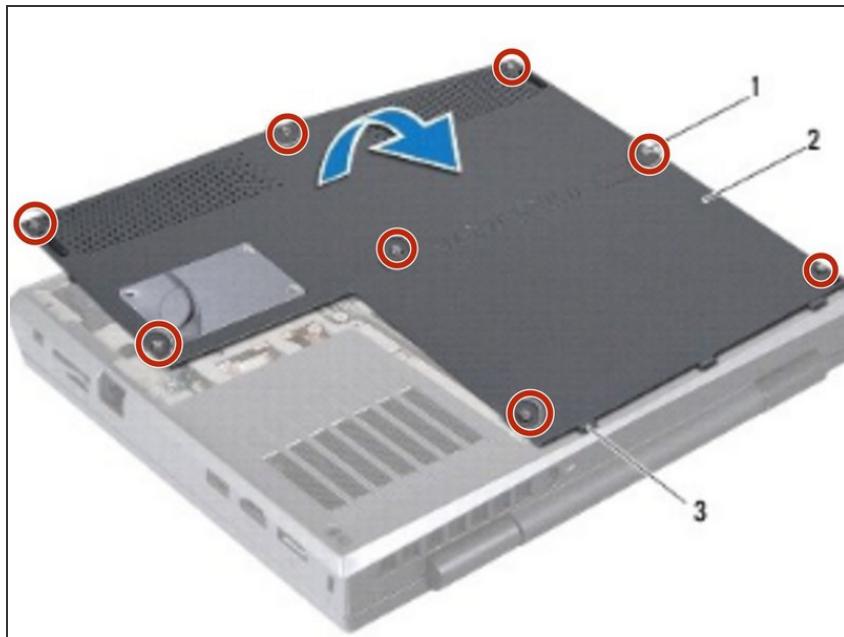

- Loosen the eight captive screws that secure the base cover to the computer base.

Step 3 — Lifting the Base Cover

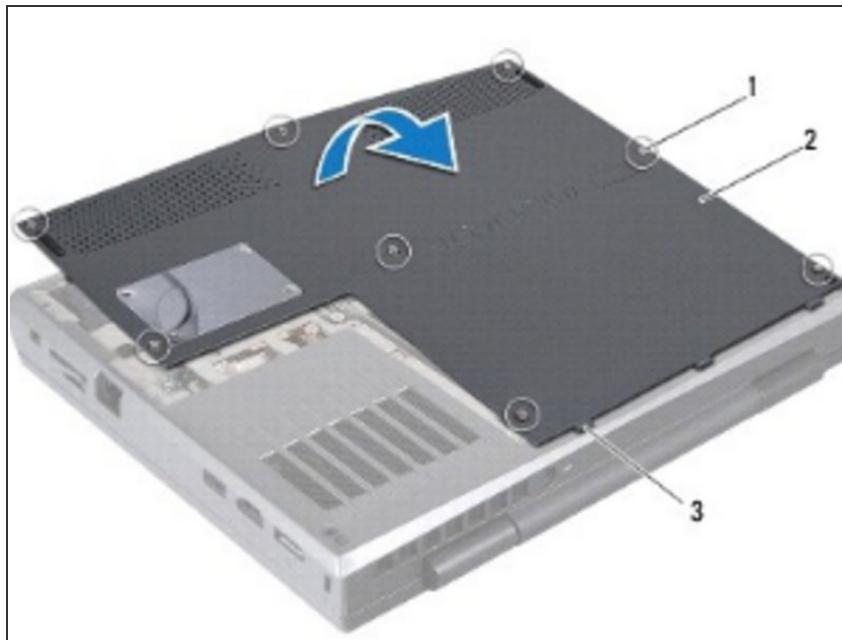


- Lift the base cover off the computer base.

Step 4 — Replacing the Base Cover



- Align the tabs on the **NEW** base cover with the slots on the computer base and place the base cover in position.

Step 5 — Securing the Screws

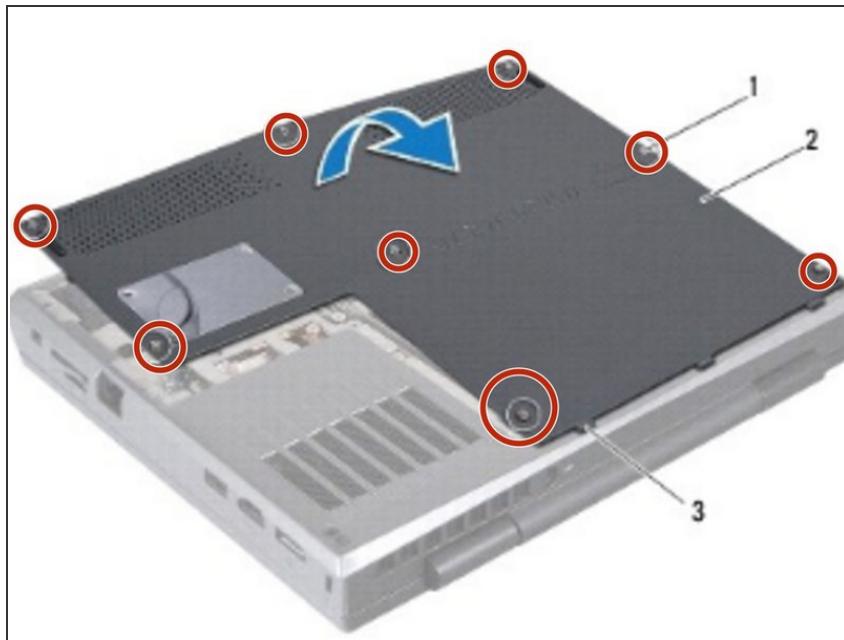

- Tighten the eight screws that secure the base cover to the computer base.