



Alienware M15x CPU and/or GPU Removal

Removing the CPU and GPU to upgrade or replace. Also covers accessing the memory modules.


Written By: Steve Baker



 **TOOLS:**

- [Pro Tech Toolkit \(1\)](#)

Step 1 — Alienware M15x CPU, GPU or RAM Removal

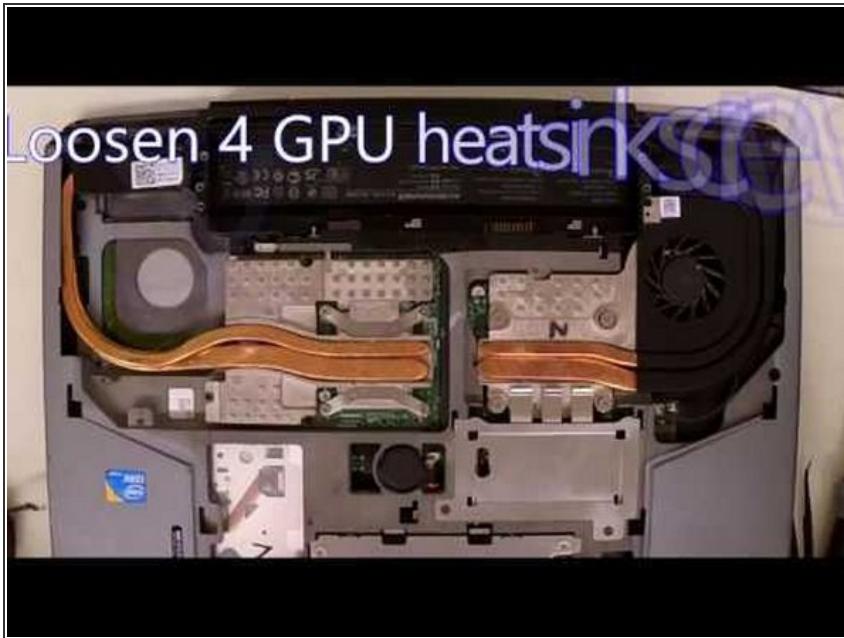

- Reassemble in reverse order. Remember to apply new thermal paste in a thin line along the center of the chip.

To reassemble your device, follow these instructions in reverse order.