


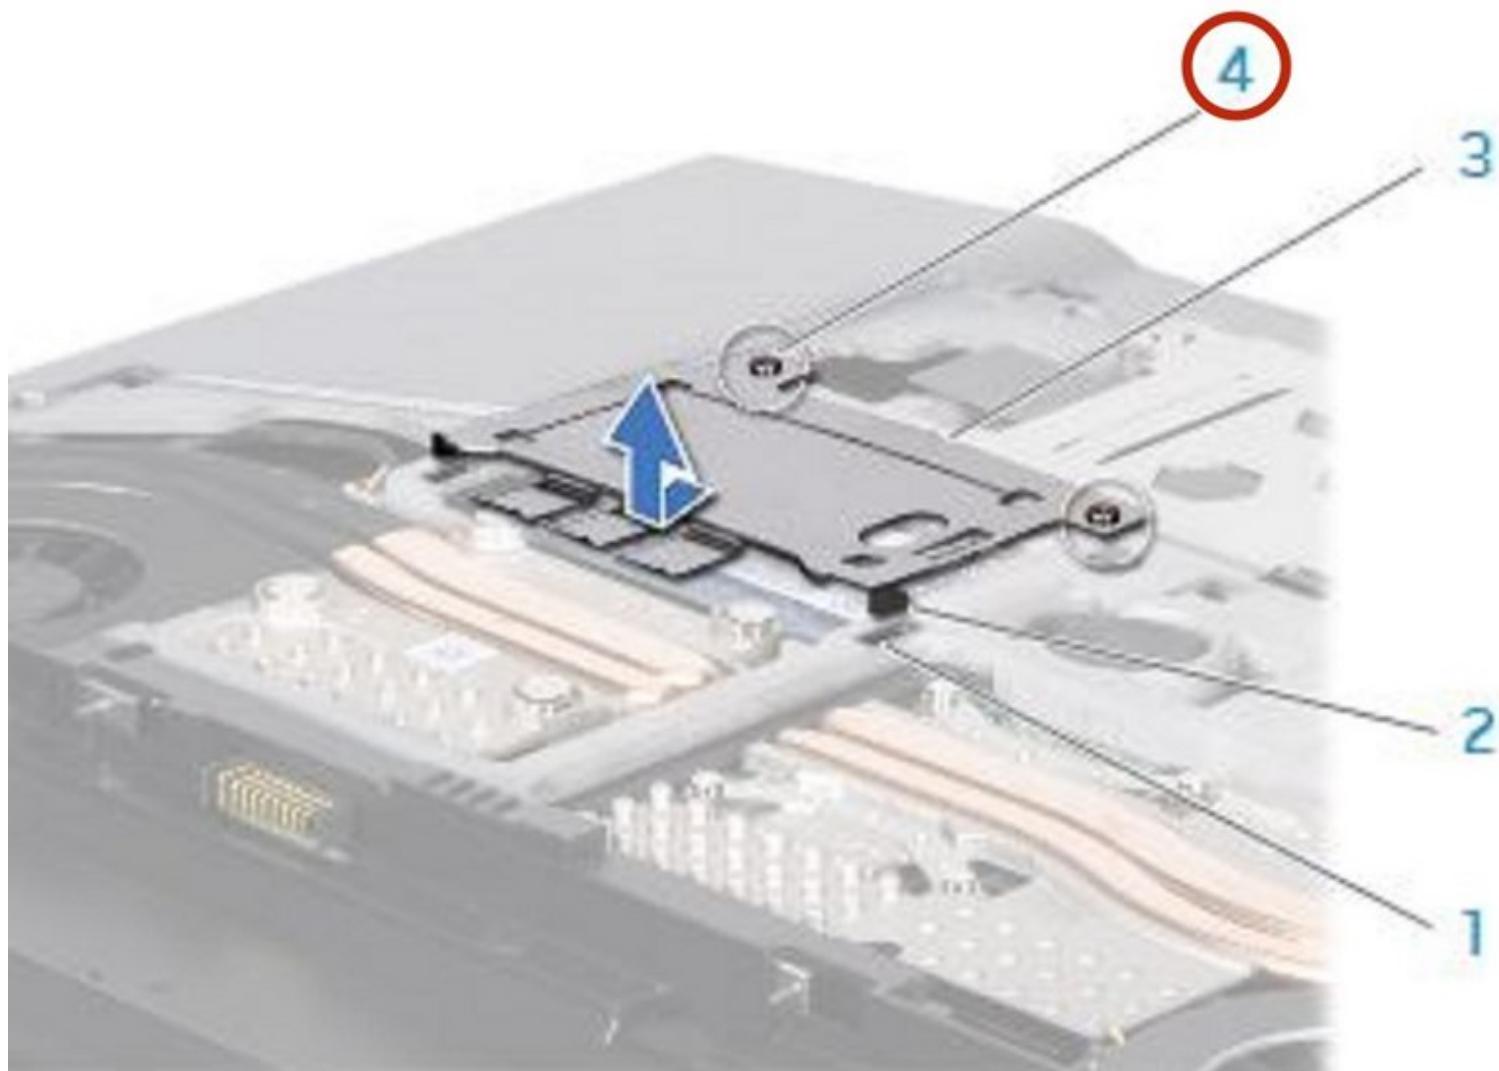

Alienware M15x Memory Modules Replacement

Written By: Terrence15




INTRODUCTION

In this guide, we will show you how to remove and replace the Memory Modules.

TOOLS:

- Essential Electronics Toolkit (1)


Step 1 — Turn the Computer

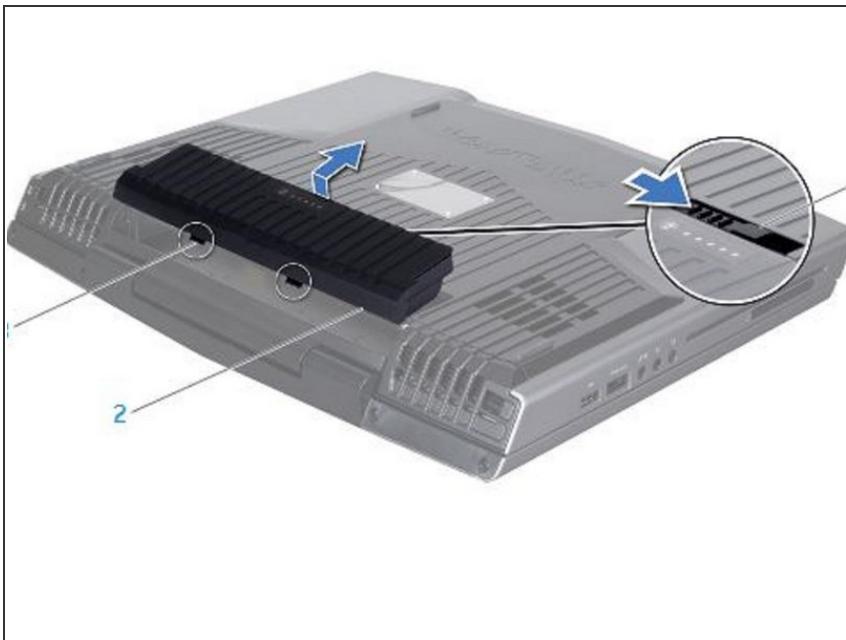

⚠ WARNING: Before working inside your computer, read the safety information that shipped with your computer.

- Turn the computer over.

Step 2 — Sliding the Battery

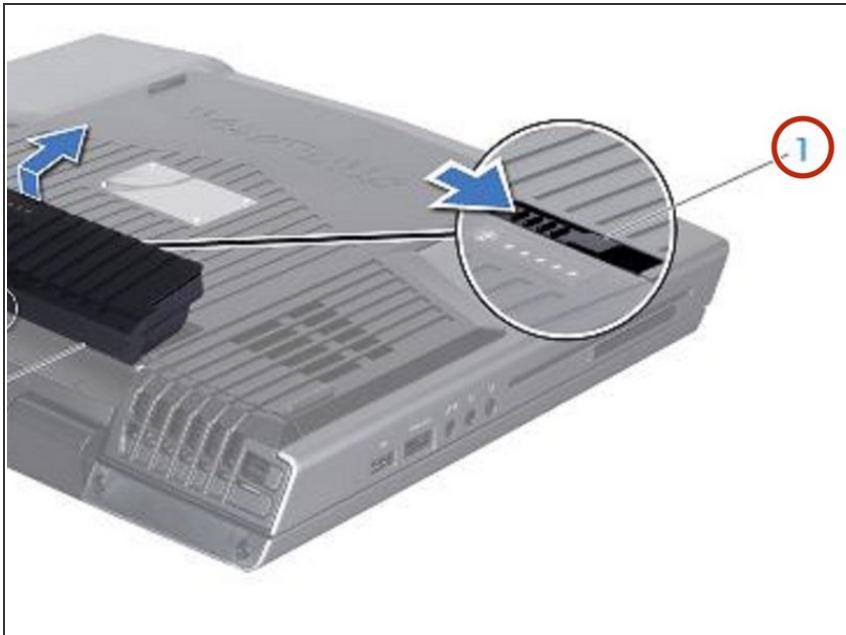


- Slide the battery latch to the unlock position as shown.

Step 3 — Removing the Battery Pack



- After the Battery Pack pops up, remove the Battery Pack.

Step 4 — Aligning the Battery Pack Tabs

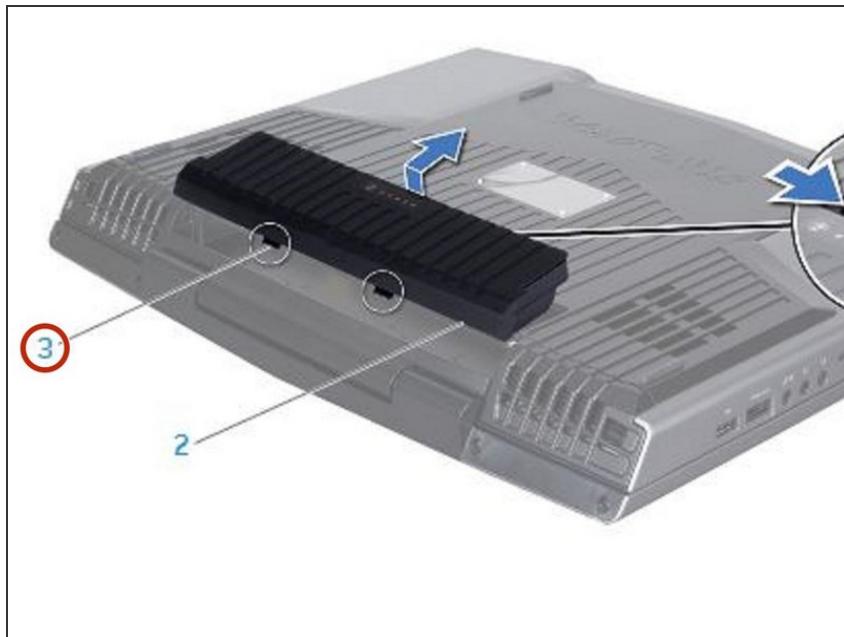


- Align the battery pack tabs with the slots in the battery bay.

Step 5 — Pushing the Battery Pack



- Push the **NEW** battery pack into the battery bay until the battery pack clicks into place.

Step 6 — Loosen the Screws

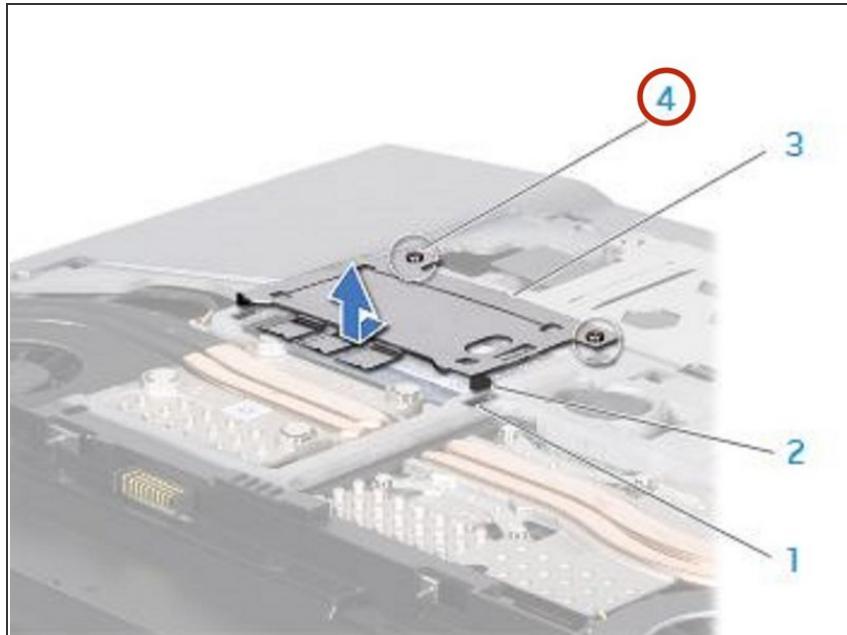


⚠ **WARNING:** Before working inside your computer, read the safety information that shipped with your computer.

⚠ **CAUTION:** To avoid electrostatic discharge, ground yourself by using a wrist grounding strap or by periodically touching an unpainted metal surface (such as a connector on the back of the computer).


- Loosen the two captive screws that secure the memory-module door to the computer base.

Step 7 — Lifting the Memory Module Door

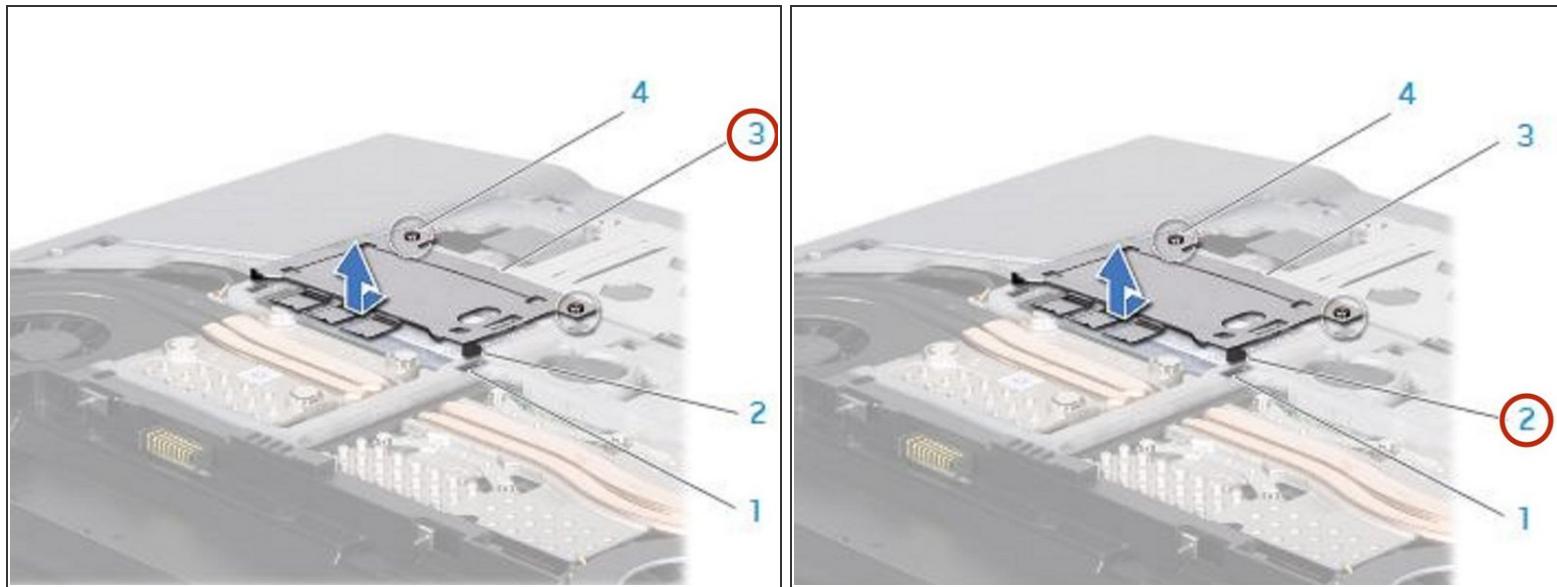

- Slide the memory-module door to release the tabs and lift the memory-module door out of the computer base.

Step 8 — Popping up the Memory Module

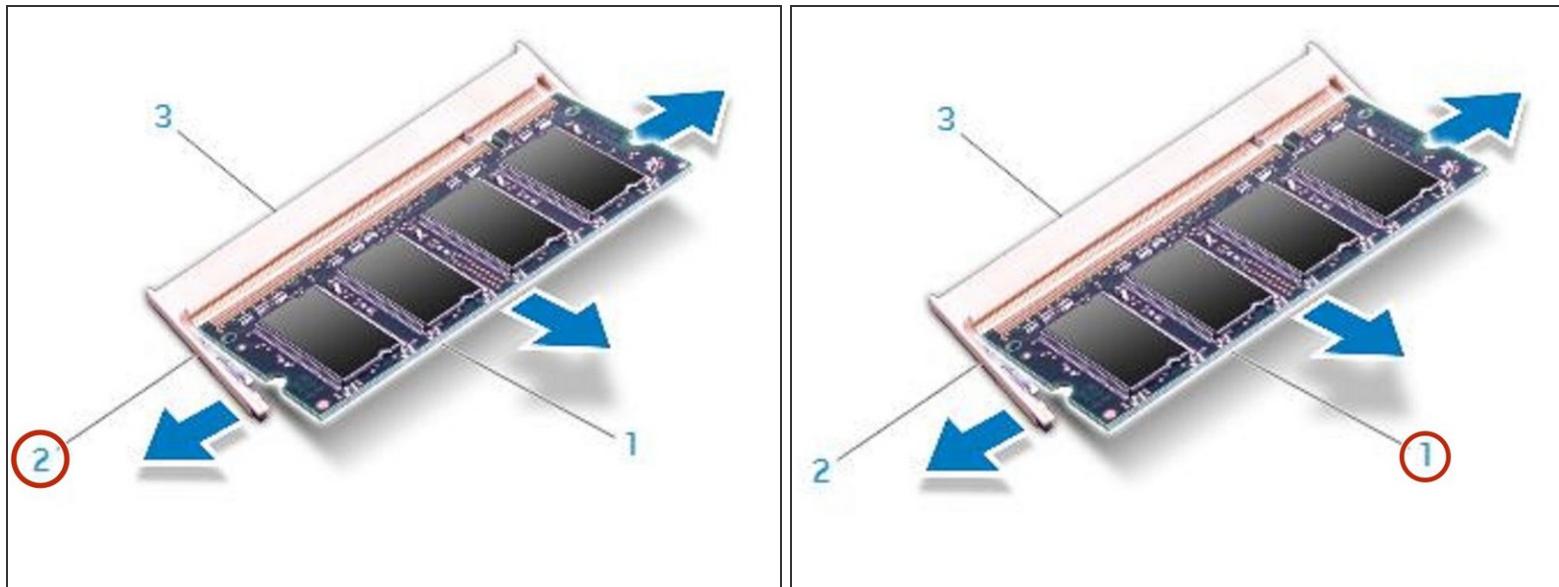


⚠ CAUTION: If you need to remove memory modules from both connectors, remove the memory module in the upper connector before you remove the module in the lower connector.

⚠ CAUTION: To prevent damage to the memory module connector(s), do not use tools to spread the memory module spring-locks.


- Use your fingertips to carefully spread apart the spring-locks on the memory-module connector until the memory module pops up.

Step 9 — Remove the Memory Module

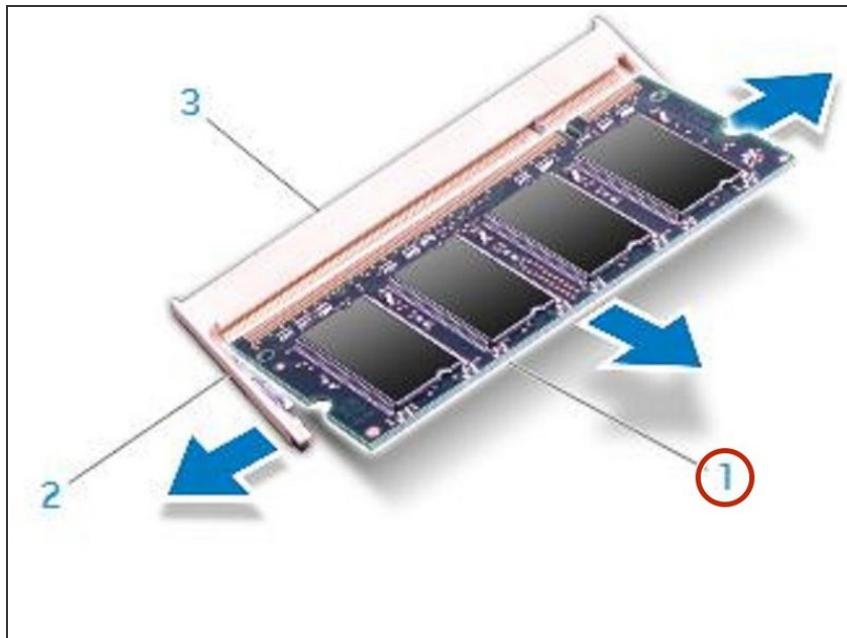


- Remove the memory module.

Step 10 — Align the Notch

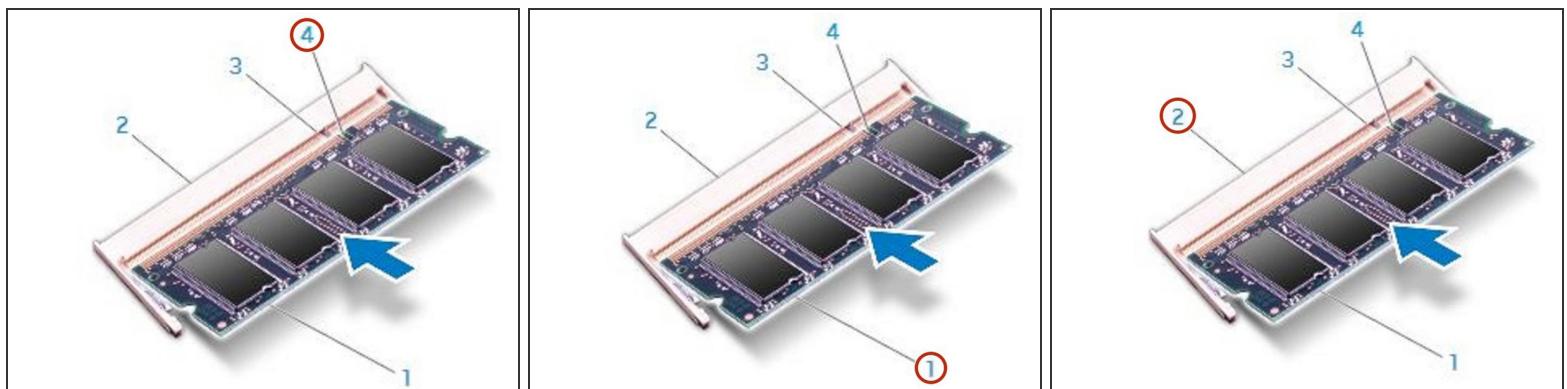


- Align the notch on the **NEW** memory module with the tab on the memory-module connector.

Step 11 — Insert the Module

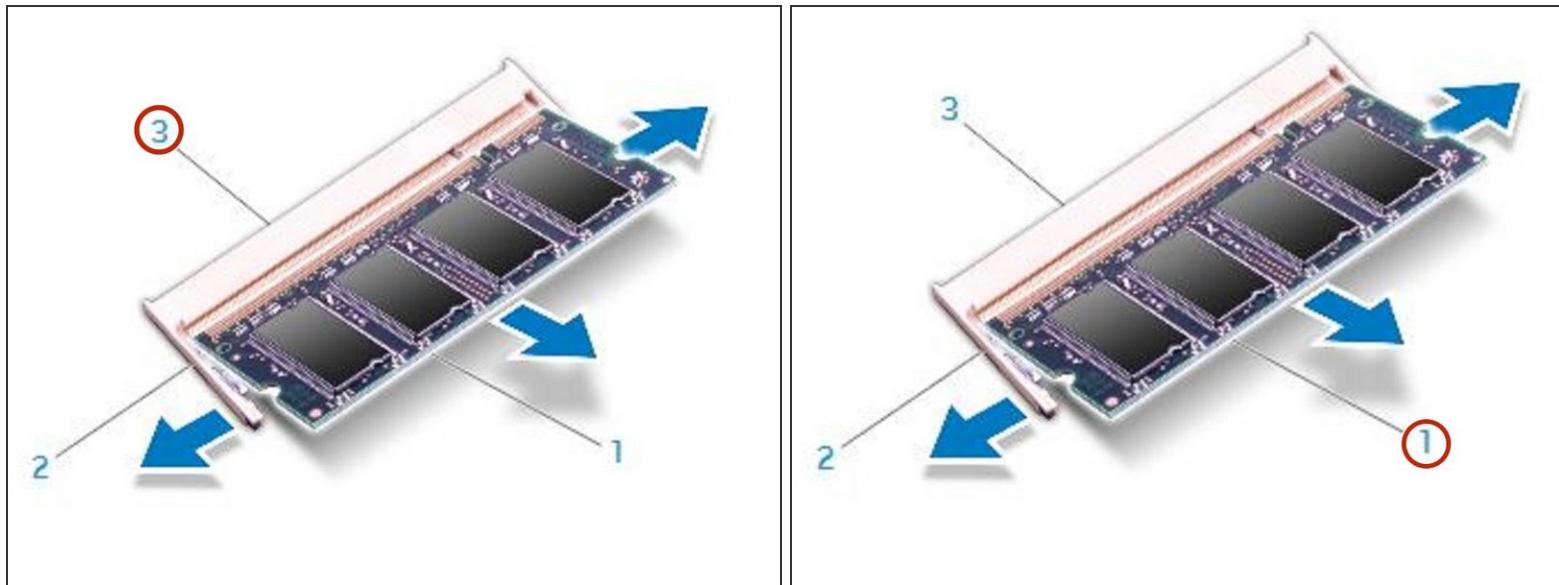

- Insert the module into the memory-module connector at a 45-degree angle, and press the memory module down until it clicks into place. If you do not hear the click, remove the module and reinstall it.

Step 12 — Align and Insert the Memory Module Tabs

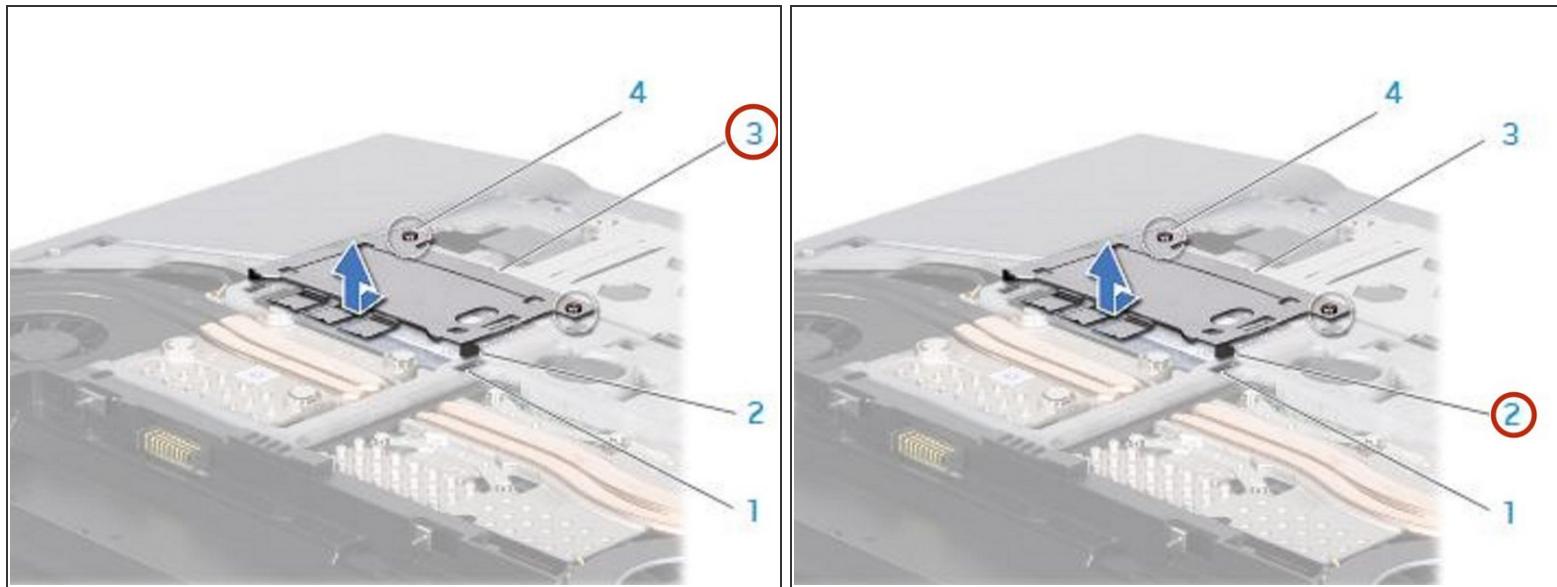


⚠ CAUTION: If the memory-module door is difficult to close, remove the memory module and reinstall it. Forcing the memory-module door to close may damage your computer.

ⓘ NOTE: If the memory module is not installed properly, the computer may not boot.

- Align and insert the memory-module door tabs into the slots on the computer base.

Step 13 — Replacing and Tightening the Screws

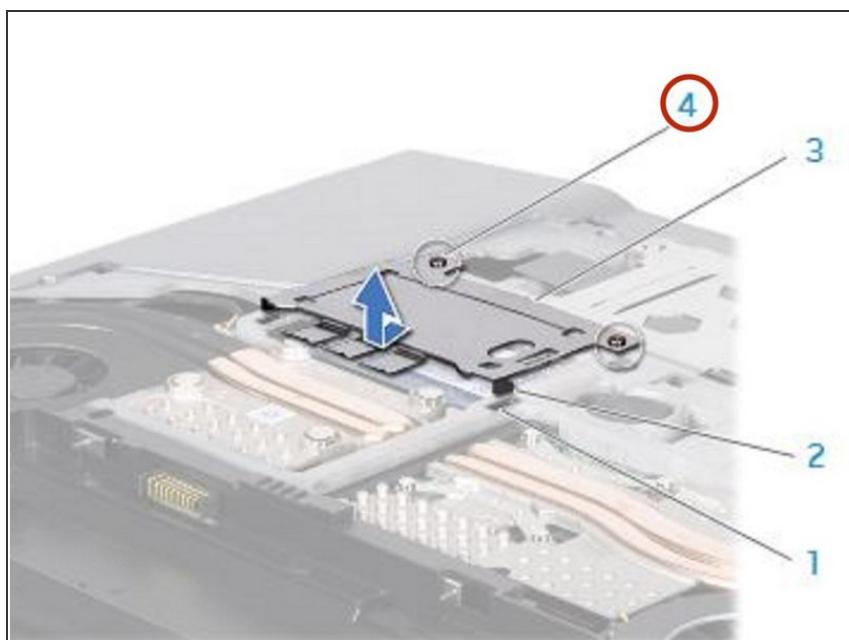

- Replace and tighten the two captive screws that secure the memory-module door to the computer base.

To reassemble your device, follow these instructions in reverse order.