



Alienware M17-R1 Screen Lock Assembly Replacement

How to replace an Alienware M17-R1 screen lock assembly.

Written By: William Davis



INTRODUCTION

It is important for your screen lock to be fully functional to prevent potential damages. This guide will help you replace the screen lock assembly. If it has chipped or broken, it may not stay closed.

TOOLS:

- [iFixit Opening Tools](#) (1)
- [Phillips #1 Screwdriver](#) (1)

Step 1 — Screen Lock Assembly




- Open the screen until it is flat.
- ⓘ Ensure that the surface you are working on can support both the screen and the base of the laptop.

Step 2



- Remove the eight 7 mm screws around the edge of the screen using a Phillips #1 screwdriver.
- ⓘ Support the screen from the bottom to make it easier to remove the screws.

Step 3

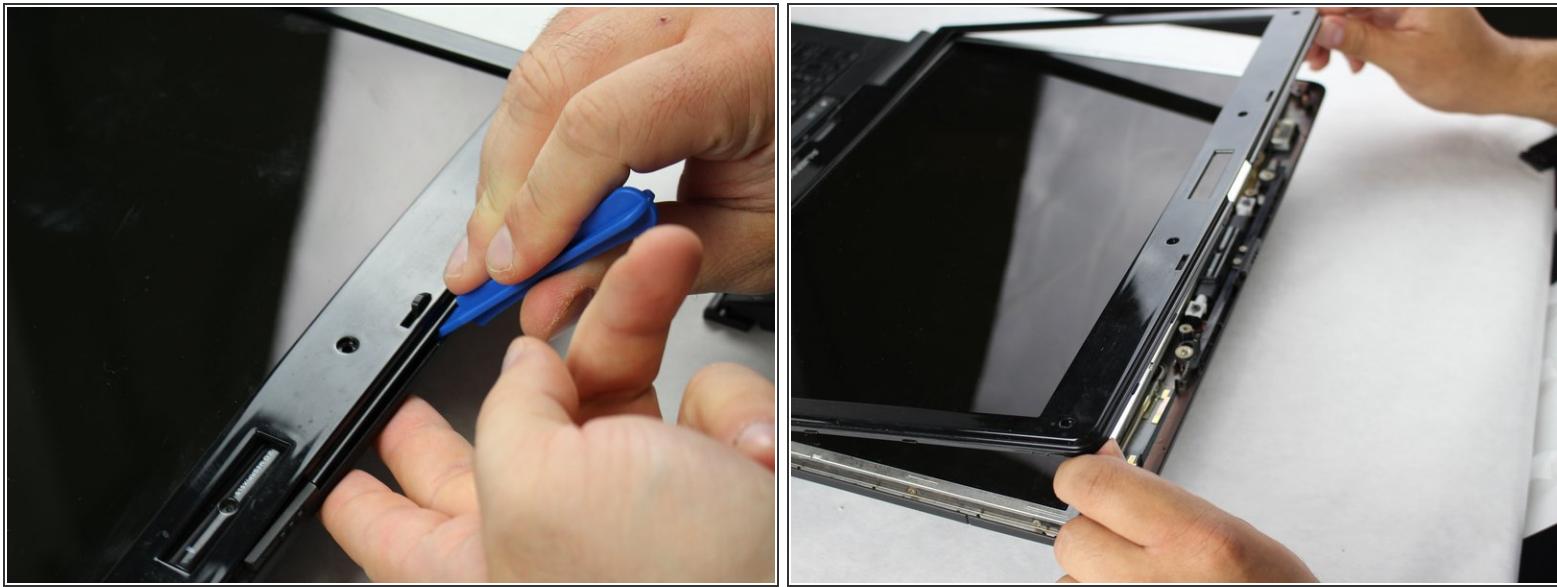

- Insert the plastic opening tool and gently slide it around the edge of the screen to lift the face of the screen away from its base.


! Be careful not to break the face of the screen when lifting it.

Step 4



- Remove the two 3 mm Phillips #1 screws using a Phillips #1 screwdriver.
- Pull the assembly grip away to remove it.
- Remove the two 5 mm screws using a Phillips #1 screwdriver.


Step 5

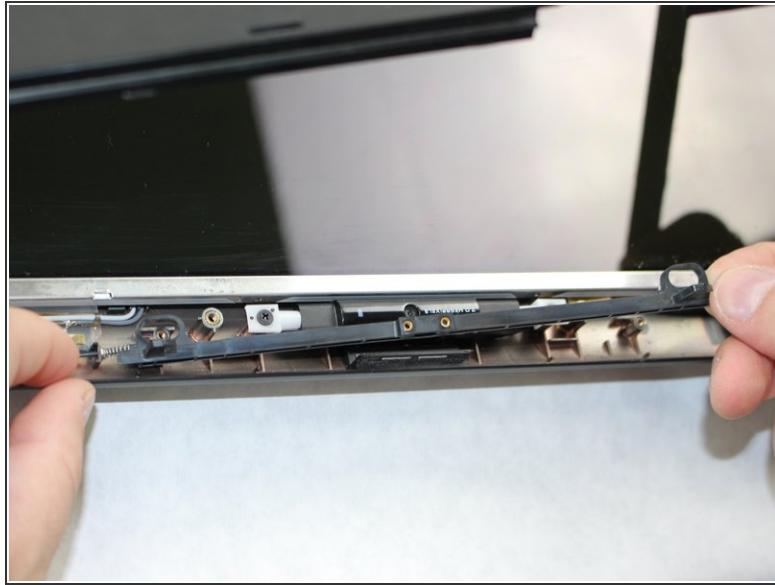

- Push in the assembly towards the spring.
- Gently lift the slider from the side opposite to the spring and pull the slider away from the spring.

⚠ The spring is loosely secured to the slider and may fall off and become lost when removing the slider.

Step 6

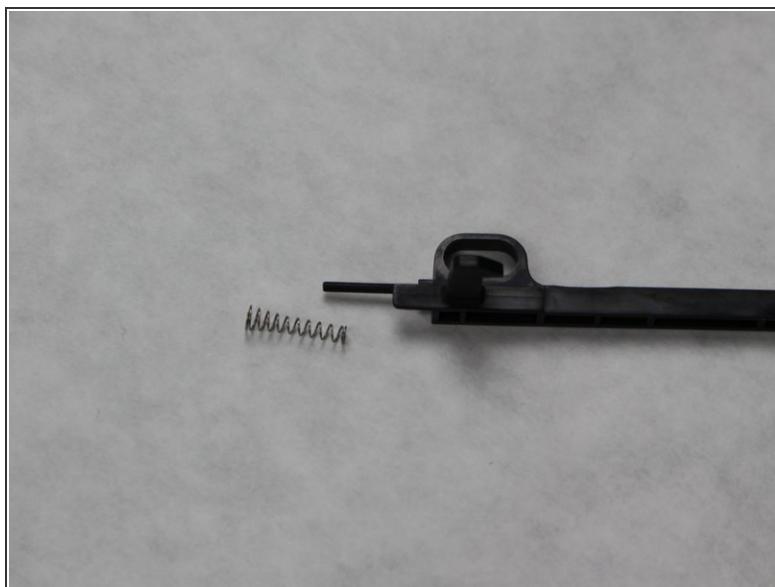

- If the spring is defective, slide it off the end of the assembly and replace it.

This document was generated on 2019-12-14 09:59:39 PM (MST).

To reassemble your device, follow these instructions in reverse order.