



Alienware M17x P01E Battery Replacement

This guide will help you replace your battery in your Alienware M17x P01E .

Written By: Jose



INTRODUCTION

Is your laptop not charging or holding a charge? Consider using this guide to replace the battery in your device.

Step 1 — Battery



 Please power off the computer and deplete the battery before attempting the following step.

Step 2



- Press down on the battery latch and slide it to the left.
- Lift the battery out once it pops out.

To reassemble your device, follow these instructions in reverse order.