


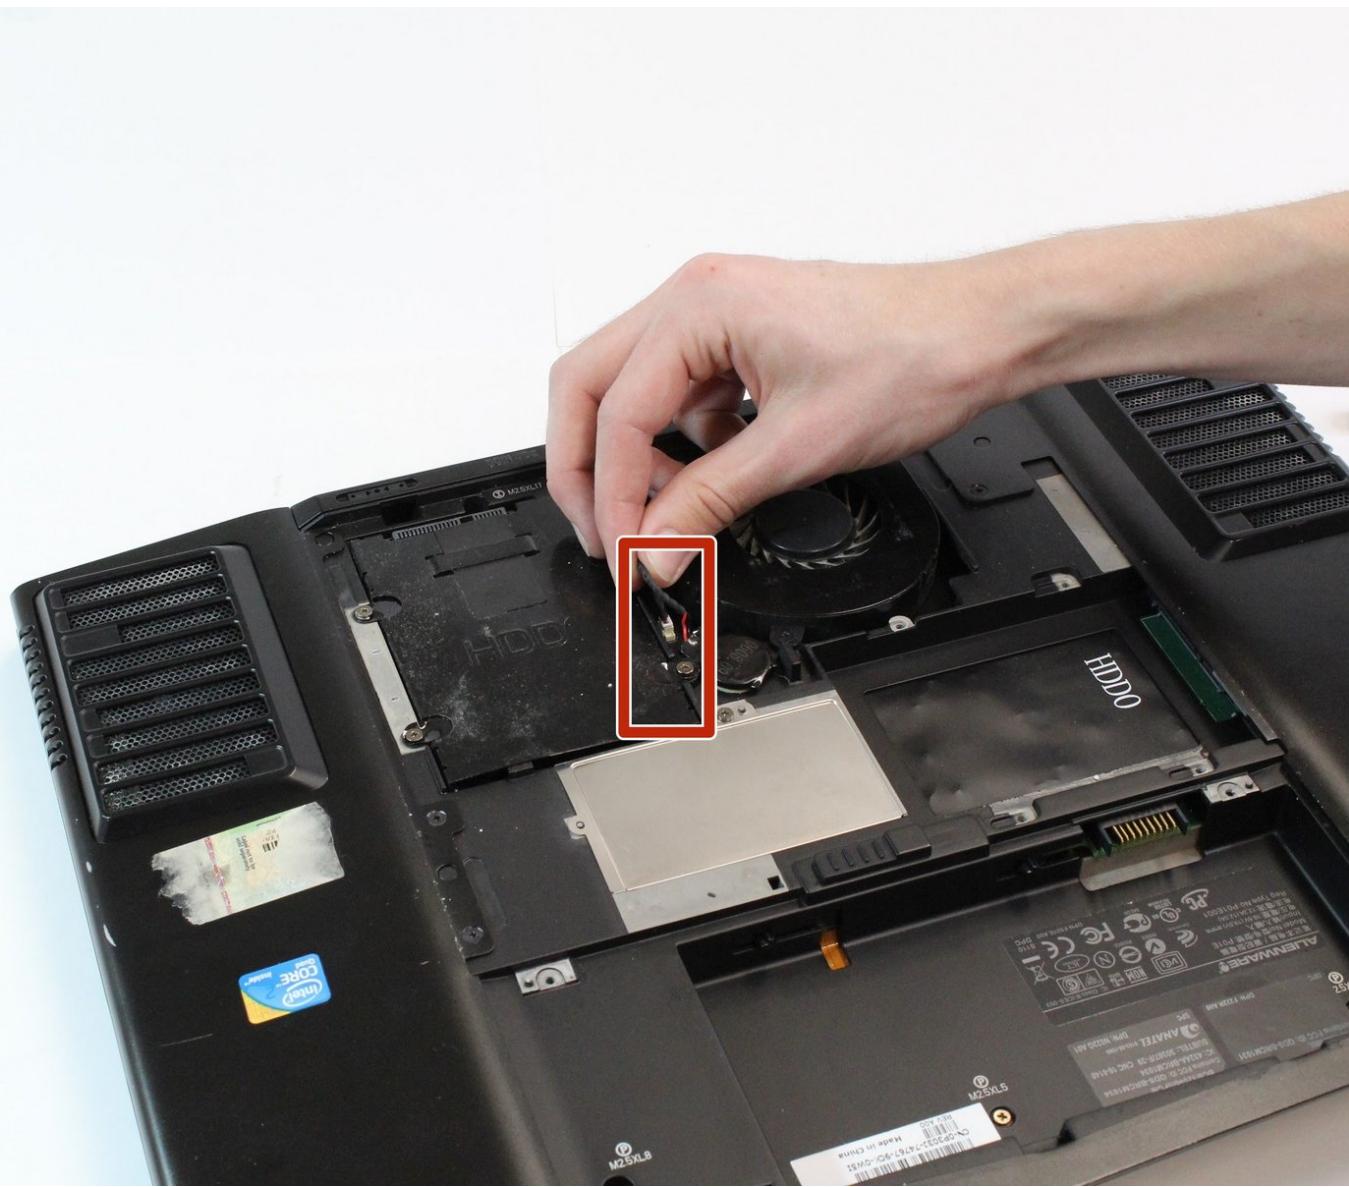

Alienware M17x P01E Coin Cell Battery Replacement

This guide will show you how to replace your coin cell battery in your Alienware M17x P01E.

Written By: Jose



INTRODUCTION

Is your computer heating up unexpectedly and not working properly? Consider using this guide to replace the coin cell battery in your laptop.

TOOLS:

- [Phillips #1 Screwdriver \(1\)](#)

Step 1 — Battery




 Please power off the computer and deplete the battery before attempting the following step.

Step 2




- Press down on the battery latch and slide it to the left.
- Lift the battery out once it pops out.

Step 3 — Compartment Door

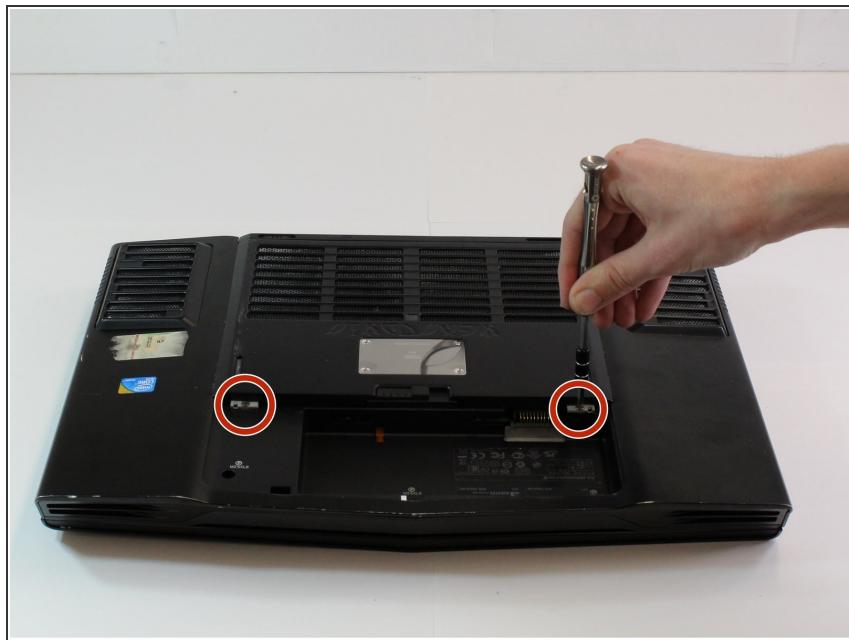

- Loosen the two silver Phillips #1 screws.
- *i* The screws are held to the compartment door by a washer and cannot be removed.


Step 4

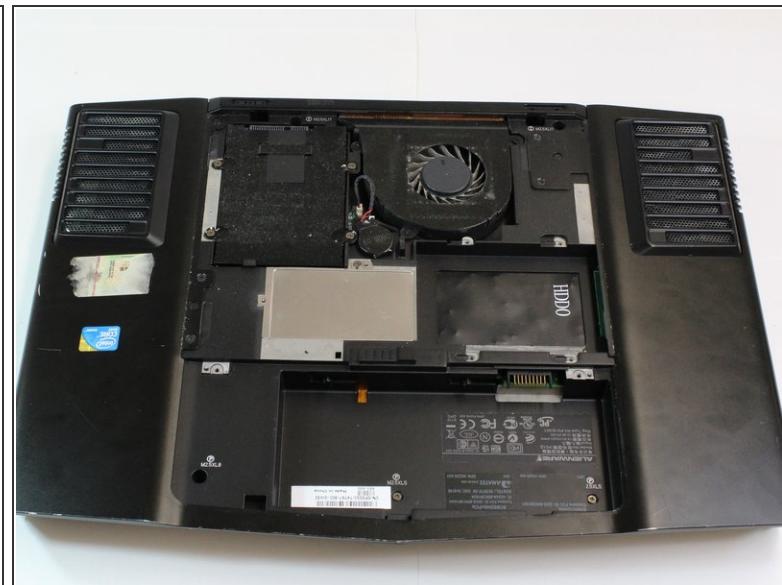

- Use your hand to gently lift and remove the compartment door.

Step 5 — Coin Cell Battery

- Gently pull on the coin cell battery cable to disconnect it from the laptop.

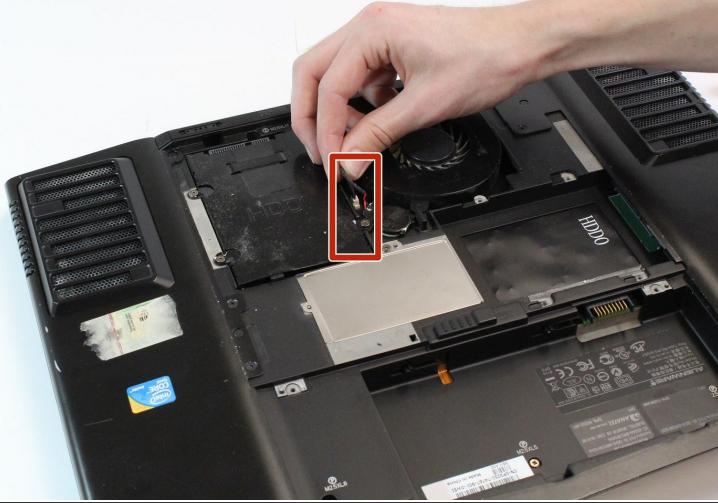

Step 6

- Pull on the battery to remove.



To reassemble your device, follow these instructions in reverse order.