



Alienware M18x Battery Replacement

This guide demonstrates how to remove and replace the battery in an Alienware M18x laptop.

Written By: Rachel Greenberg



INTRODUCTION

This guide demonstrates how to remove and replace the battery in an Alienware M18x laptop.

Step 1 — Battery



- Flip the laptop over and slide the battery release latch to the right.

Step 2



- Remove battery.

To reassemble your device, follow these instructions in reverse order.