



# Alienware P18G M14X R1 Back Cover Replacement

How to replace the Alienware P18G M14X R1 back cover.

Written By: Andonaq Grozdani



# INTRODUCTION

Prerequisite Only

## TOOLS:

- Phillips #1 Screwdriver (1)

## Step 1 — Back Cover



- Loosen the top left and top right 6.5mm PH1 screws that hold down the back cover.
- i* The screws will not be able to be removed from the back cover. They can only be loosened or tightened.

## Step 2



- Slide back cover forward using your thumbs.

## Step 3



- Lift up the cover and set aside exposing the internals of the computer.

To reassemble your device, follow these instructions in reverse order.