



Alienware P18G M14X R1 RAM Replacement

How to replace the RAM sticks in the Alienware P18G M14X R1.

Written By: Andonaq Grozdani



INTRODUCTION

In order to remove the RAM you first need to remove the battery.

TOOLS:

- Phillips #1 Screwdriver (1)

Step 1 — Back Cover



- Loosen the top left and top right 6.5mm PH1 screws that hold down the back cover.

(i) The screws will not be able to be removed from the back cover. They can only be loosened or tightened.

Step 2




- Slide back cover forward using your thumbs.

Step 3




- Lift up the cover and set aside exposing the internals of the computer.

Step 4 — RAM

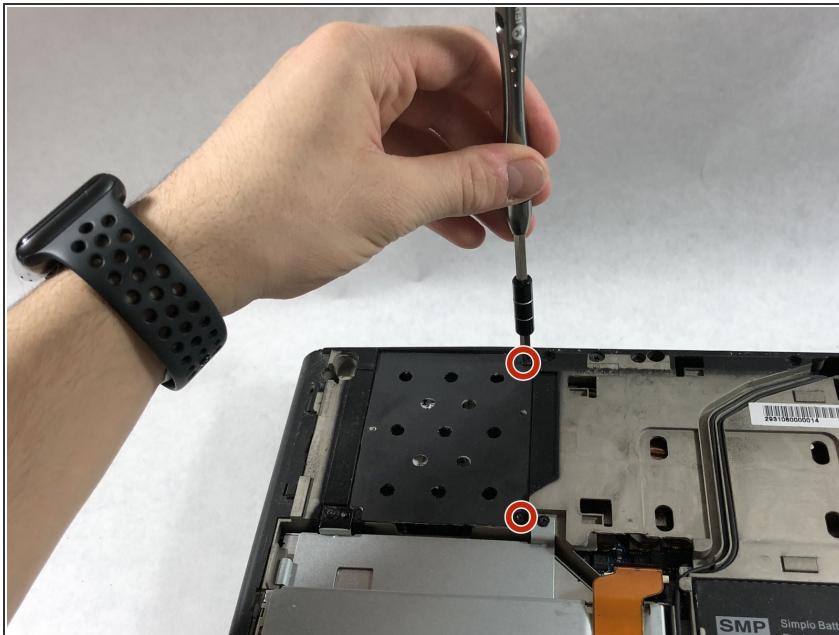

- Unscrew the two 6.35 mm using the PH1 screw driver.

Step 5

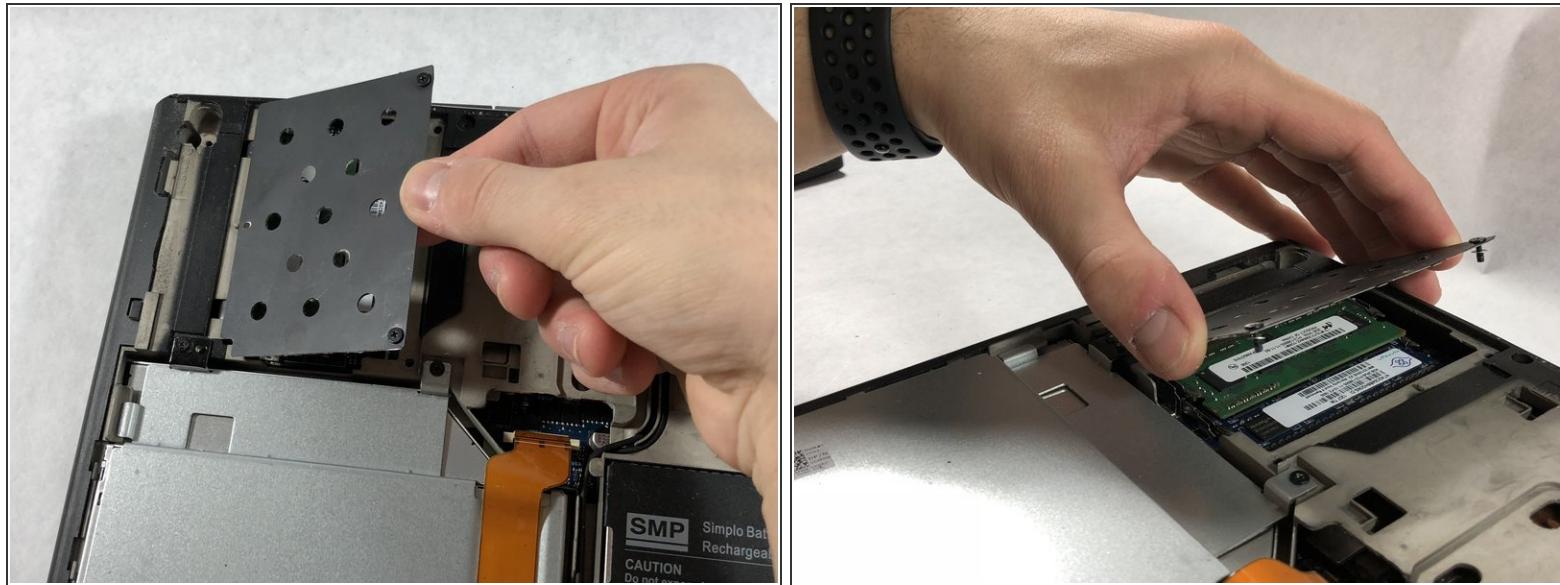

- Lift the plate and remove it to uncover the RAM sticks.

Step 6



- Push outward on the prongs that secure the RAM stick in the slots.
- After releasing the prongs the rams stick will rise up.


Step 7



⚠ Be very gentle in this step, making sure to not damage anything.


- Pull the RAM stick out of its housing.

Step 8

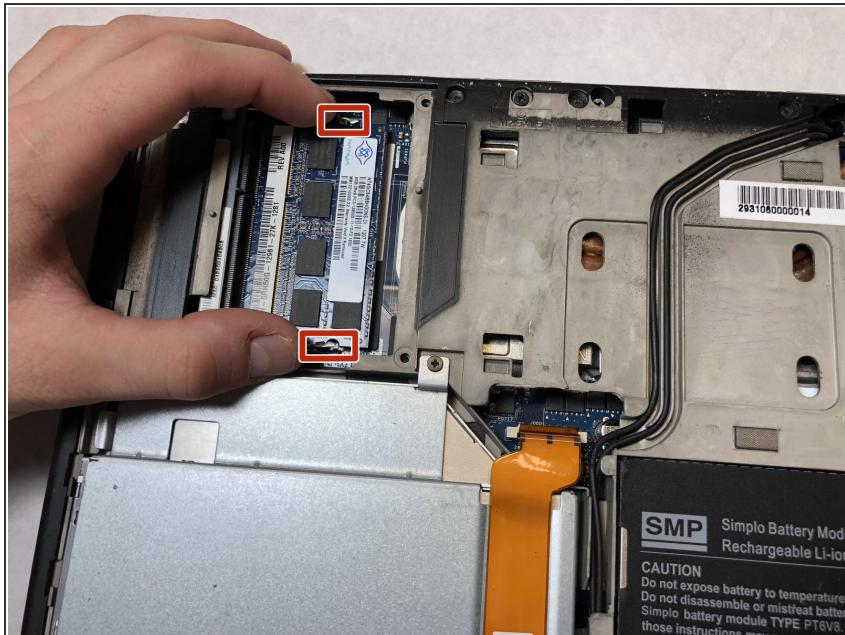

- Push outward on the prongs that secure the RAM stick in the slots.
- After releasing the prongs the rams stick will rise up.

Step 9

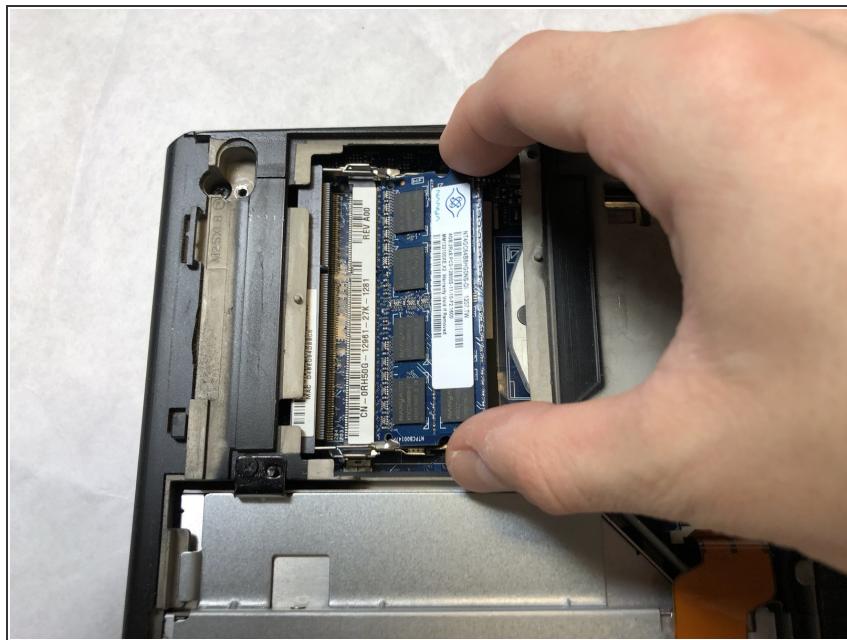

⚠ Be very gentle in this step, making sure to not damage anything.

- Pull the second ram stick out of its housing.

To reassemble your device, follow these instructions in reverse order.