



Altec Lansing BoomJacket 2 Disassembly

This guide will show you how to disassemble your BoomJacket 2.

Written By: Zach Braaten



INTRODUCTION

After completing this guide you will be ready to repair or replace any of the components inside your device.

TOOLS:

- **Phillips #1 Screwdriver (1)**
PH1
- **Tweezers (1)**
- **Metal Spudger (1)**

PARTS:

- **4mm x 12mm screw (6)**
Phillips Head
- **Rubber Stopper (6)**
A rubber plug that keeps the screw sealed

Step 1 — Altec Lansing BoomJacket 2 Disassembly



- Starting from any side, use your fingers to grab the black rubber sleeve and gently pull away from the speaker on both sides.

Step 2



- Using your fingers, grab the blue sleeve from one side and pull away from the unit.

Step 3



- At each of the marked pry spots, use the metal spudger to lift the speaker grill away from the case.

⚠️ Avoid using excessive force to prevent bending the grill.

Step 4




- Use the tweezers to remove the six rubber stoppers. There are four in the middle and two on the sides.

Step 5



- Use the PH1 Phillips screwdriver to remove the six 12mm screws that lie underneath each rubber stopper.

Step 6

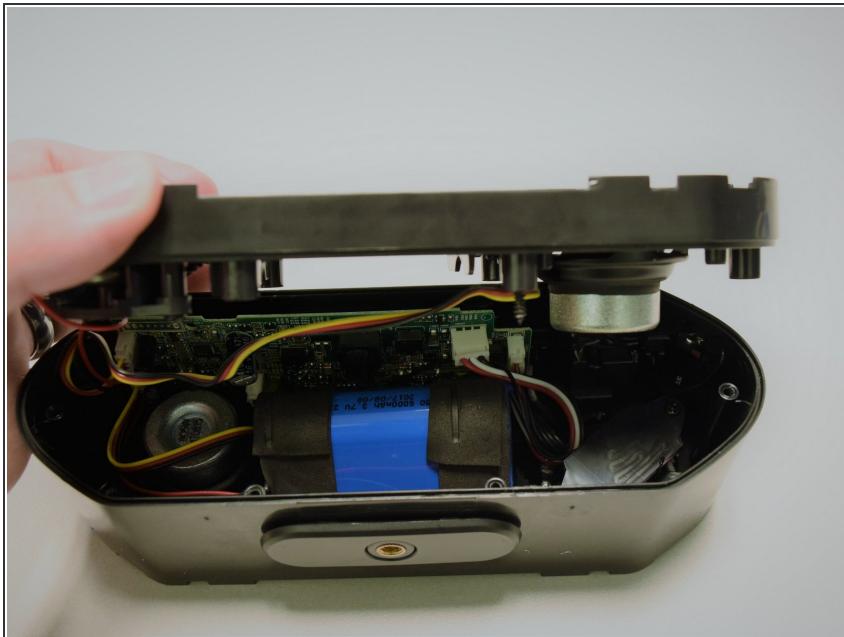

- Gently pull apart the front panel from the base of the speaker.

To reassemble your device, follow these instructions in reverse order.