



# Altec Lansing BoomJacket Speaker Replacement

This guide will give step by step information on how to replace the speaker in your Altec Lansing BoomJacket.

Written By: Ryan Byrnes



## INTRODUCTION

Are your speakers not producing the same amount of BOOM that they used to? Perhaps repairing your speakers is the way to go.

### TOOLS:

- Metal Spudger (1)
- Tweezers (1)
- Phillips #0 Screwdriver (1)
- Phillips #1 Screwdriver (1)

### PARTS:

- Rubber casing (1)
- Screws (16)
- Metal Backing (1)
- Metal Fronting (1)
- Speaker (1)
- Plugs (6)

## Step 1 — Speaker



- Using your hands, remove the pegs (4+4) from the front and back of the speaker.

## Step 2



- Remove the outer black rubber housing of the speaker.

## Step 3



- Remove the inner blue rubber housing from the speaker.

## Step 4



- Pull out the two black wire meshes using a metal spudger.

**⚠** Be careful not to damage the metal casing.

## Step 5




- Using tweezers remove the rubber stoppers (4 at the back + 2 at the front).

## Step 6



- Using the size PH1 screwdriver remove the screws (4 around each speaker).

## Step 7

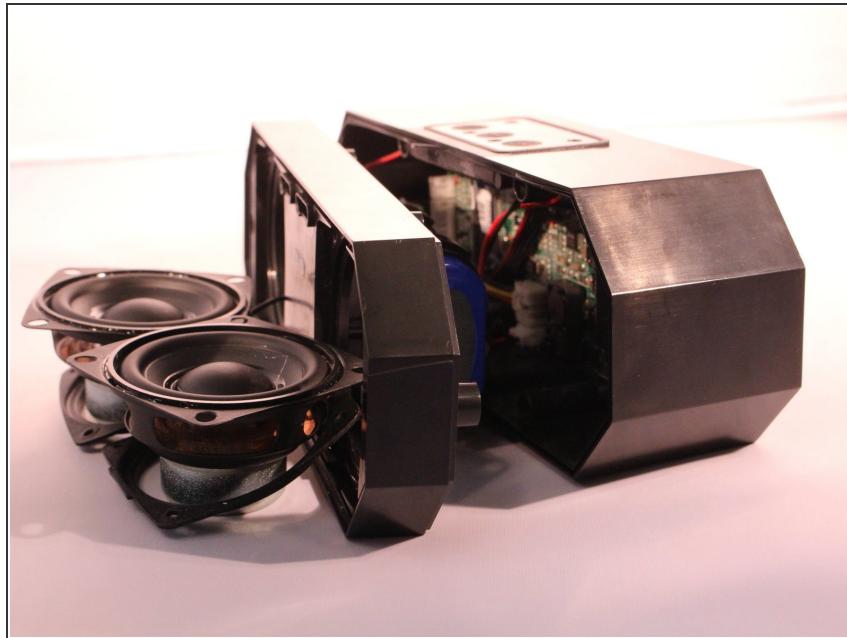

- Pull the case apart and you will be able to see all the components inside the speaker.

## Step 8



- Remove the speakers (not entirely because of the wiring) by gently pulling each speaker up.

To reassemble your device, follow these instructions in reverse order.