



Altec Lansing Mini Lifejacket 2 Speaker Replacement

This step-by-step guide will show you how to replace the speaker in your Altec Lansing Mini Lifejacket 2.

Written By: Stephen Albrecht




INTRODUCTION

If your Altec Lansing Mini Lifejacket 2's speaker is damaged or faulty, use the following step-by-step guide to replace it. This guide applies to both the speakers.

TOOLS:

- [Phillips #2 Screwdriver](#) (1)
- [Phillips #1 Screwdriver](#) (1)
- [Metal Spudger](#) (1)
- [Tweezers](#) (1)
- [Spudger](#) (1)

Step 1 — Back Panel

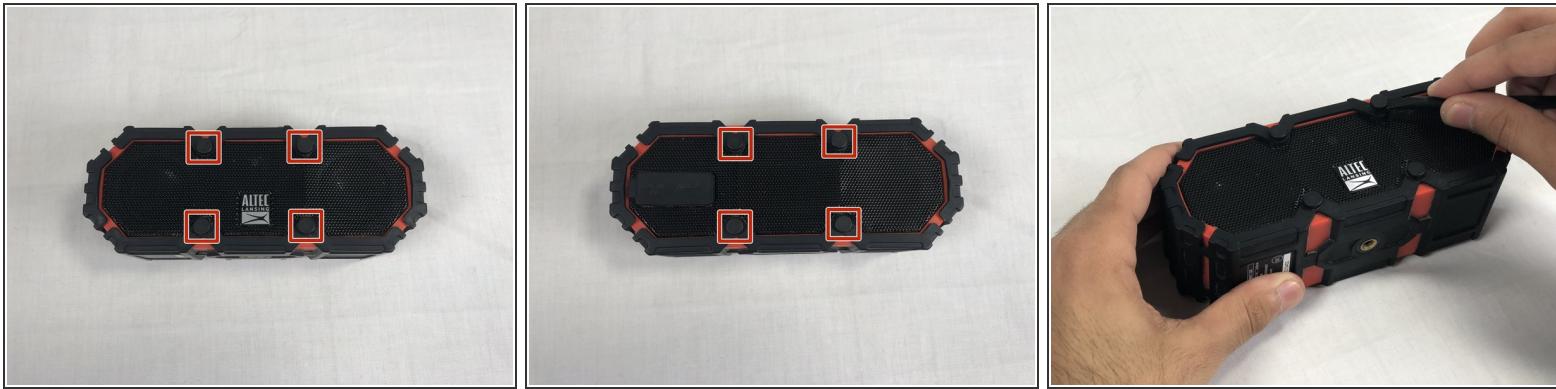

- Use the spudger to remove the eight black pins from the front and back of the wire screens.

Step 2



- Detach the eight secondary pins from the front and back of the wire mesh plates with a spudger.
- Removing the secondary pins from the rubber casing is optional.

Step 3




- Remove both black and orange layers from the speaker body.

Step 4



- Remove the single 7.8mm Phillips #2 screw from the mounting plate located under the device.
- Slide the mounting plate out to remove it.

Step 5

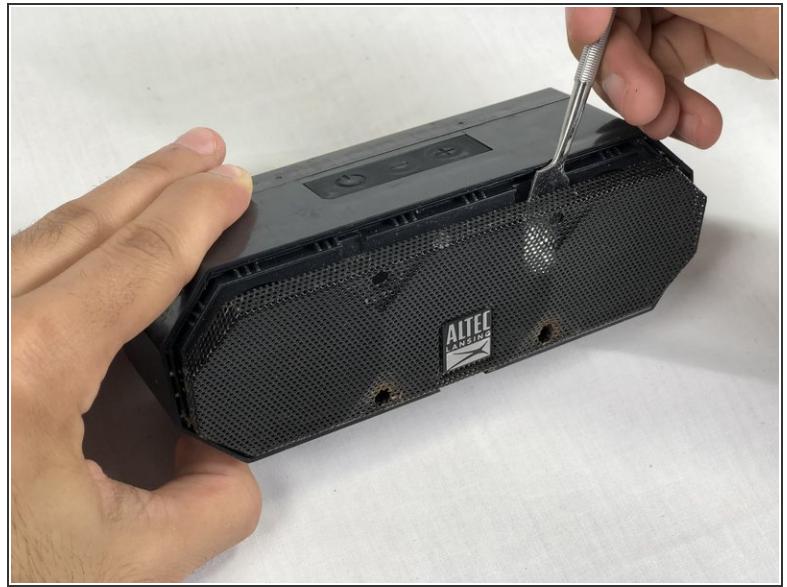

- Pry off the wire mesh on both sides using a metal spudger.

⚠ Be gentle to avoid bending the mesh.

Step 6



- Using tweezers, remove the four rubber stoppers in each corner of the rear panel.

Step 7




- Remove the four 13.7mm Phillips #1 screws located underneath the rubber stoppers.

Step 8




- Pull the case apart to access the interior components.

Step 9

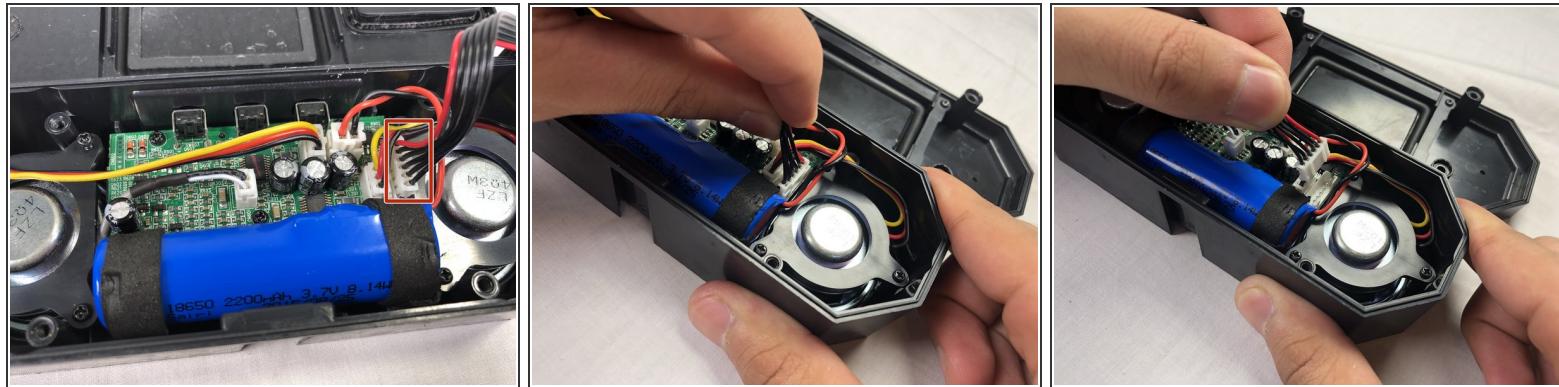


- To remove the back panel, gently pull out its wire harness.

Step 10 — Speaker

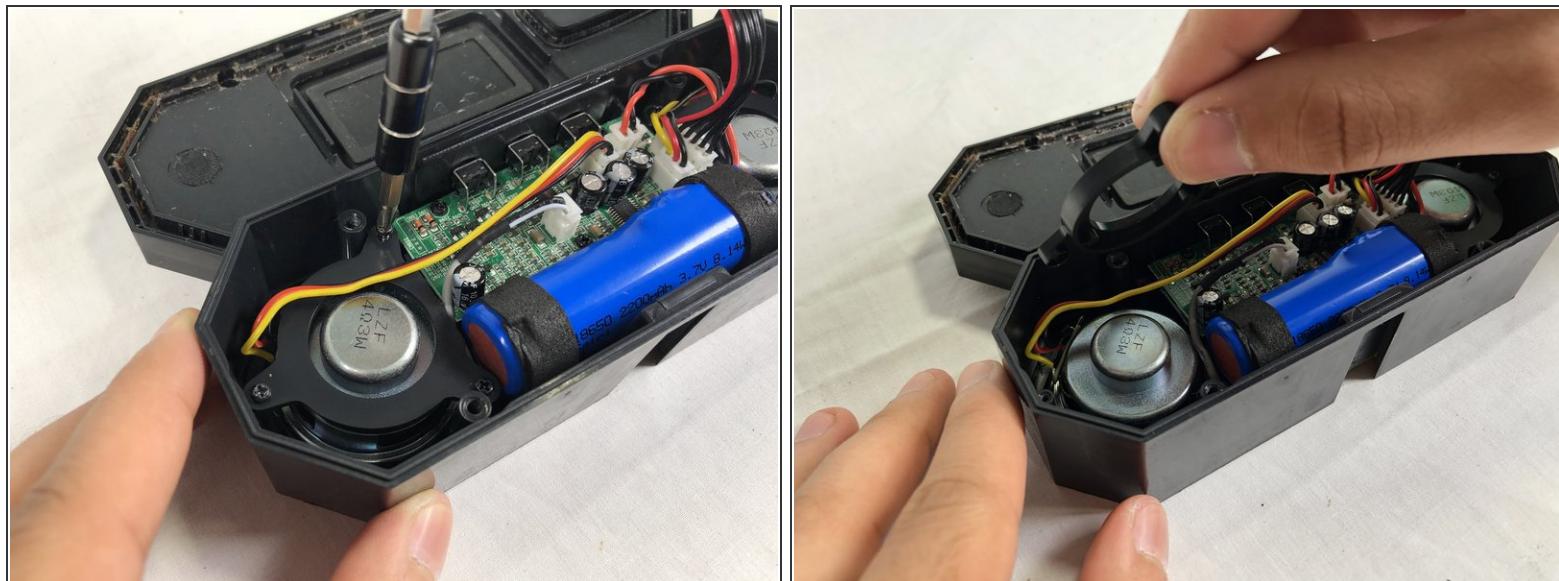


- Remove the three 9.3 mm Phillips #1 screws on the speaker cover.

Step 11

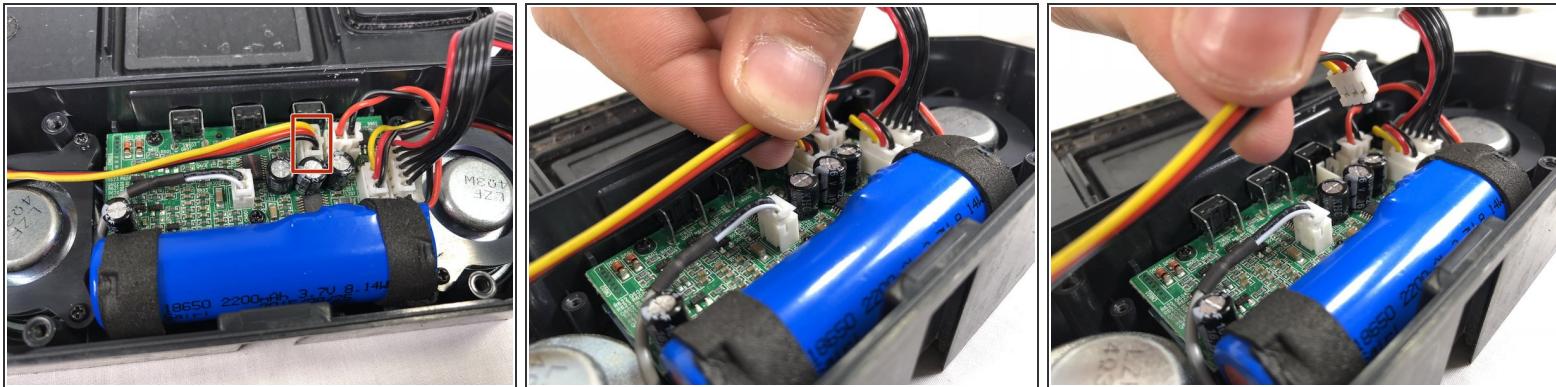

- To remove the speaker, gently pull out the its wire harness.

Step 12

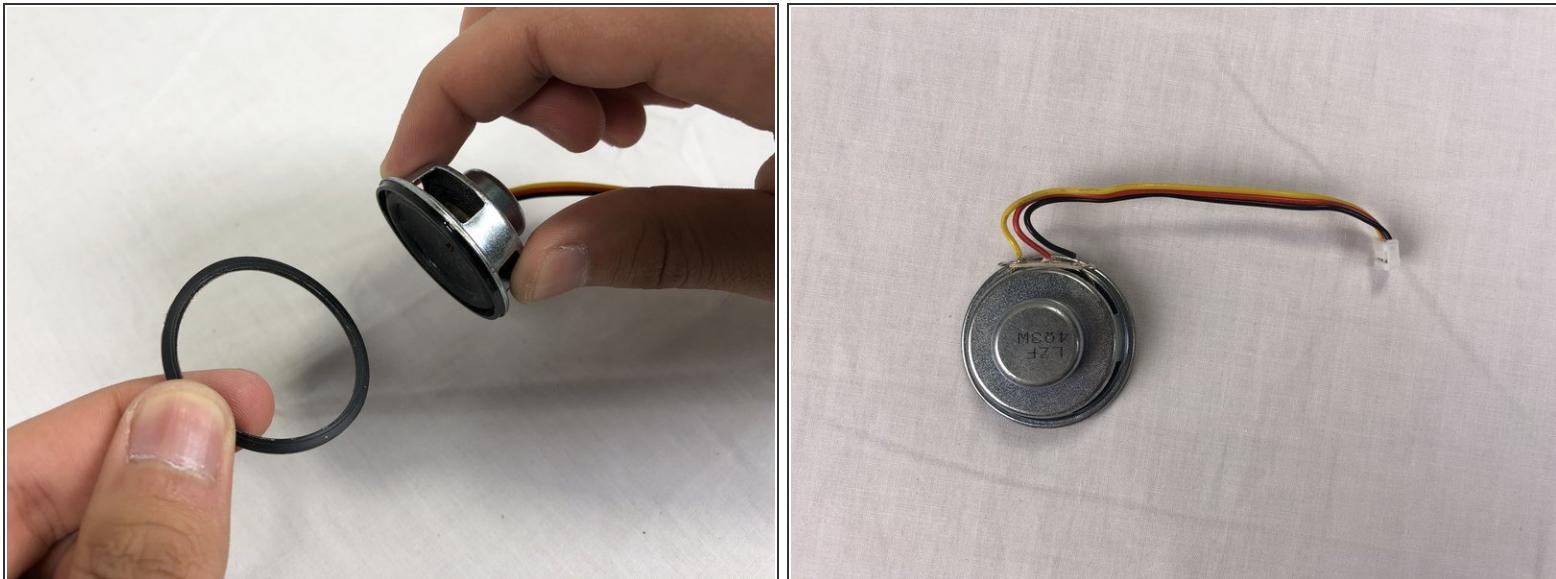

- Remove the rubber ring from the rim of the speaker.

(i) This ring helps keep water from entering the device. Be careful to position it correctly during reassembly.

To reassemble your device, follow these instructions in reverse order.