



Altec Lansing VersA Smart External Panel Removal

Basic removal of the external panels of the Altec Lansing VersA Smart to access the internal components for other replacements.

Written By: Rachael Hopp



This document was generated on 2020-02-25 11:20:07 AM (MST).

INTRODUCTION

If you need access to any of the internal components of your Altec Lansing VersA Smart speaker to replace components, start with this basic removal guide. This guide is a prerequisite to all other repair guides. In this guide, you will remove all external panels and coverings to expose the components within.

TOOLS:

- [4mm Nut Driver](#) (1)
- [iFixit Opening Tools](#) (1)
- [Phillips #1 Screwdriver](#) (1)
- [Magnetic Project Mat](#) (1)

Step 1 — External Panels




- Remove external rubber cover.

Step 2



- Use blue plastic opening tool to remove the external speaker face by placing it in the slight opening at the bottom.
 - Use a lever motion, push the tool down, lifting the speaker face.
 - Use fingers to grip and remove speaker face.
- Repeat on reverse side to remove the second speaker face.

Step 3

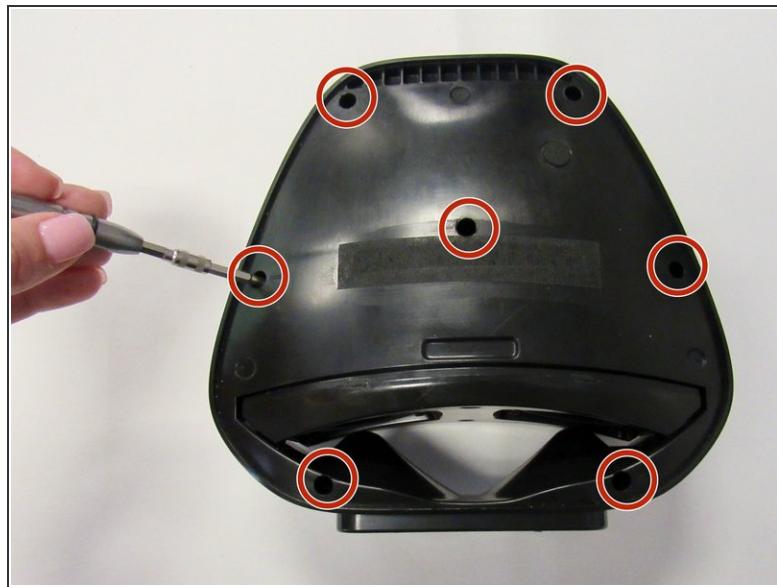

- Orient speaker so volume buttons are facing away from you, and Bluetooth and power buttons are on the left-hand side.
- Remove the seven 14mm screws using the Phillips #1 screwdriver.

Step 4



- Reorient speaker so Bluetooth and power buttons are now on the right-hand side.
- Separate the two panels along the crease.
 - Blue plastic opening tool may be needed to separate panels.
- Remove the panel with no buttons to expose internal area of the device.

 Motherboard and all internal components are under this panel.

