


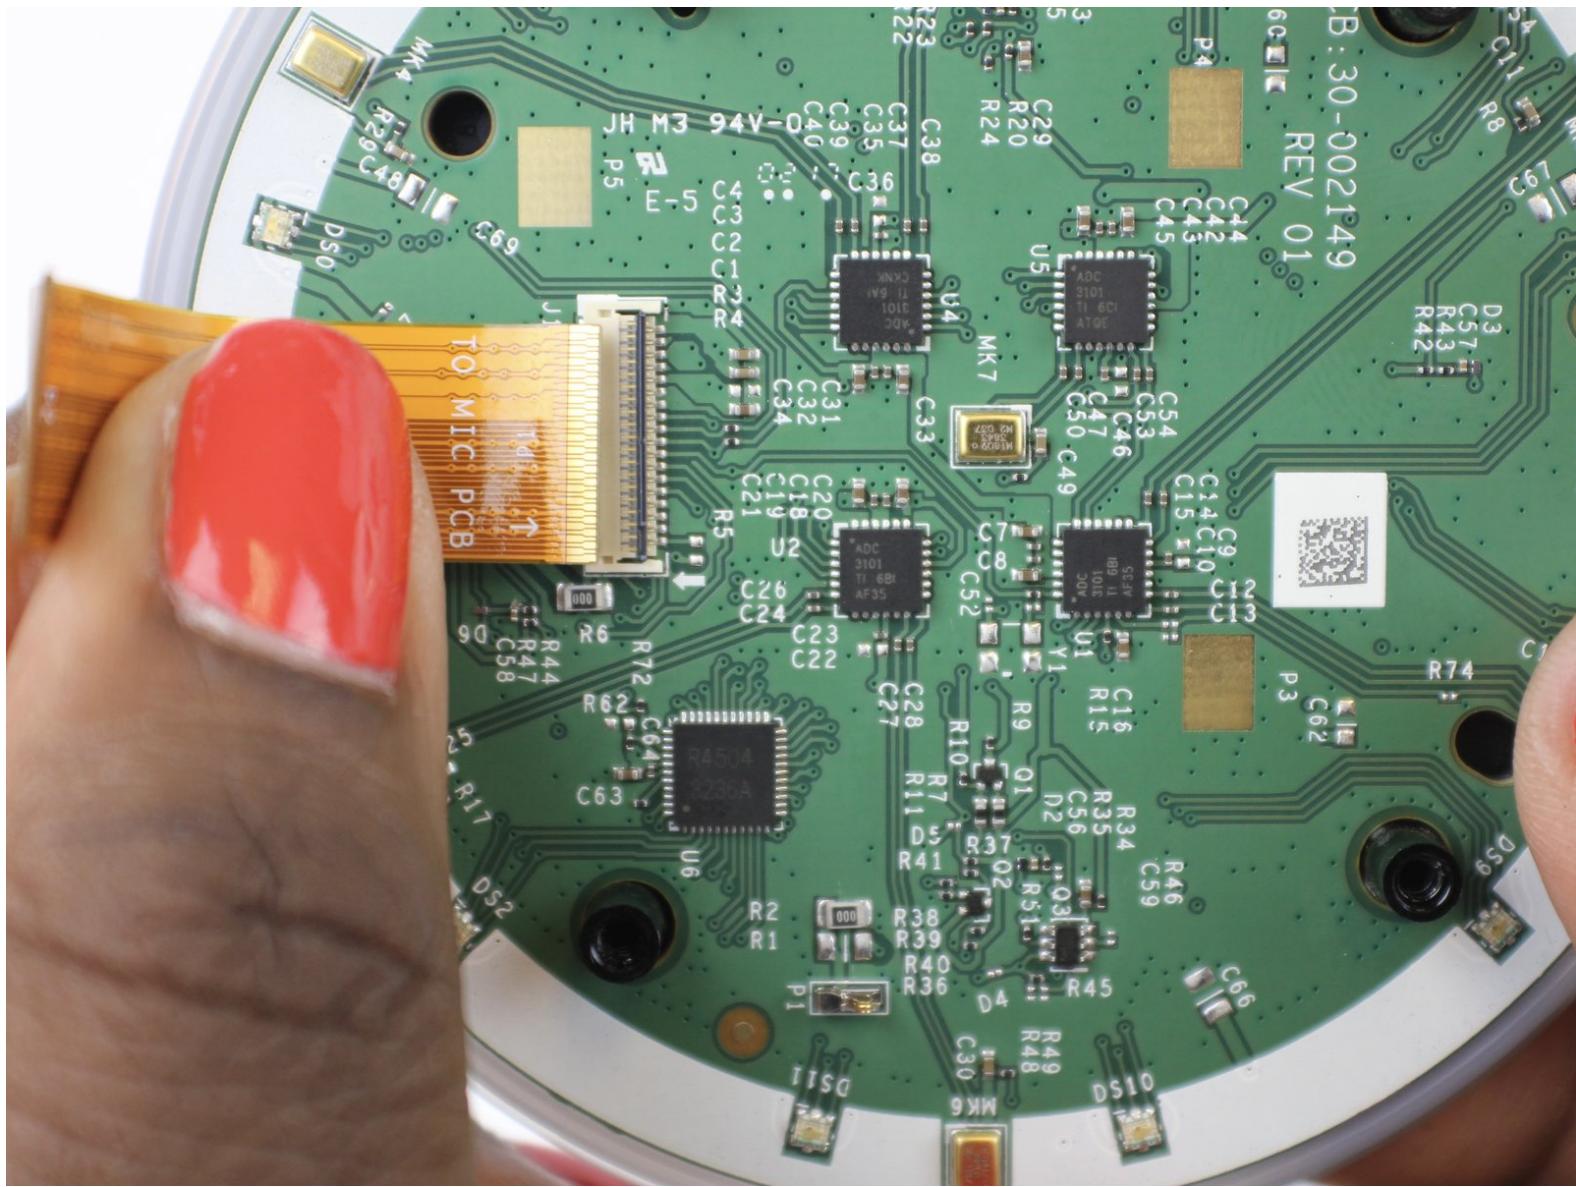

Amazon Echo Dot 2nd Generation Ribbon Cable Replacement

Replace the ribbon cable in the Amazon Echo Dot 2nd generation.

Written By: Errica Snelling



This document was generated on 2019-09-19 05:45:36 AM (MST).

INTRODUCTION

Use this guide to replace the ribbon cable in the Amazon Echo Dot 2nd Generation.

TOOLS:

- [T8 Torx Screwdriver](#) (1)
- [Metal Spudger](#) (1)
- [iFixit Opening Tools](#) (1)

Step 1 — Ribbon Cable



- Power off and unplug the echo
- Using the plastic opening tool, peel off the rubber layer on the bottom of the echo

Step 2




- Use a T8 screwdriver bit to unscrew the 1.6mm four screws.
- Remove the black cylindrical base

Step 3




- Use the metal spudger to lift the ZIF connector
- Remove the ribbon cable from the slot

Step 4

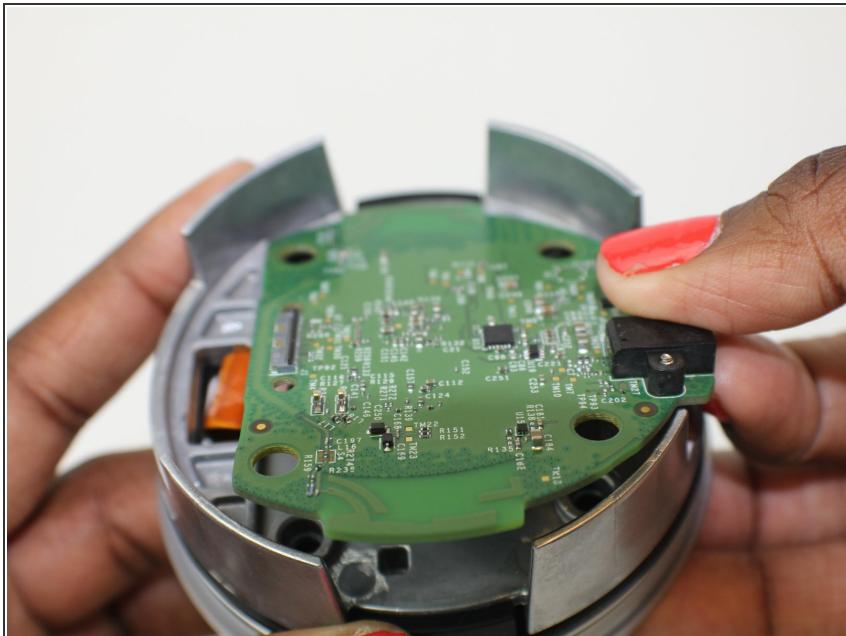


- Remove the motherboard

Step 5

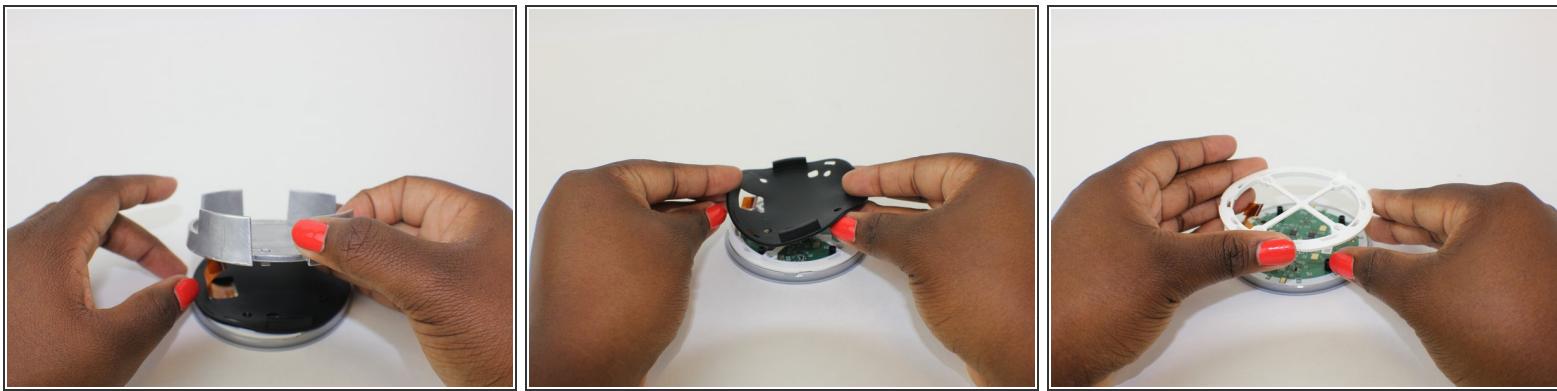

- Remove the silver divider
- Remove the black rubber divider
- Remove the plastic white frame

Step 6

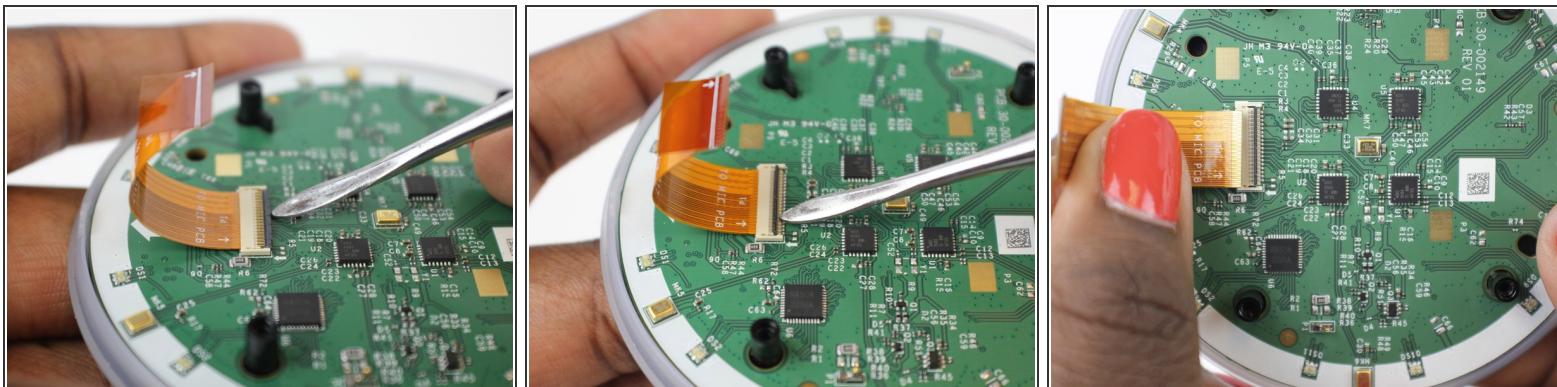

- Use the metal spudger to lift the ZIF connector
- Remove the ribbon cable from the slot on the LED/speaker board

To reassemble your device, follow these instructions in reverse order.