



Amazon Fire Game Controller Motherboard Replacement

Replacing the motherboard from the Amazon Fire Controller.

Written By: Andrew Klopfenstein



INTRODUCTION

This guide will show you how to properly remove the motherboard from an Amazon Fire game controller. Motherboard replacement may be necessary when controller inputs are incorrect or no longer working.

TOOLS:

- Triangle 2 Screwdriver (1)
- JIS #1 (1)
- iFixit Opening Tools (1)

Step 1 — Motherboard




- Use a Triangle #2 screwdriver to remove the six 10 mm screws from the back of the controller.

Step 2




- Pry the two shell pieces from one another from the top orientation with a plastic opening tool.
(i) The weights will fall out.

Step 3

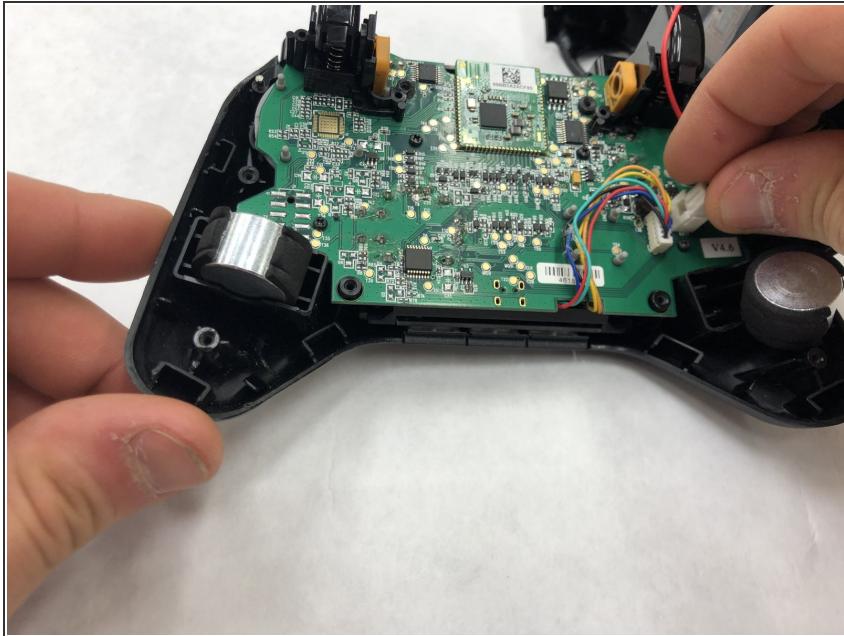

- Disconnect the battery terminal wires and the play, pause, and stop wires from the motherboard.

Step 4

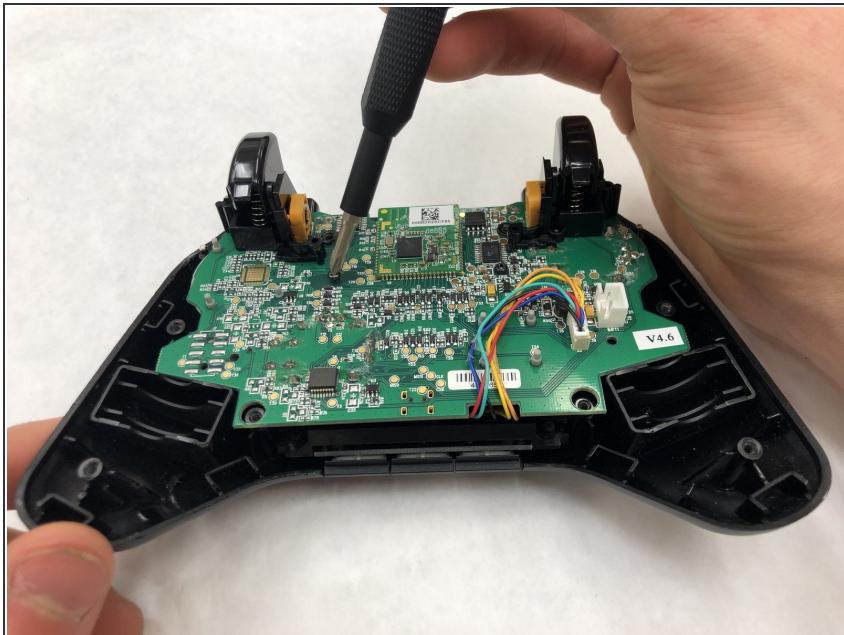

- Use a J1 screwdriver to unscrew the four 7 mm screws from the motherboard.

Step 5



- Lift the motherboard out of the controller casing.

To reassemble your device, follow these instructions in reverse order.