



Amazon Fire HD 7 (4th Generation) Display Replacement

Replace the LCD display screen to revitalize your display.

Written By: Omir Rosado



INTRODUCTION

In this guide, we outline how to properly disassemble this device and replace the LCD display screen.

TOOLS:

- [Tweezers](#) (1)
- [T5 Torx Screwdriver](#) (1)
- [Heavy-Duty Spudger](#) (1)
- [iFixit Opening Tools](#) (1)

Step 1 — Motherboard



- Insert the plastic opening tool behind the rear case to free the clips holding the case together.
- Work your way around the device to free all the clips.

Step 2



- Once all clips have been released, the back case can be pulled free to reveal the inside of the device.

Step 3




- Remove the (9) silver screws located around the motherboard with the T5 torx screwdriver.

Step 4




- Remove the (6) black screws located around the battery and the speaker with the T5 torx screwdriver
- Make your way around the battery and speaker to remove all of them.

Step 5

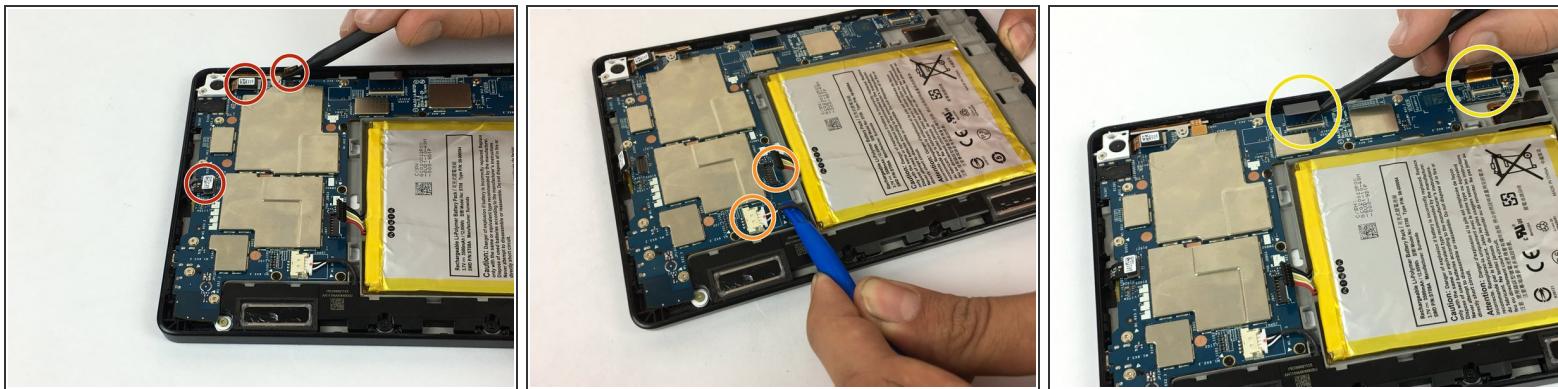


- Carefully unplug the 3 wire connections by placing a plastic spudger under the connections and lifting up.
- Disconnect the battery and speaker connections by placing the round handle spudger under the wires and lifting up and out.
- Disconnect the display connections from the motherboard by using the plastic spudger to lift the clamp holding the ribbon cable. Then, using the tweezers, grab the ribbon wire and pull away from the motherboard.

Step 6

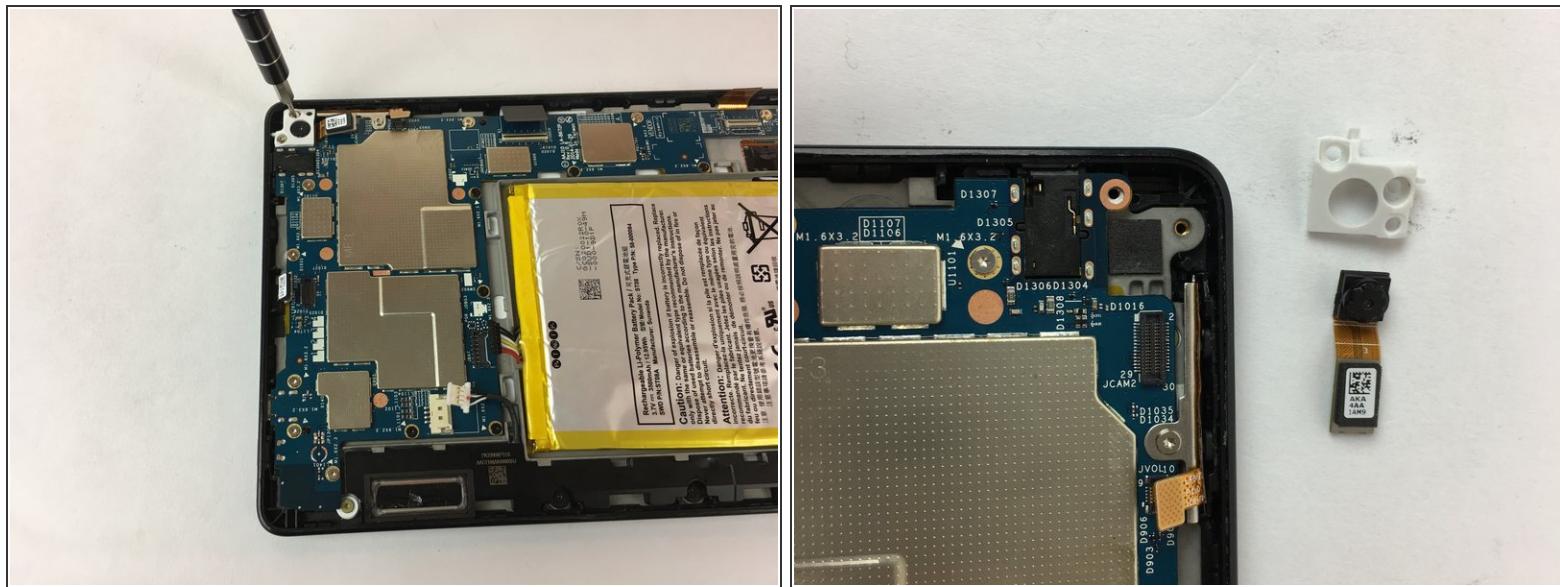

- Remove the two screws holding the rear camera in place using the T5 screwdriver.
- ⚠ The camera lens is sensitive. Be careful when removing and handling camera.
- Once freed from the screws, gently lift and remove camera.

Step 7

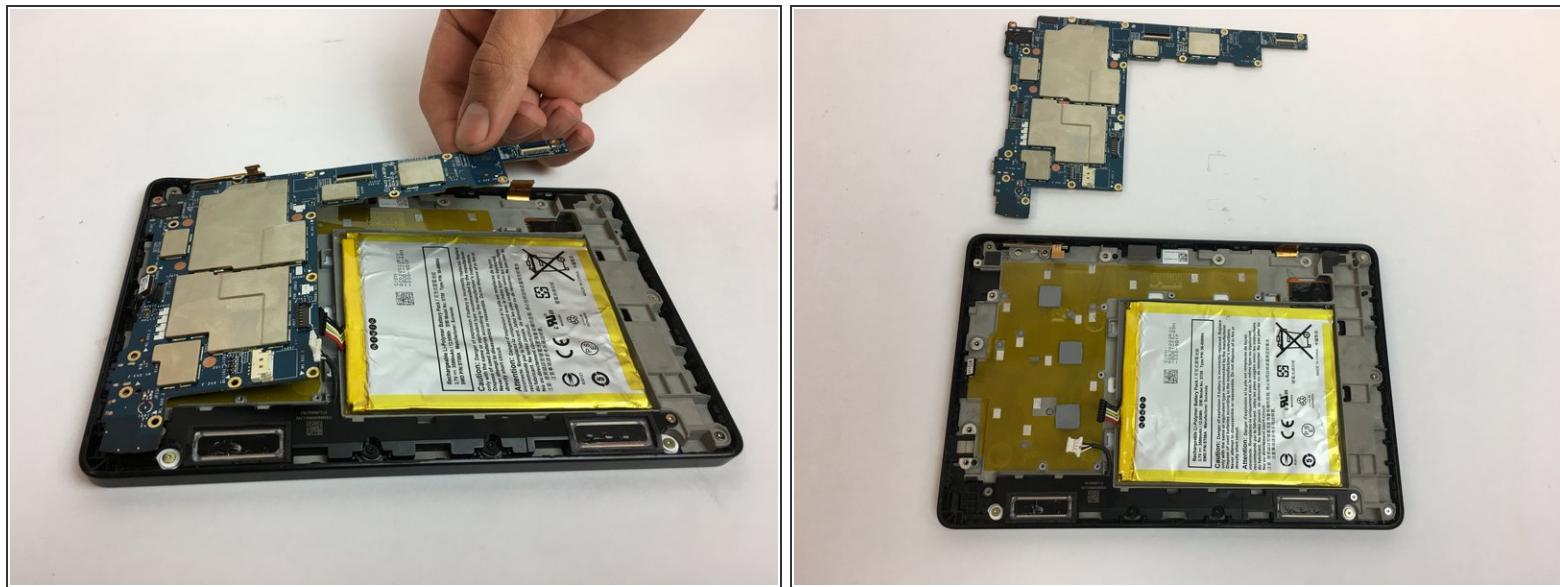

- Now the motherboard is free to be removed.
- Lift the motherboard up to remove like it is shown in the picture.

Step 8 — Display




- Following the bottom edge of the device, remove the (3) T5 hex silver screws with the T5 torx screwdriver.

Step 9



- The motherboard chassis can now be removed to reveal the display screen.
- Remove the volume button components.

Step 10

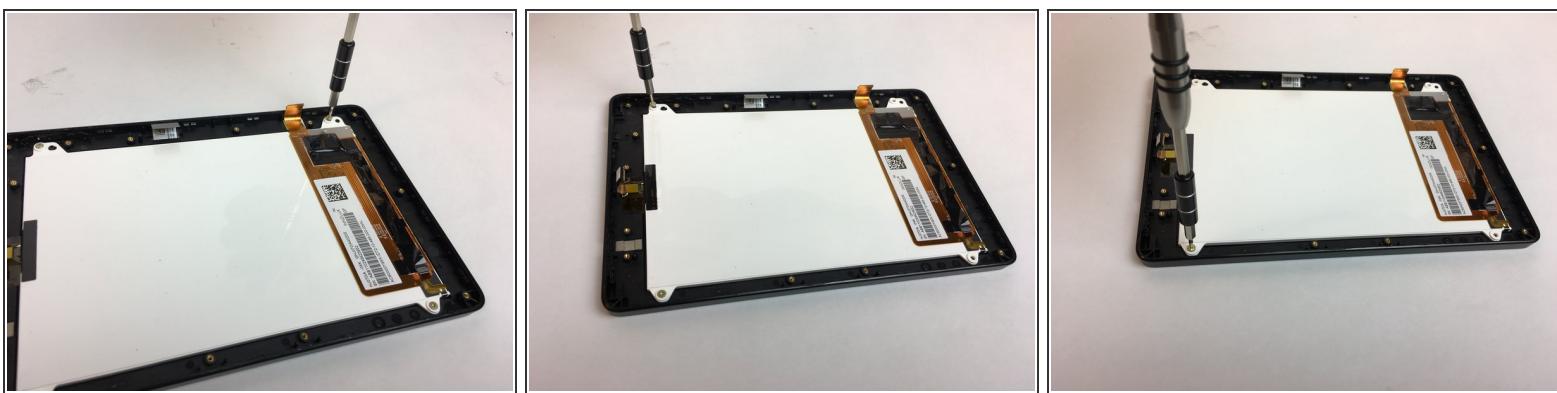

- Remove the (4) T5 hex silver screws in the corners of the display screen using the T5 torx screwdriver.

Step 11



- The LCD display screen may now be removed and replaced.