



Amazon Fire HD 7 (4th Generation) Motherboard Replacement

Replace the motherboard.

Written By: Omir Rosado



INTRODUCTION

Use this guide to replace the motherboard in your Amazon Fire HD7 (4th Generation).

TOOLS:

- [T5 Torx Screwdriver](#) (1)
- [iFixit Opening Tools](#) (1)
- [Heavy-Duty Spudger](#) (1)

Step 1 — Motherboard



- Insert the plastic opening tool behind the rear case to free the clips holding the case together.
- Work your way around the device to free all the clips.

Step 2



- Once all clips have been released, the back case can be pulled free to reveal the inside of the device.

Step 3



- Remove the (9) silver screws located around the motherboard with the T5 torx screwdriver.

Step 4




- Remove the (6) black screws located around the battery and the speaker with the T5 torx screwdriver
- Make your way around the battery and speaker to remove all of them.

Step 5




- Carefully unplug the 3 wire connections by placing a plastic spudger under the connections and lifting up.
- Disconnect the battery and speaker connections by placing the round handle spudger under the wires and lifting up and out.
- Disconnect the display connections from the motherboard by using the plastic spudger to lift the clamp holding the ribbon cable. Then, using the tweezers, grab the ribbon wire and pull away from the motherboard.

Step 6

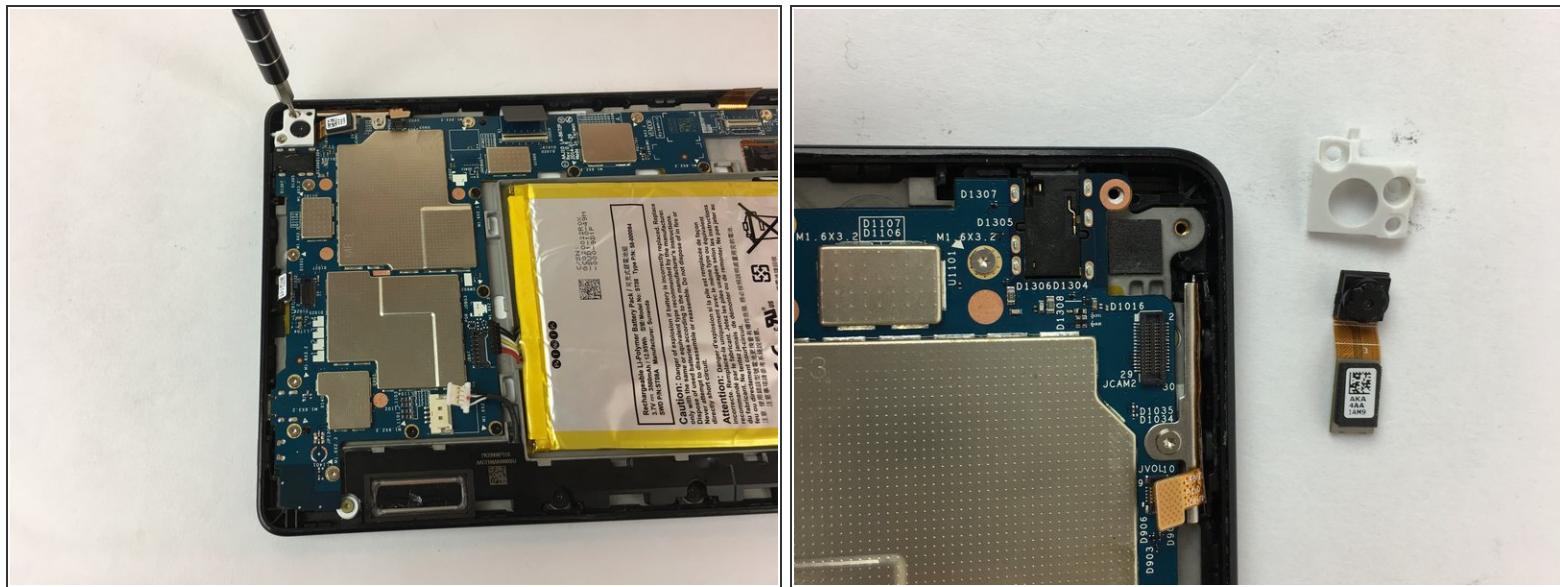

- Remove the two screws holding the rear camera in place using the T5 screwdriver.
- ⚠ The camera lens is sensitive. Be careful when removing and handling camera.
- Once freed from the screws, gently lift and remove camera.

Step 7

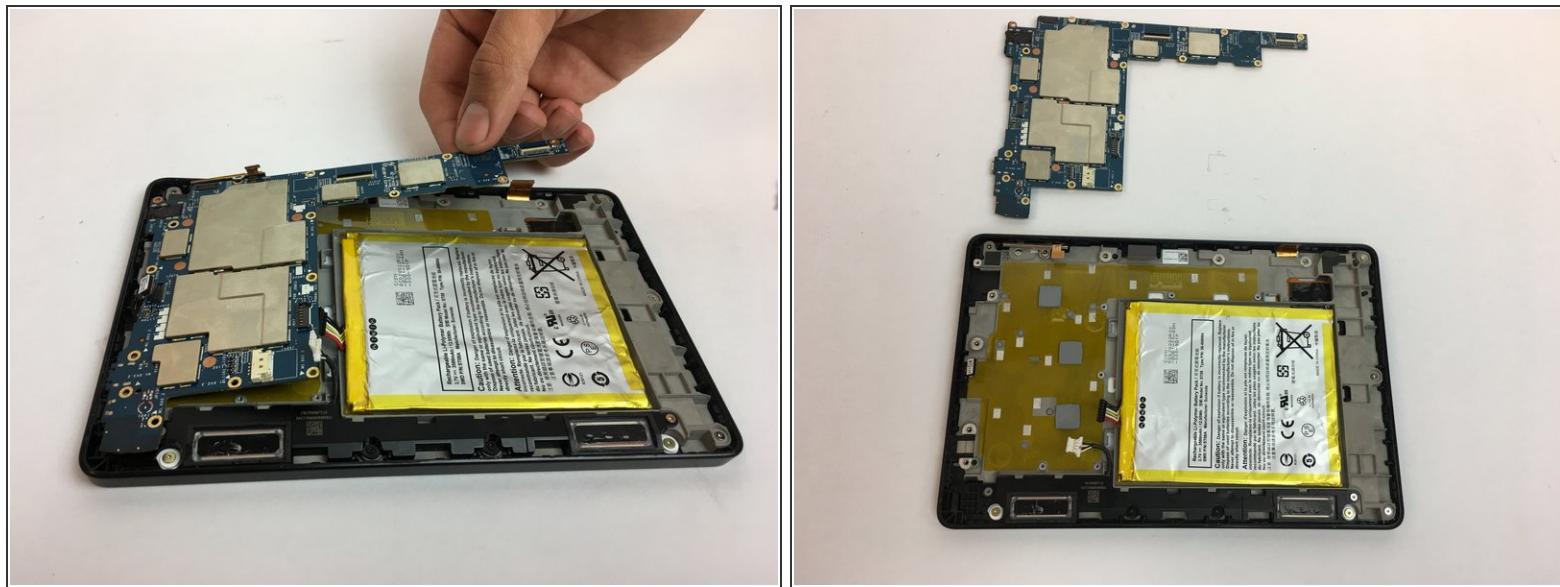

- Now the motherboard is free to be removed.
- Lift the motherboard up to remove like it is shown in the picture.

To reassemble your device, follow these instructions in reverse order.