



# Amazon Fire HD 8 Screen Replacement

If your touch screen is damaged, this guide will help you replace your screen.

Written By: Dan Shimkus



## INTRODUCTION

In this guide, we will show you how to open the device and replace the screen. Before you start, make sure your device is powered off.

### **TOOLS:**

- [Heat Gun](#) (1)
- [iFixit Opening Tools](#) (1)
- [Tweezers](#) (1)
- [Heavy-Duty Spudger](#) (1)

## Step 1 — Screen



- Heat the edges of the screen with a heat gun on the lowest setting by using sweeping motions from about 8-10 inches away.

 Make sure you use sweeping motions with the heat gun, instead of hovering over one area.

## Step 2



- After 1-2 minutes, use a plastic opening tool to pry the screen loose. Start at the top right corner and gently pry the screen from the device.

 Be careful not to bend the screen by pushing it too far from the rest of the device.


## Step 3



- Slide a plastic opening tool and spudger along the underside of the screen using enough force to peel the screen and the adhesive strip from the other half of the device.

 Be mindful of the orange cable connecting the screen to the mid-bottom of the device.

## Step 4

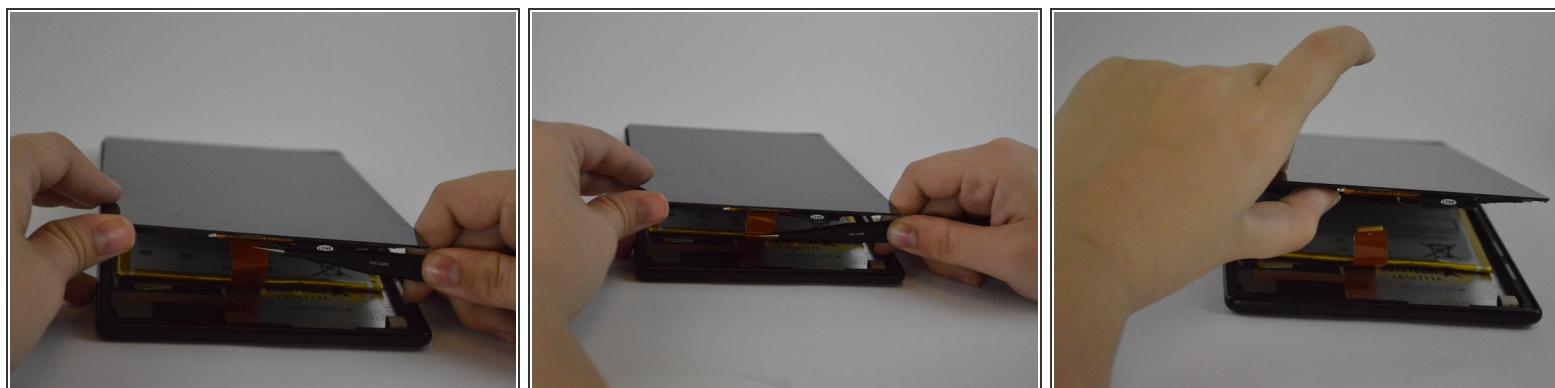

- To remove the screen from the device, use tweezers to gently pull the orange cable from its connection to the screen.

To reassemble your device, follow these instructions in reverse order.