



Amazon Fire Phone Display Replacement

Remove the display screen for the Amazon Fire Phone.

Written By: Lissandra Ilcyn



INTRODUCTION




Remove the display screen in order to fix a broken screen.

TOOLS:


- [Anti-Static Project Tray](#) (1)
 - [iFixit Opening Picks set of 6](#) (1)
 - [Metal Spudger](#) (1)
 - [iFixit Opening Tools](#) (1)
 - [Suction Handle](#) (1)
 - [T3 Torx Screwdriver](#) (1)
-

Step 1 — Battery




-  If the display is damaged use clear packing tape to contain any glass shards.
-  Make sure the entire surface of the display is covered with tape.
-  Wear safety glasses to protect your eyes.

Step 2

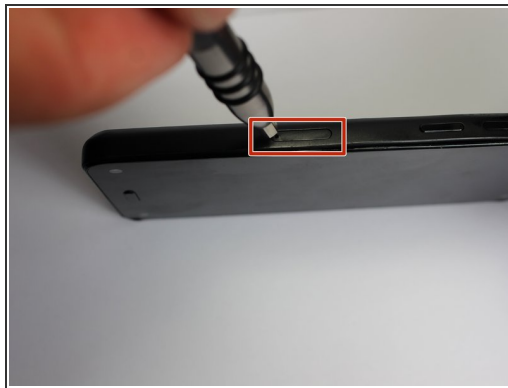


- Power off your phone.
- Remove the SIM card from the left side of the phone by pressing the small hole and allowing it to eject using the 0.8 screwdriver head.
- Remove the two 4mm screws on the bottom of the phone using the Torx T3 screwdriver.

Step 3

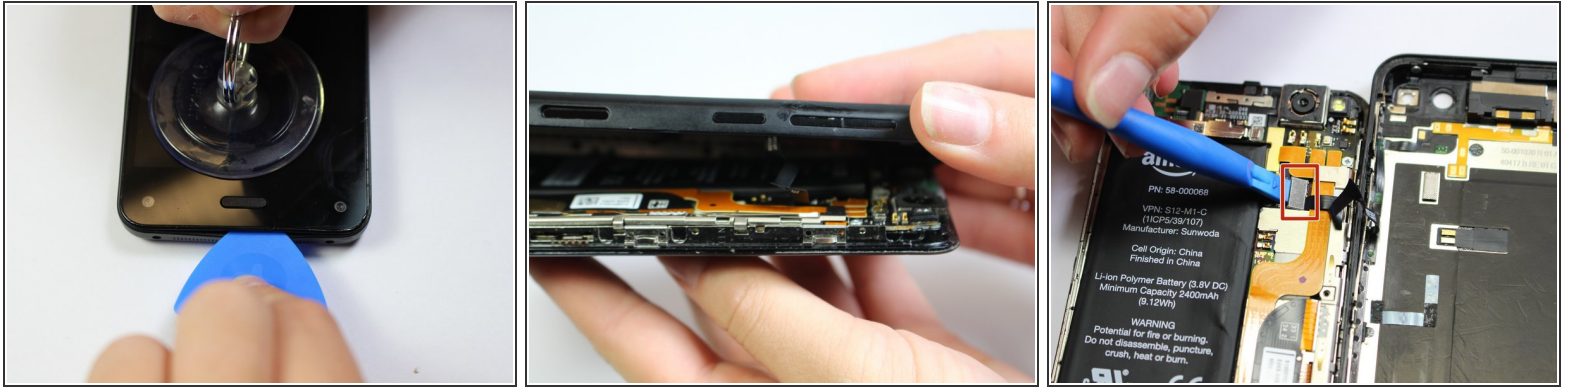


- Press the small suction cup just above the home button.
- While lifting up on the suction cup insert an opening pick into the crevice between the screen and back casing to pry the screen off carefully.
- ⚠ Carefully separate the two halves to avoid tearing the volume rocker ribbon cable.
- Using the opening tool, disconnect the volume rocker ribbon cable from the base of the phone freeing the two halves of the phone.

Step 4

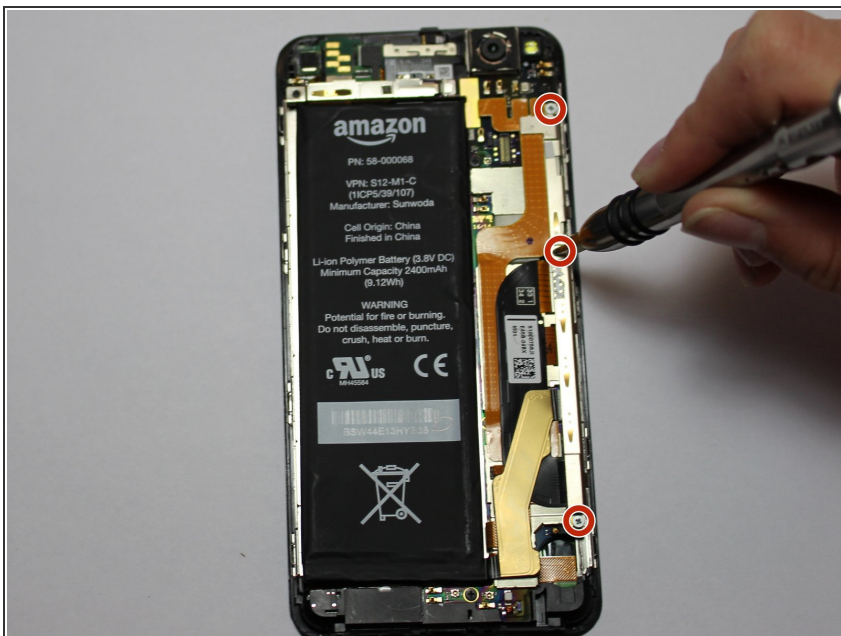



- Using the J000 screwdriver head, remove the three 3mm screws holding the bracket in place.
- Remove the silver bracket that was held into place by the three screws just removed.

Step 5

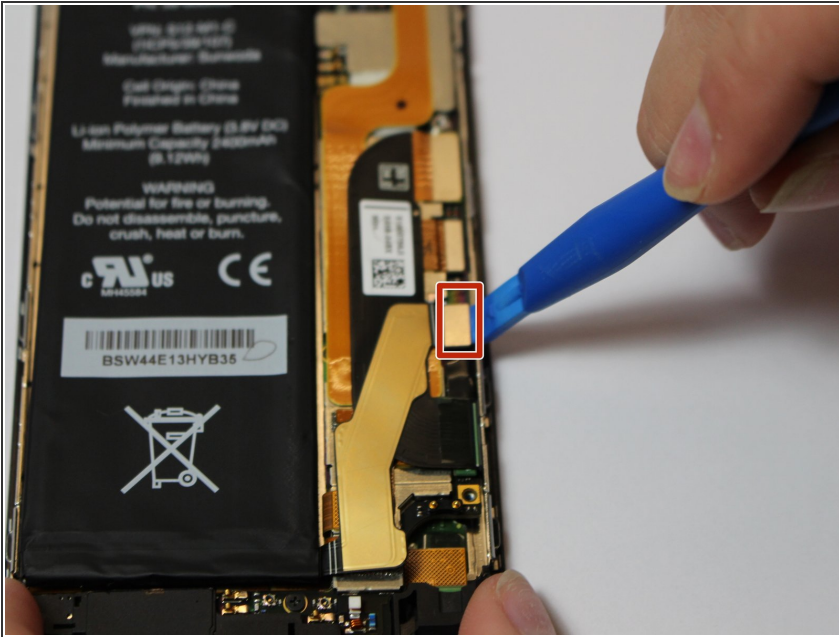


- Disconnect the battery connection cable by using the plastic opening tool and applying light pressure upwards on the cable.

Step 6 — Micro-USB Port

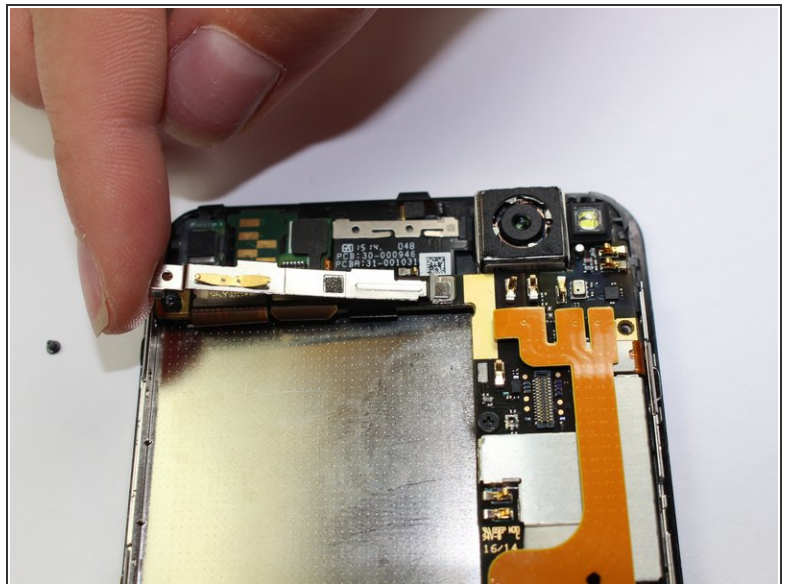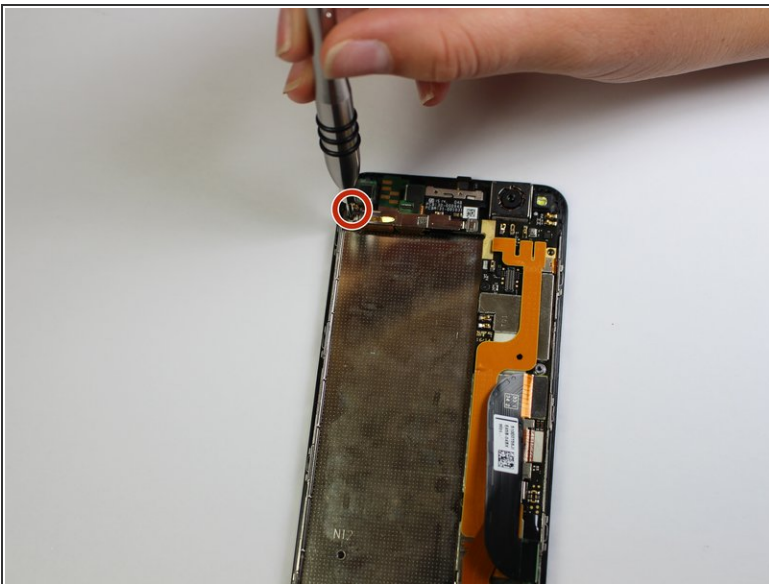


- Unscrew the 1mm screw on the top left side of the phone
- Maneuver the bracket off slowly

Step 7

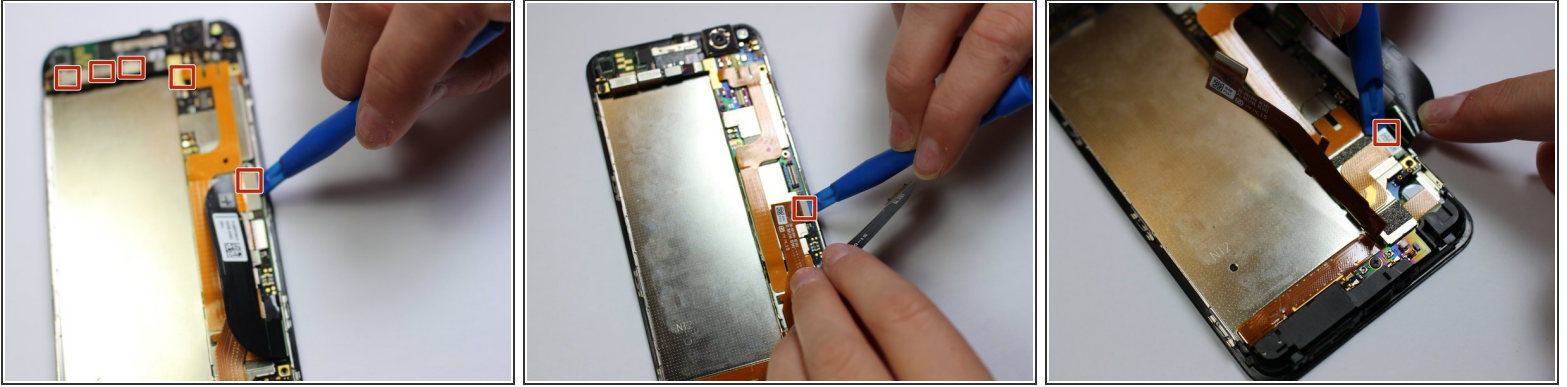




- Disconnect the 9 cables along the top and right side of motherboard using the plastic opening tool

Step 8

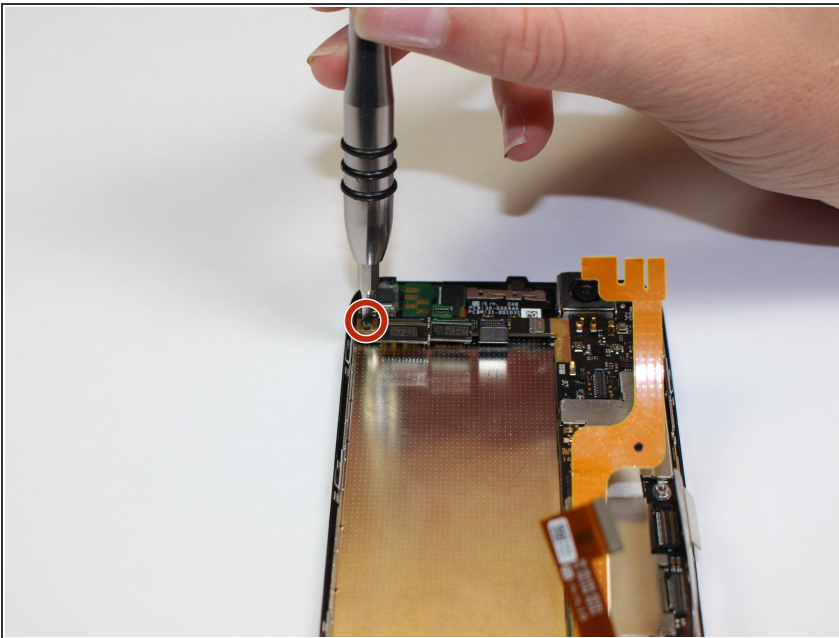



- Unscrew the 3mm screw located on the top left side of the phone with a flat head

Step 9

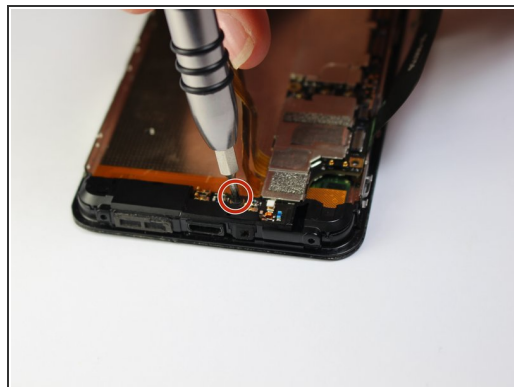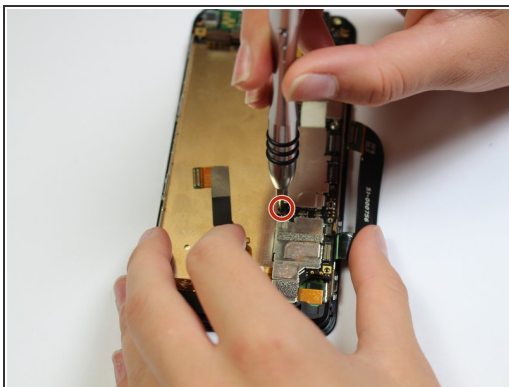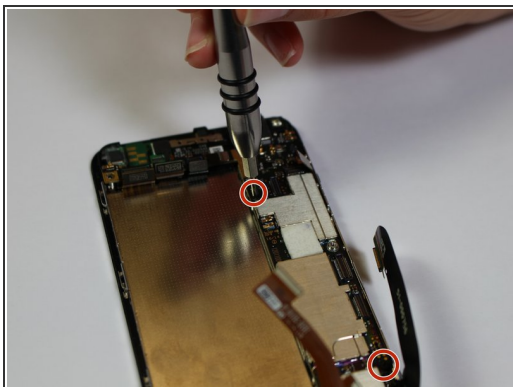


- Unscrew the four 2mm screws along the right side of the motherboard with a philips head

Step 10

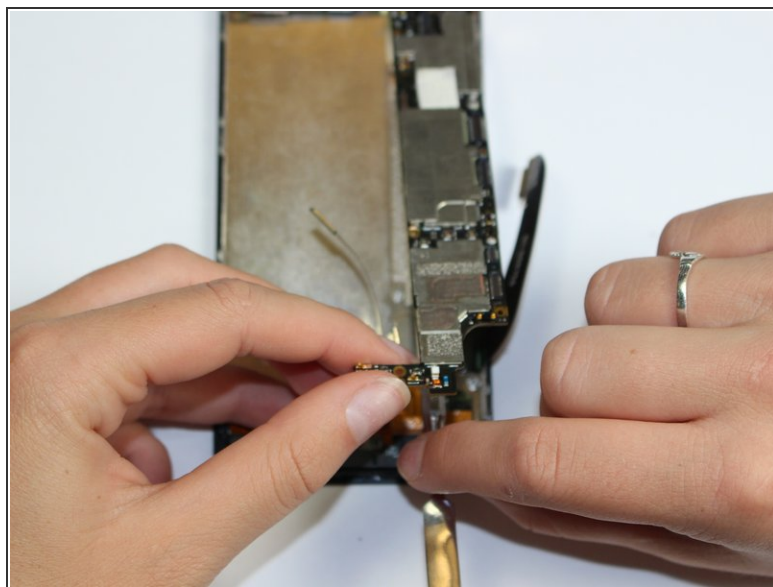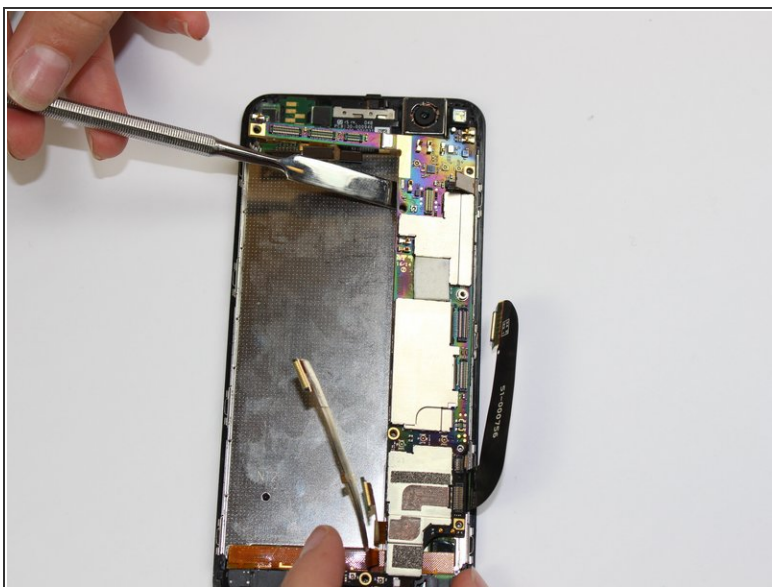

- Carefully lift up the motherboard and using the spudger pry camera from the camera holder

Step 11

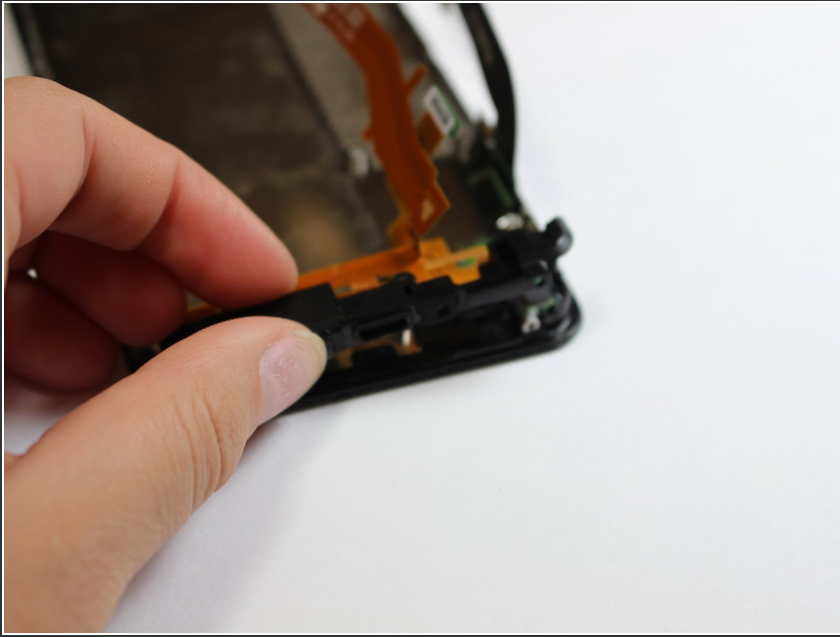

- Lift off bottom plastic piece with flat antenna cables

Step 12 — Display




- ⓘ We recommend you clean your microwave before preceding to heat up the iOpener.
- Place the iOpener in the center of the microwave.
- Heat the iOpener for **thirty seconds**.
- ⚠ Be careful not to overheat the iOpener and always wait at least three minutes before reheating the iOpener

Step 13




- Lay the iOpener on side 1 of the phone for 90 seconds before attempting to open the front panel

Step 14

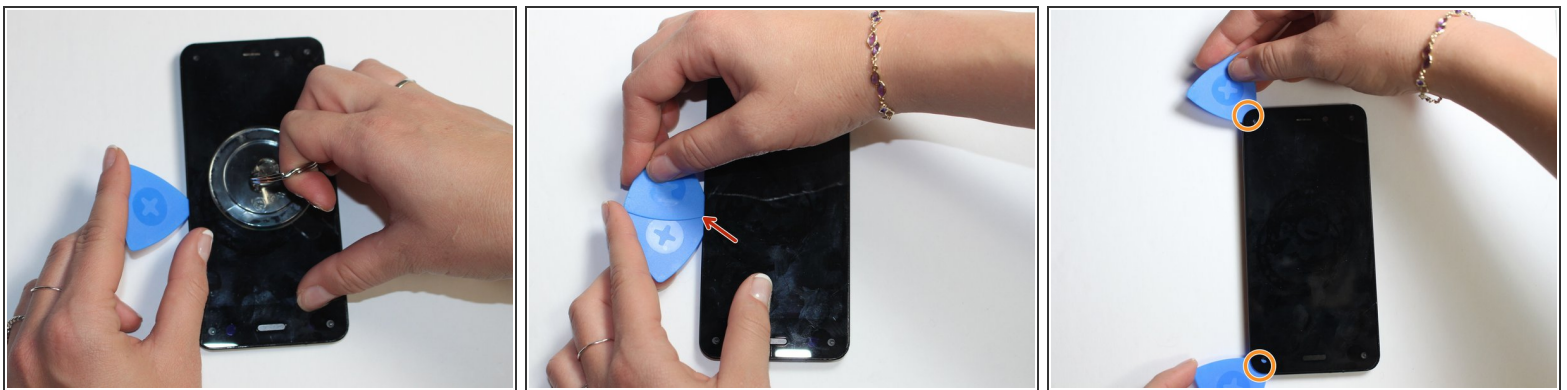

- Using the Suction Cup to slightly lift the screen, pry one opening pick into side of the phone.
- Insert another opening pick next to the first one.
- Slowly slide the two Picks to the corners of the phone.

Step 15

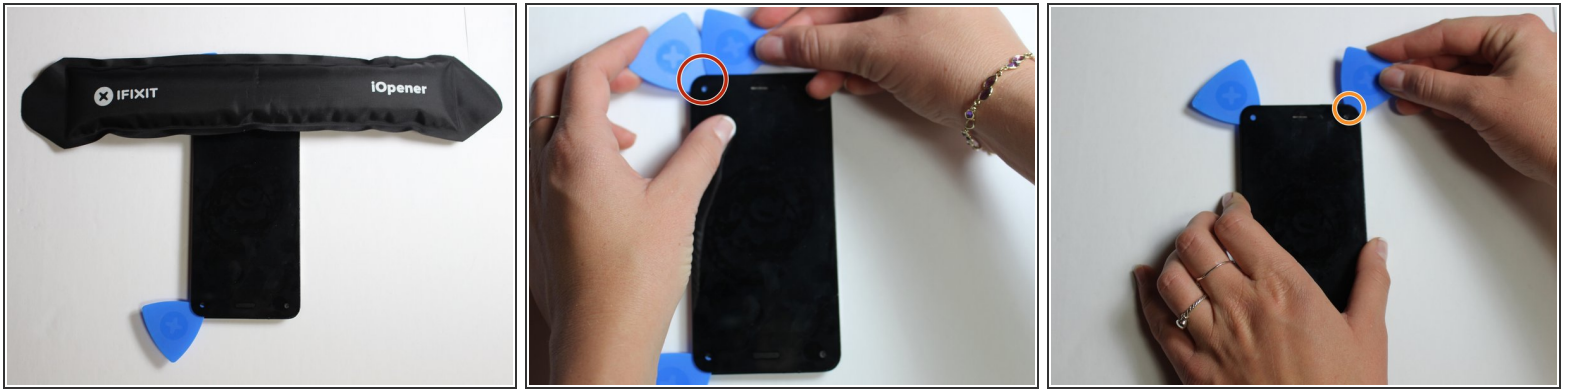


- Place the iOpener on side 2 of the phone for 90 seconds.
 - Insert another pick into side 2 of the phone.
 - Slowly slide the pick to the next corner.
- ⚠ If necessary, reheat the iOpener. Don't reheat it more than once every 3 minutes.

Step 16




- Place the iOpener on the 3rd side of the phone for 90 seconds.
- Place a pick in the corner of the phone.
- Slowly slide the the pick to the opposite corner of the phone.

Step 17

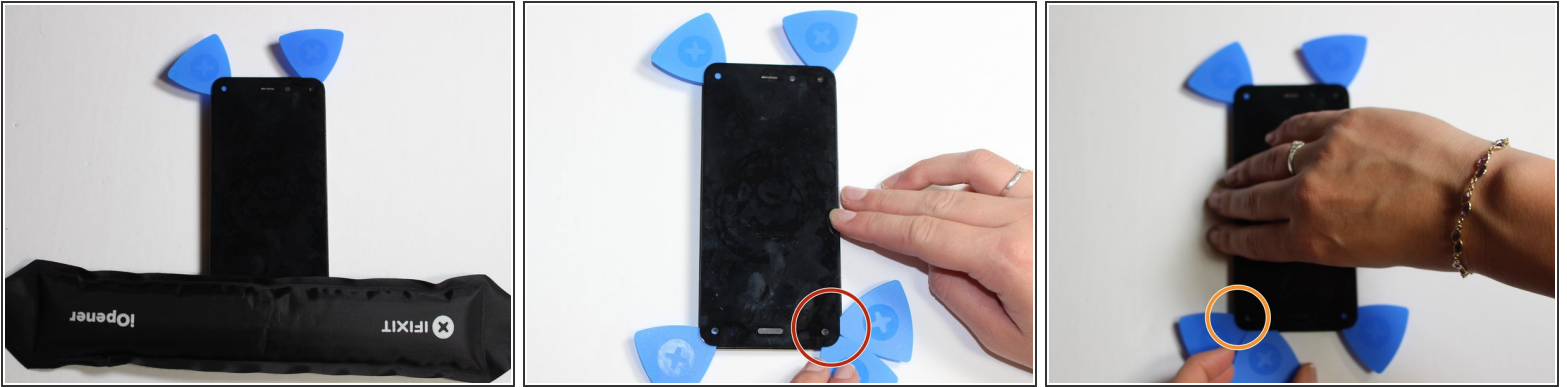


- Place the iOpener on the last edge of the phone for 90 seconds.
- Place the pick in the corner.
- Slowly slide the pick to the opposite corner.

Step 18

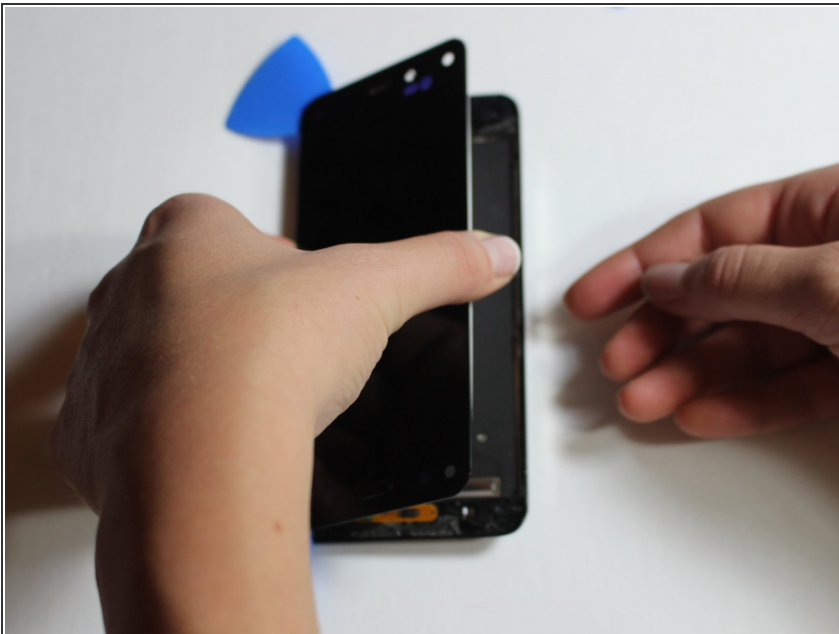

- Carefully separate the screen from the front panel of the phone by inserting the picks farther towards the center and pulling the screen off.
- ⚠ Slowly and carefully do this to avoid breaking, bending or shattering the screen.
- ⚠ If part of the screen isn't easily coming off try reheating the iOpener and placing it on the problem area.

Step 19

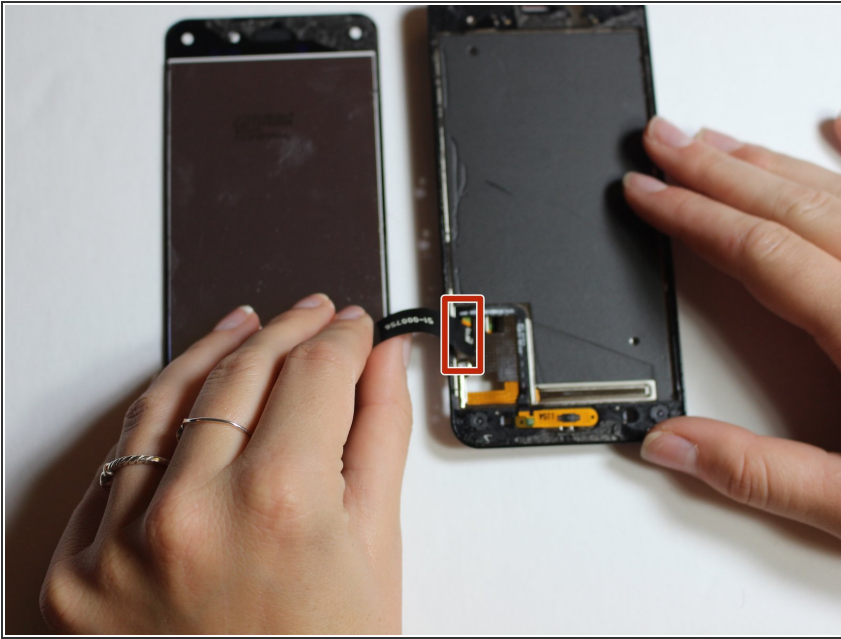

- Remove the screen slowly.
- Pull the cable out of the hole carefully.

To reassemble your device, follow these instructions in reverse order.