



# Amazon Fire TV Cube Button Replacement

Replace the Cube buttons to return function back to the device.

Written By: Kailey Jackson




## INTRODUCTION

This guide will instruct and explain how to remove and replace the buttons on your Amazon Fire TV Cube. This task requires a spudger and delicacy when disconnecting wires. If you follow the steps provided, you will successfully be able to replace the Cube buttons.

### TOOLS:

- [Metal Spudger \(1\)](#)
- [T10 Torx Screwdriver \(1\)](#)
- [Magnetic Project Mat \(1\)](#)
- [Spudger \(1\)](#)
- [T6 Torx Screwdriver \(1\)](#)
- [Tweezers \(1\)](#)

## Step 1 — Speaker

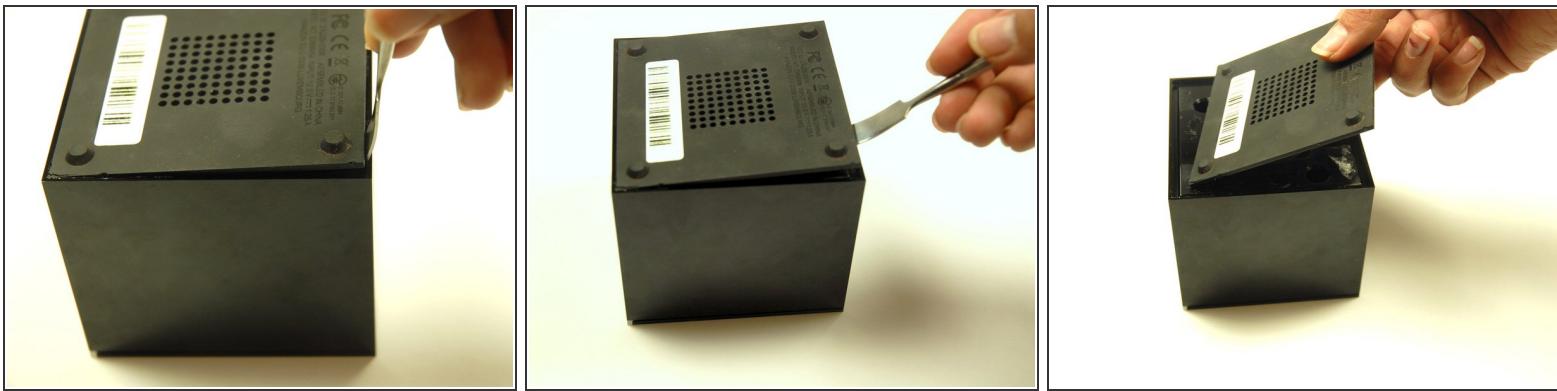


- Using a metal spudger, push down between the edge seals on the base and pry off the base.
- Do not confuse the top thin layer of rubber with the thick palette that needs to be removed.
- This may require substantial force.

## Step 2





- Use the T-10 bit from the iFixit tool kit to unscrew the four 1.4 inch corner screws on top of the first layer.
- There are 4 washers to go with each of the screws.

## Step 3

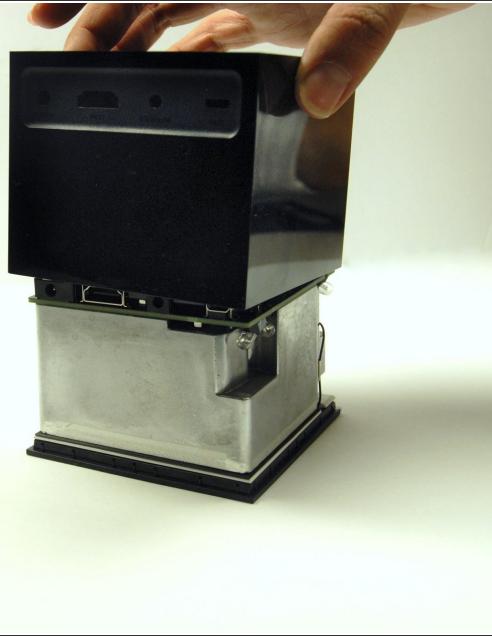

- Lift and remove the full frame.



## Step 4

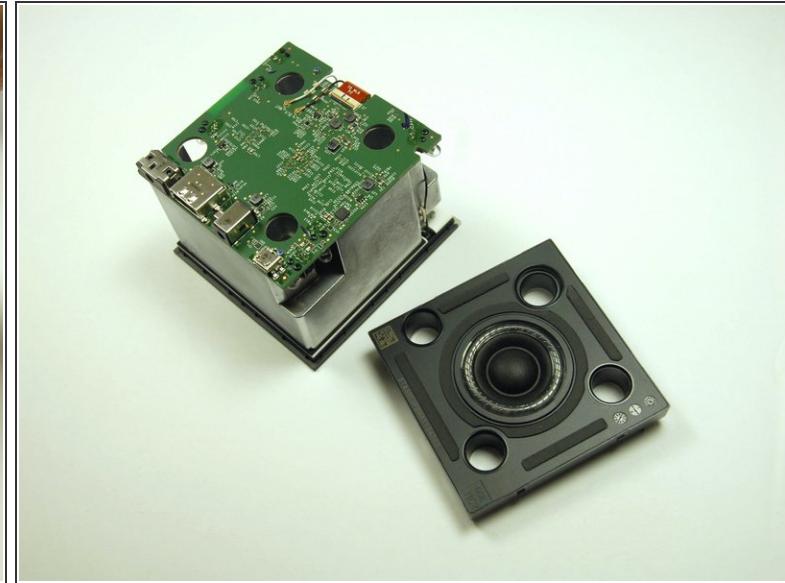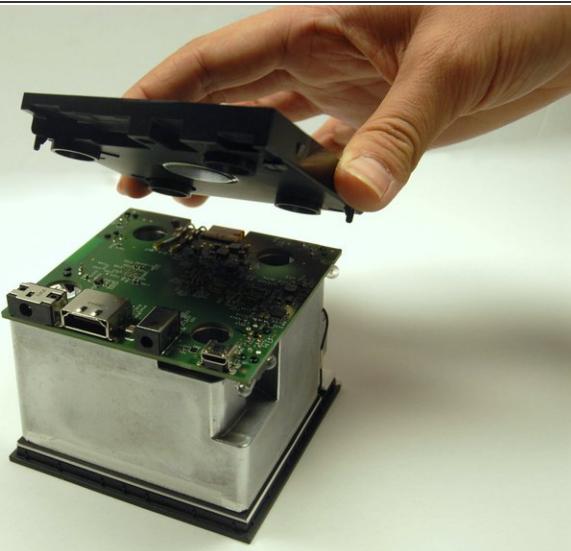

- Lift and remove the speaker.


★ Carefully match the outlets on the speaker with the outlets on the motherboard.

## Step 5 — Motherboard

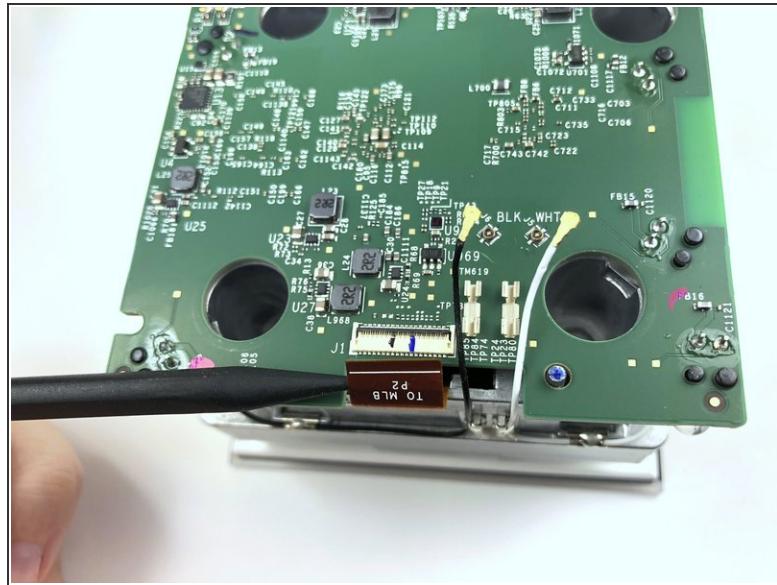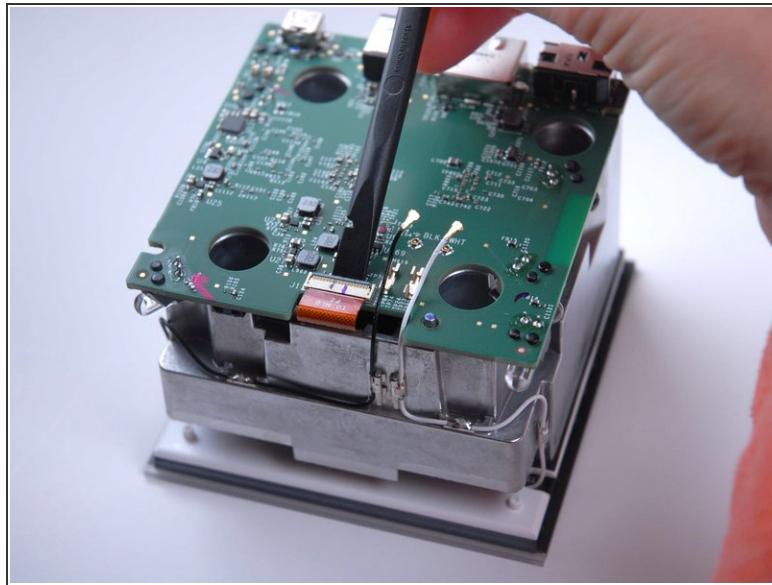


- Lift the black latch by gently prying up with the flat end of the Spudger.
- Detach the copper tap by pulling it out.

## Step 6

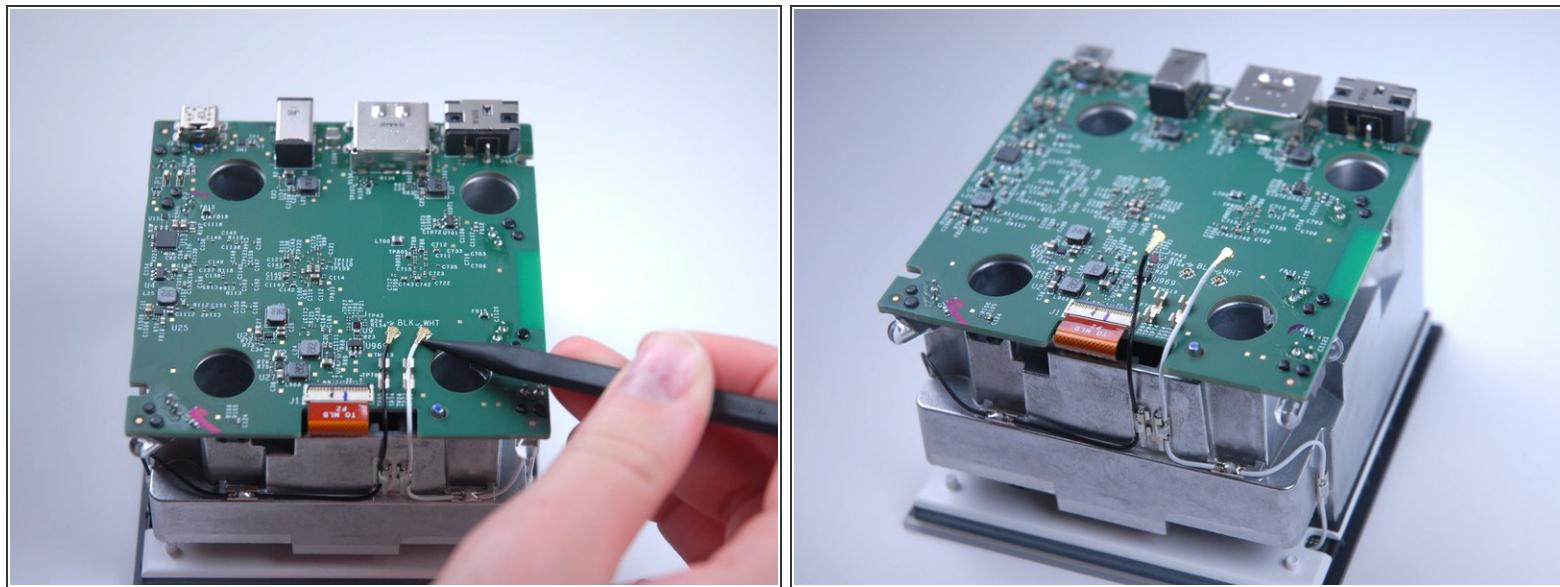

- Use the pointed end of the Spudger to carefully detach the black and white wires from the motherboard.
- Make sure all three attachments (the copper tab and both wires) are fully disconnected before continuing.

## Step 7

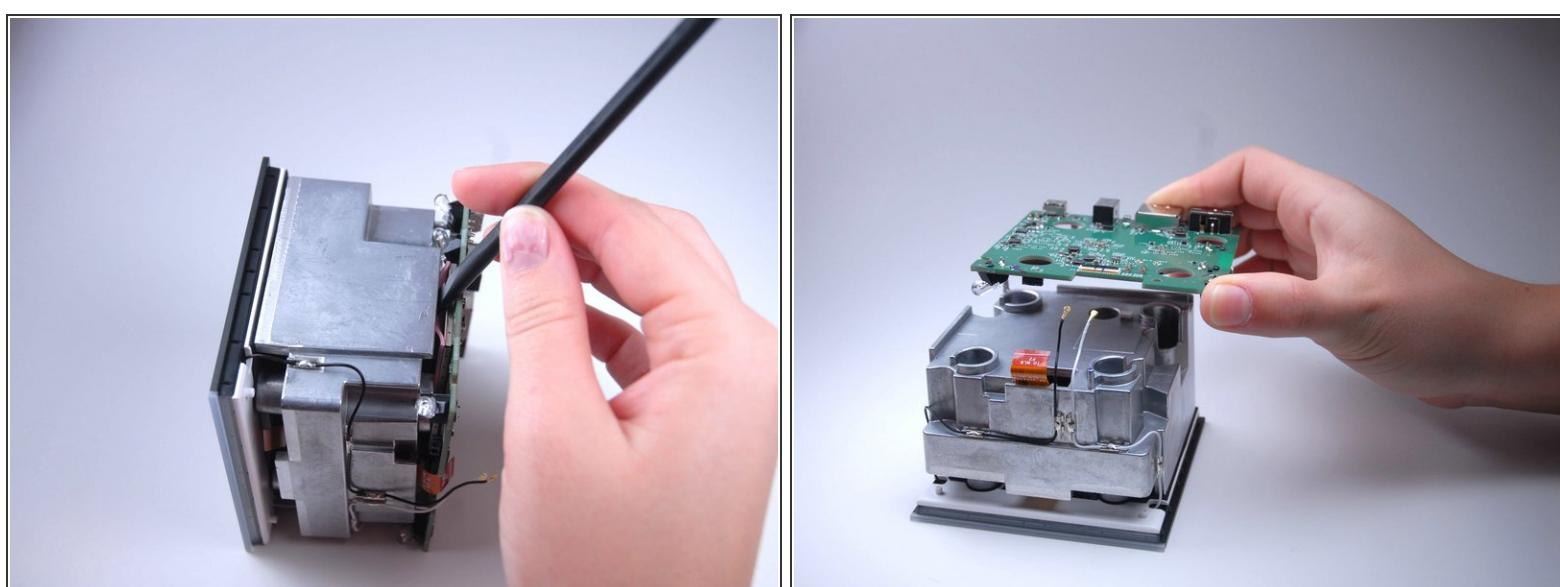

- Gently pry the motherboard up and off.

## Step 8 — Button





- Detach the wires from the opposite end of the frame using the flat end of the Spudger.
- You can't see where the wires are attached because it is hidden underneath the white frame.
- Make sure both wire attachments are fully disconnected before continuing.

## Step 9





- Pry apart the black plastic face from metal frame.
- This requires substantial force.
- ⚠ Be careful not to tear connecting copper tab.

## Step 10

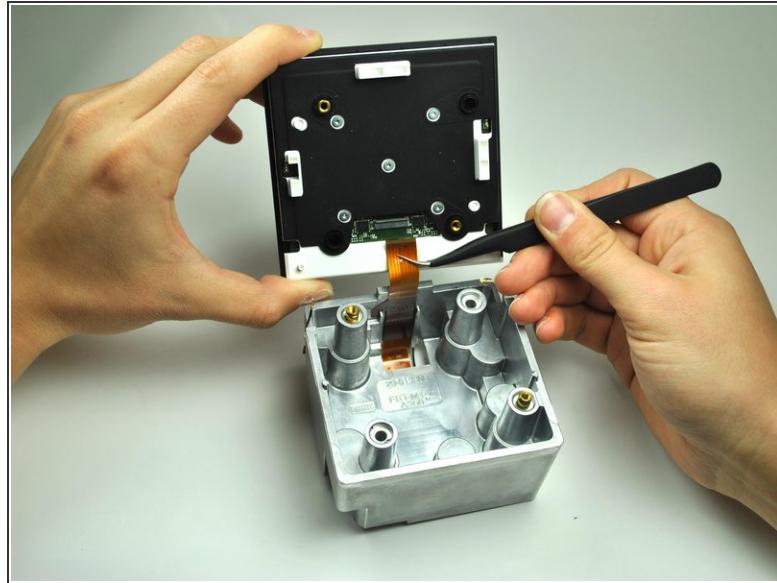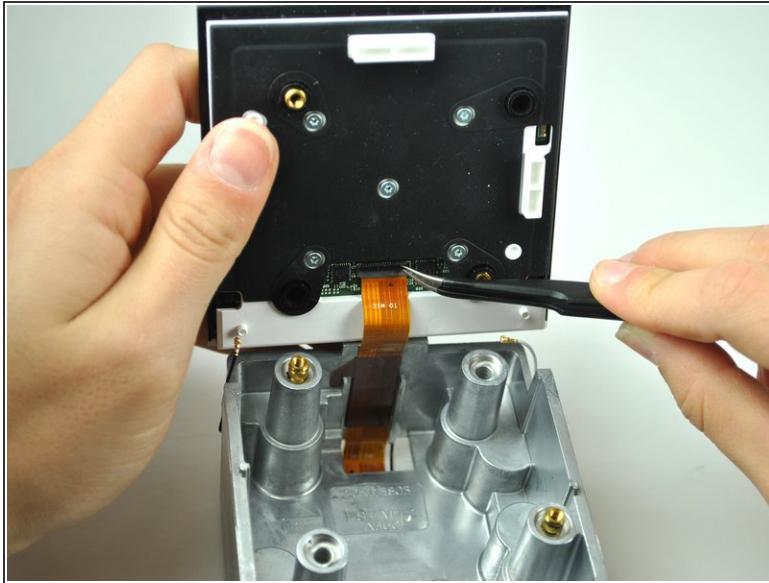


- Lift the black latch to detach the copper tab by gently prying with the Angled Tweezers.
- Use the Angled Tweezers to carefully pull out the copper tab.

## Step 11

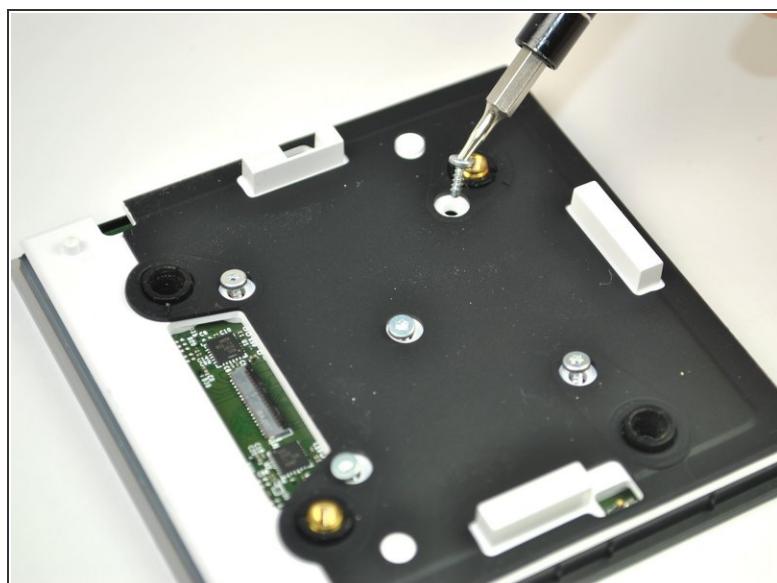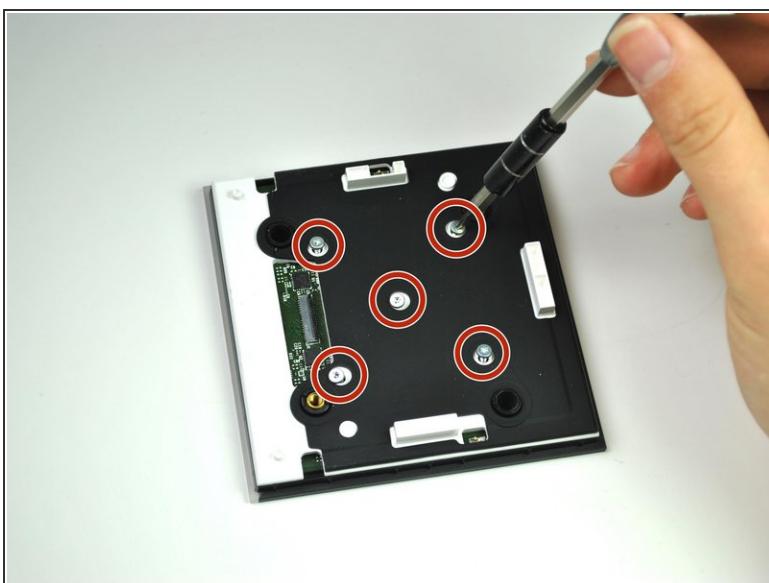


- Unscrew the five T-6 quarter inch screws.

## Step 12

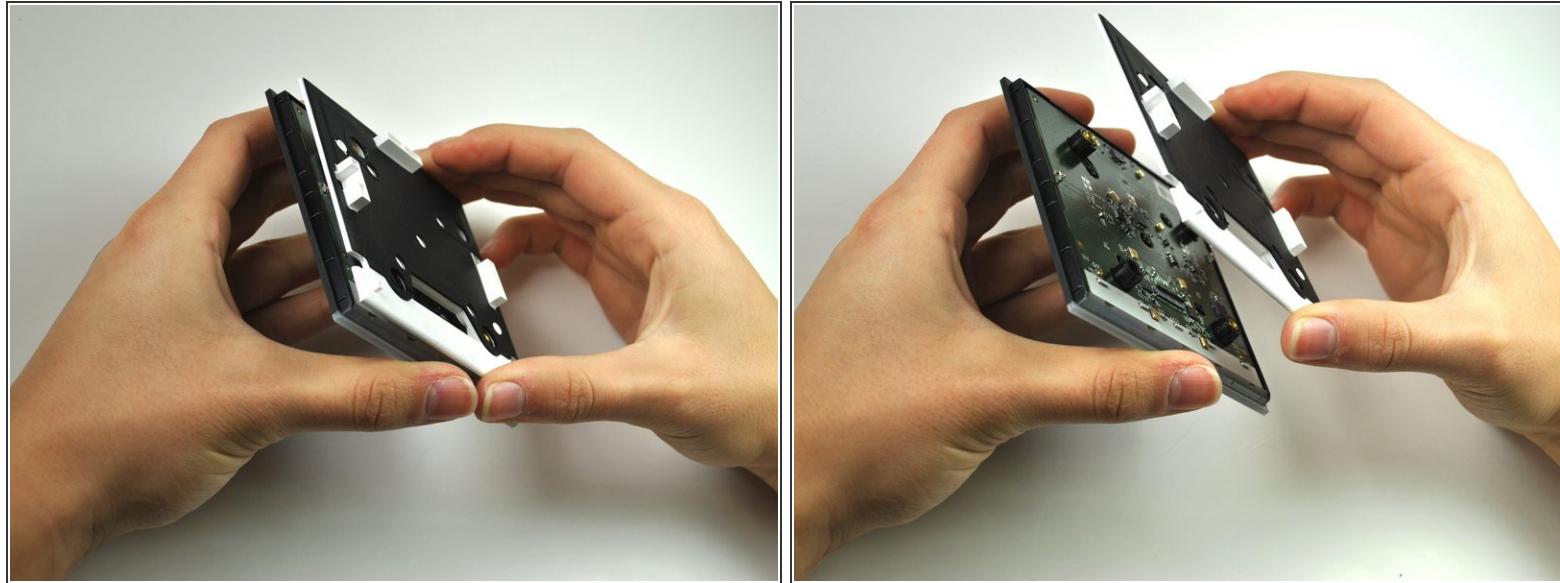



- Lift and remove white the frame to reveal the circuit board.

## Step 13

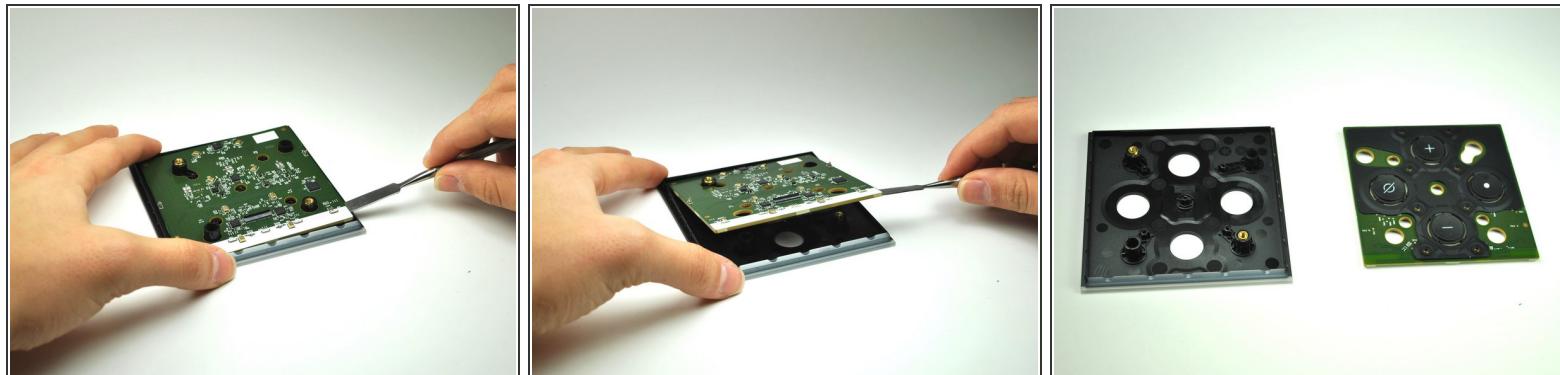

- Using a the Metal Spudger, pry up the circuit board to reveal a rubber button panel.

## Step 14

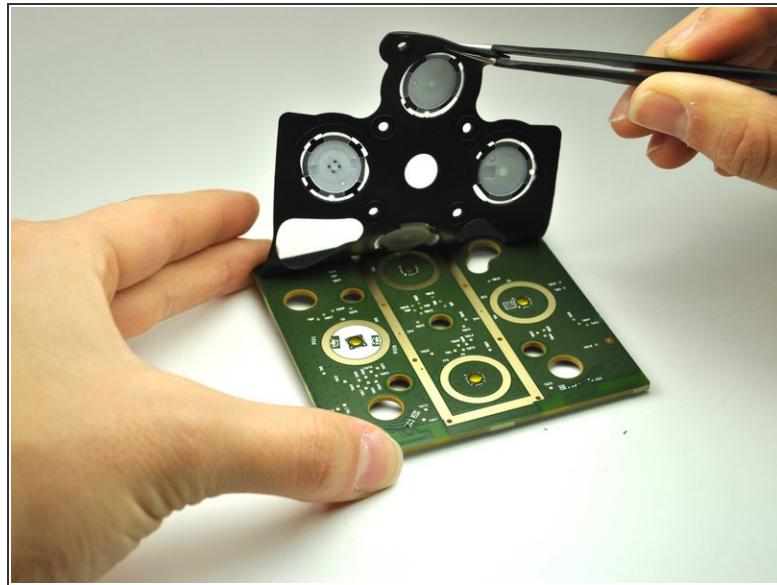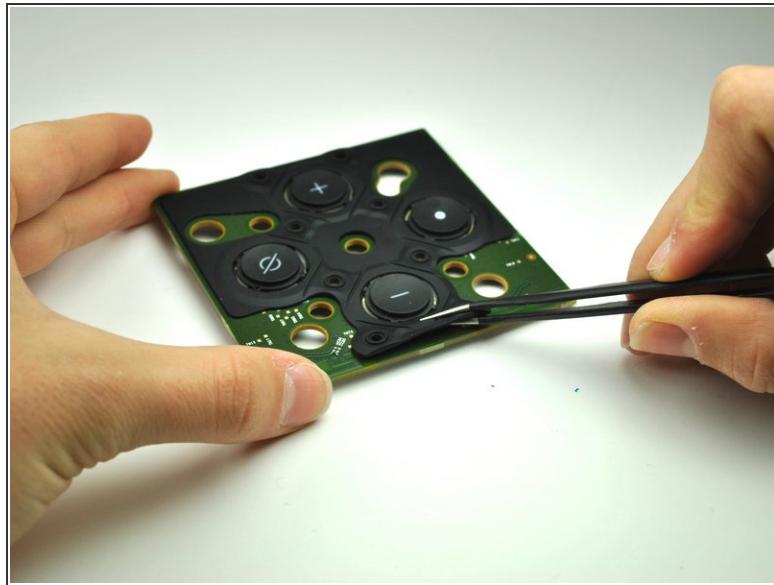

- Peel back the rubber button casing.
- ★ Pay close attention to the orientation of the rubber casing.

To reassemble your device, follow these instructions in reverse order.