



# Amazon Fire TV Stick Remote Button Panel Replacement

In this guide we will take you how to remove the buttons on the Amazon Fire TV Remote.

Written By: Sami Uzzama




## INTRODUCTION

This guide takes you step by step through the process required to remove the buttons on the Amazon Fire remote. This task is simple and should not take more than a few minutes. To complete this you will need a plastic opening tool, triangle screwdriver, and a pair of precision tweezers. If you follow the easy steps you will successfully remove the buttons on the remote.

## TOOLS:

- [iFixit Opening Tools](#) (1)
- [Precision Tweezers Set](#) (1)
- [Triangle screwdriver](#) (1)

## Step 1 — Remote Button Panel

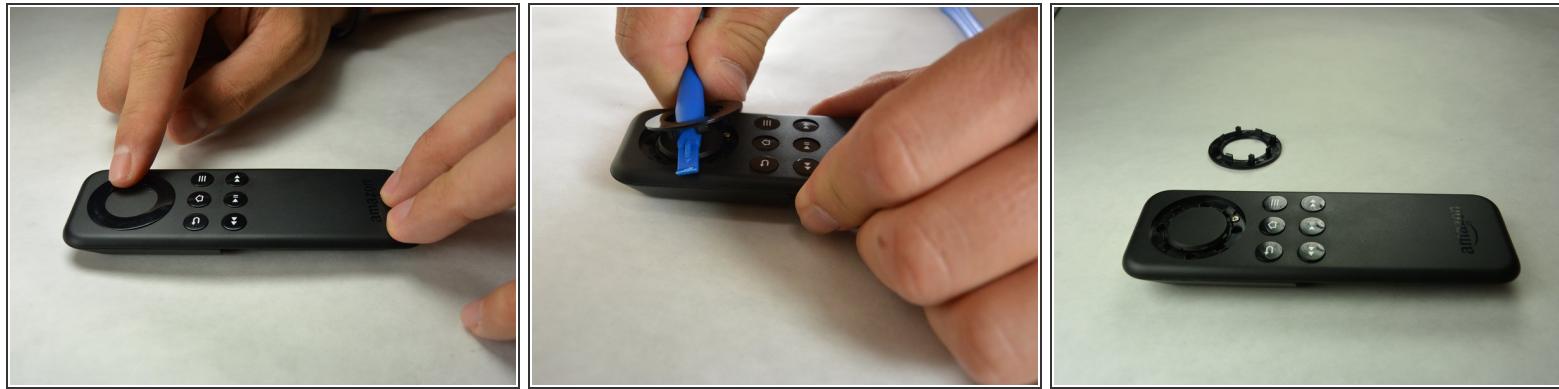

- To remove the buttons use the blue plastic opening tool to pry out the outer ring.

## Step 2



- Remove the inner disk.

## Step 3



- Remove the 6mm triangle screw.

## Step 4



- Remove top plate using plastic opening tools.

## Step 5



- Use tweezers to push out the buttons.

To reassemble your device, follow these instructions in reverse order.