




# Amazon Kindle DX SIM Card Replacement

In this guide we will demonstrate how to remove a Sim Card from your Kindle DX if you are not having any service.

Written By: Hassan Haseeb

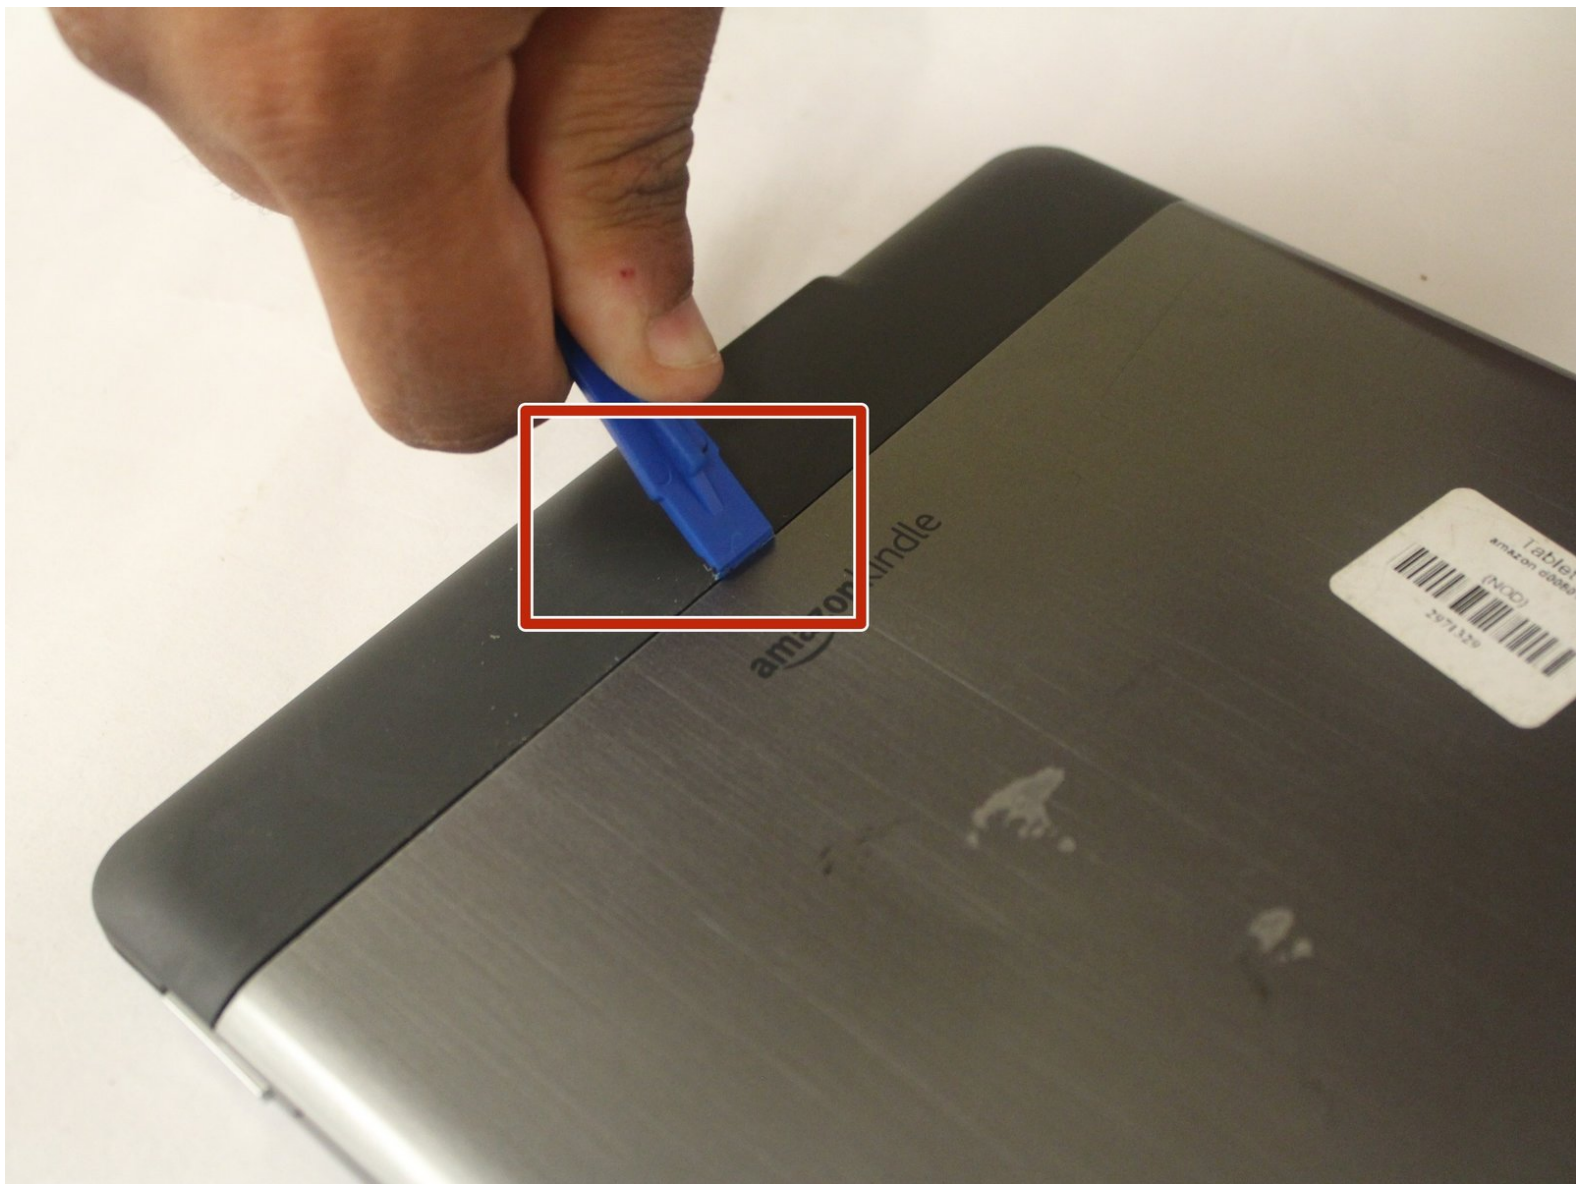




## TOOLS:

- [Metal Spudger Set](#) (1)
- [Phillips #0 Screwdriver](#) (1)
- [iFixit Opening Tools](#) (1)

## Step 1 — Sim Card

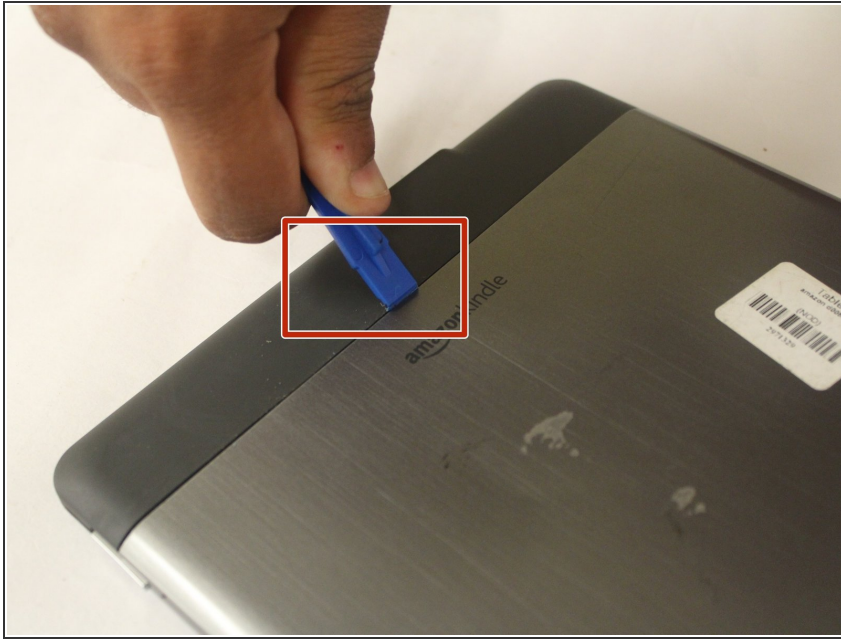



- Use the plastic opening tool to push against the top part of the Kindle DX, so that the top will pop open.

## Step 2




- Remove the plastic top.

### Step 3

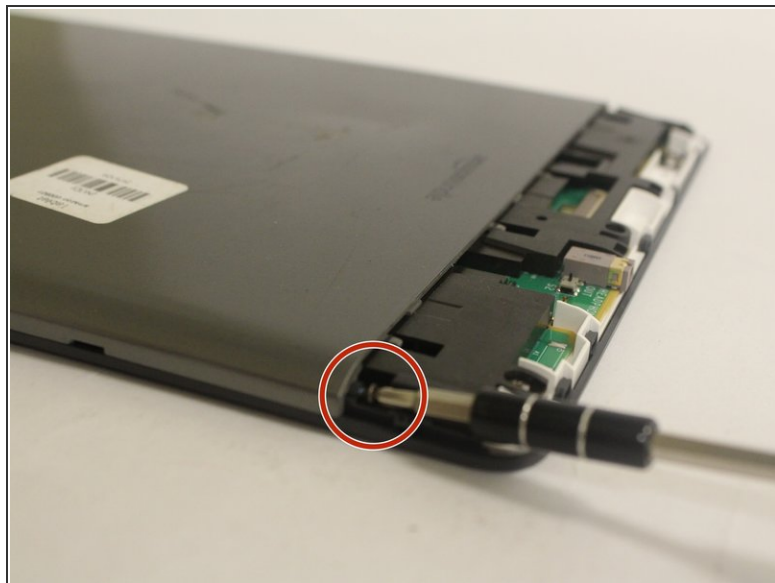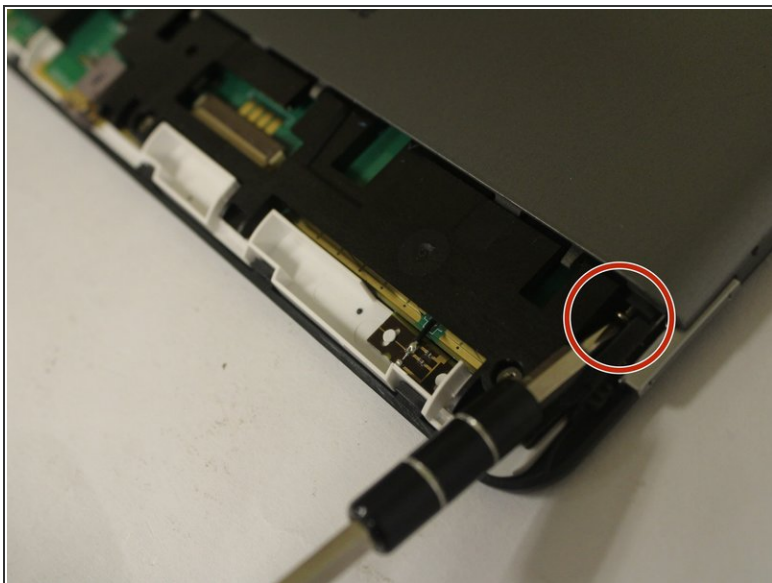

- Remove the two 40mm screws with a Phillips #0 screwdriver. Once the small piece is removed locate the two small screws on each corner.


### Step 4

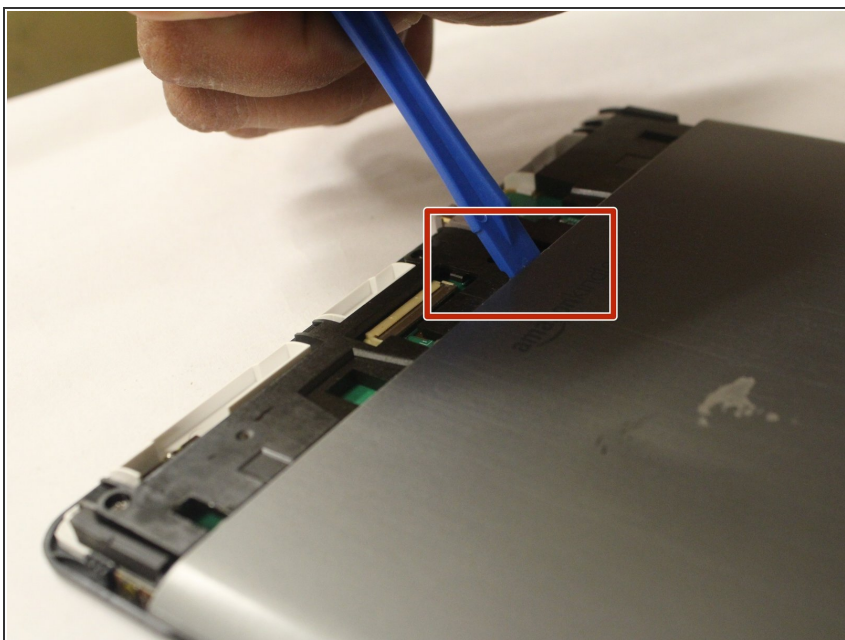

- Use the plastic opening tool to take the off the metal plate.




## Step 5

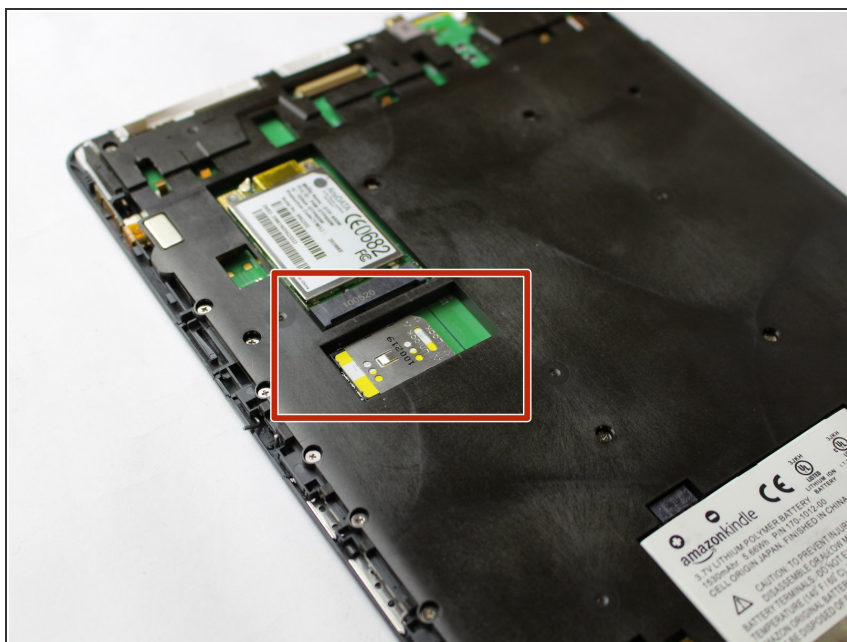


- Locate and remove the SIM card slot, and you will have access to the SIM card, as pictured.

## Step 6

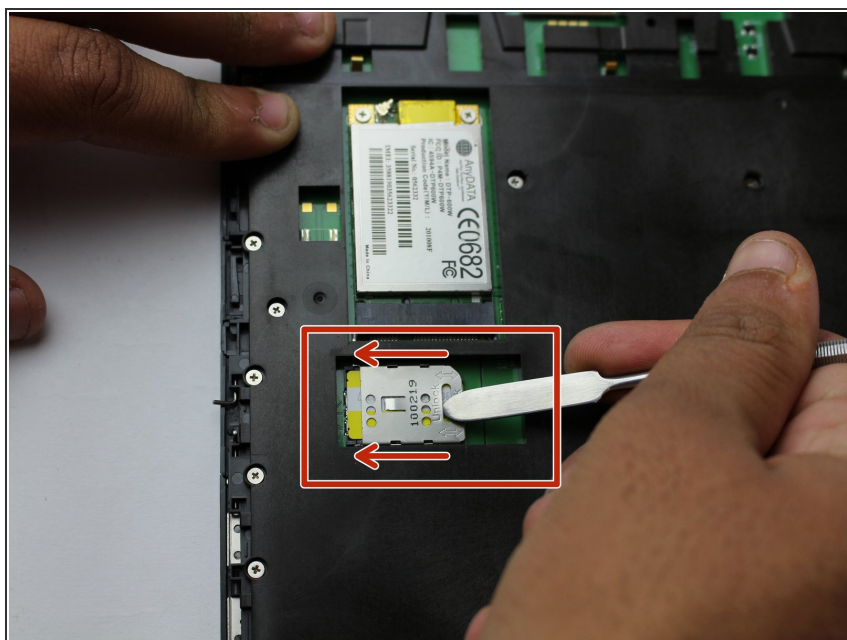

- Use the spudger to push the metal lid backwards, as pictured.

## Step 7

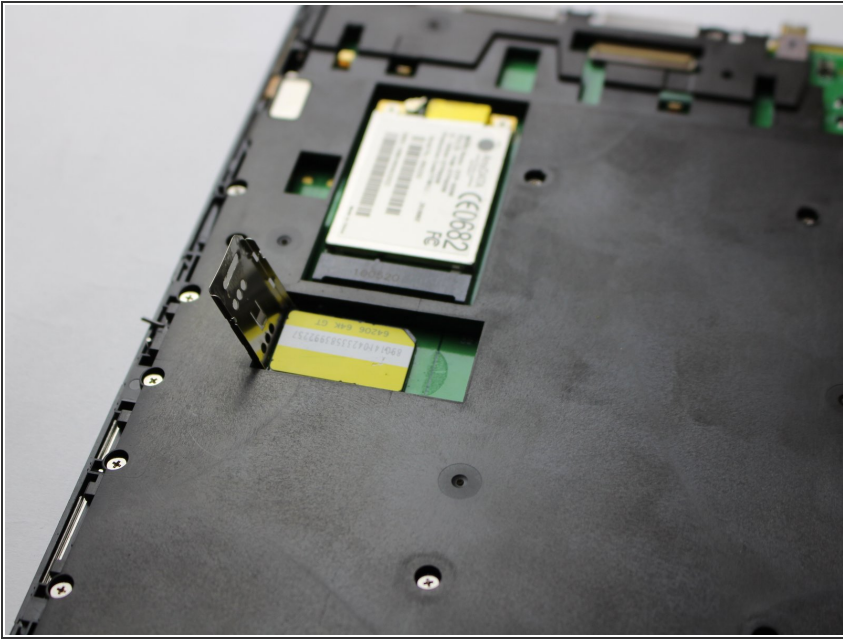

- Open the lid to replace the SIM card.

To reassemble your device, follow these instructions in reverse order.