



Amazon Tablet continuously restarting

stuck in Amazon part? Water damaged done?

Written By: Samantha Lacombe

INTRODUCTION

Not quite sure what to do following water entering the device obviously, not sure of the Generation of the tablet, but It got poured by rain, it still opens, but is stuck at the amazon and continuously restarts and the sound sometimes appears when i restart it but it seems frozen there, anyone ever revived a amazon tablet after water (is dried up in it by now) and has not followed the right steps like not trying it as soon as i found it soaked. obviously dumb as i am i didn't just put it in rice.

I plug her in and she restarts non stop

hope theres a cure! shes like alive but not quite. lol

To reassemble your device, follow these instructions in reverse order.