




# AmazonBasics BTV1 Battery Replacement

In this guide, we take a look how to replace a faulty battery in your AmazonBasics BTV1 speaker.

Written By: Chris Shannon

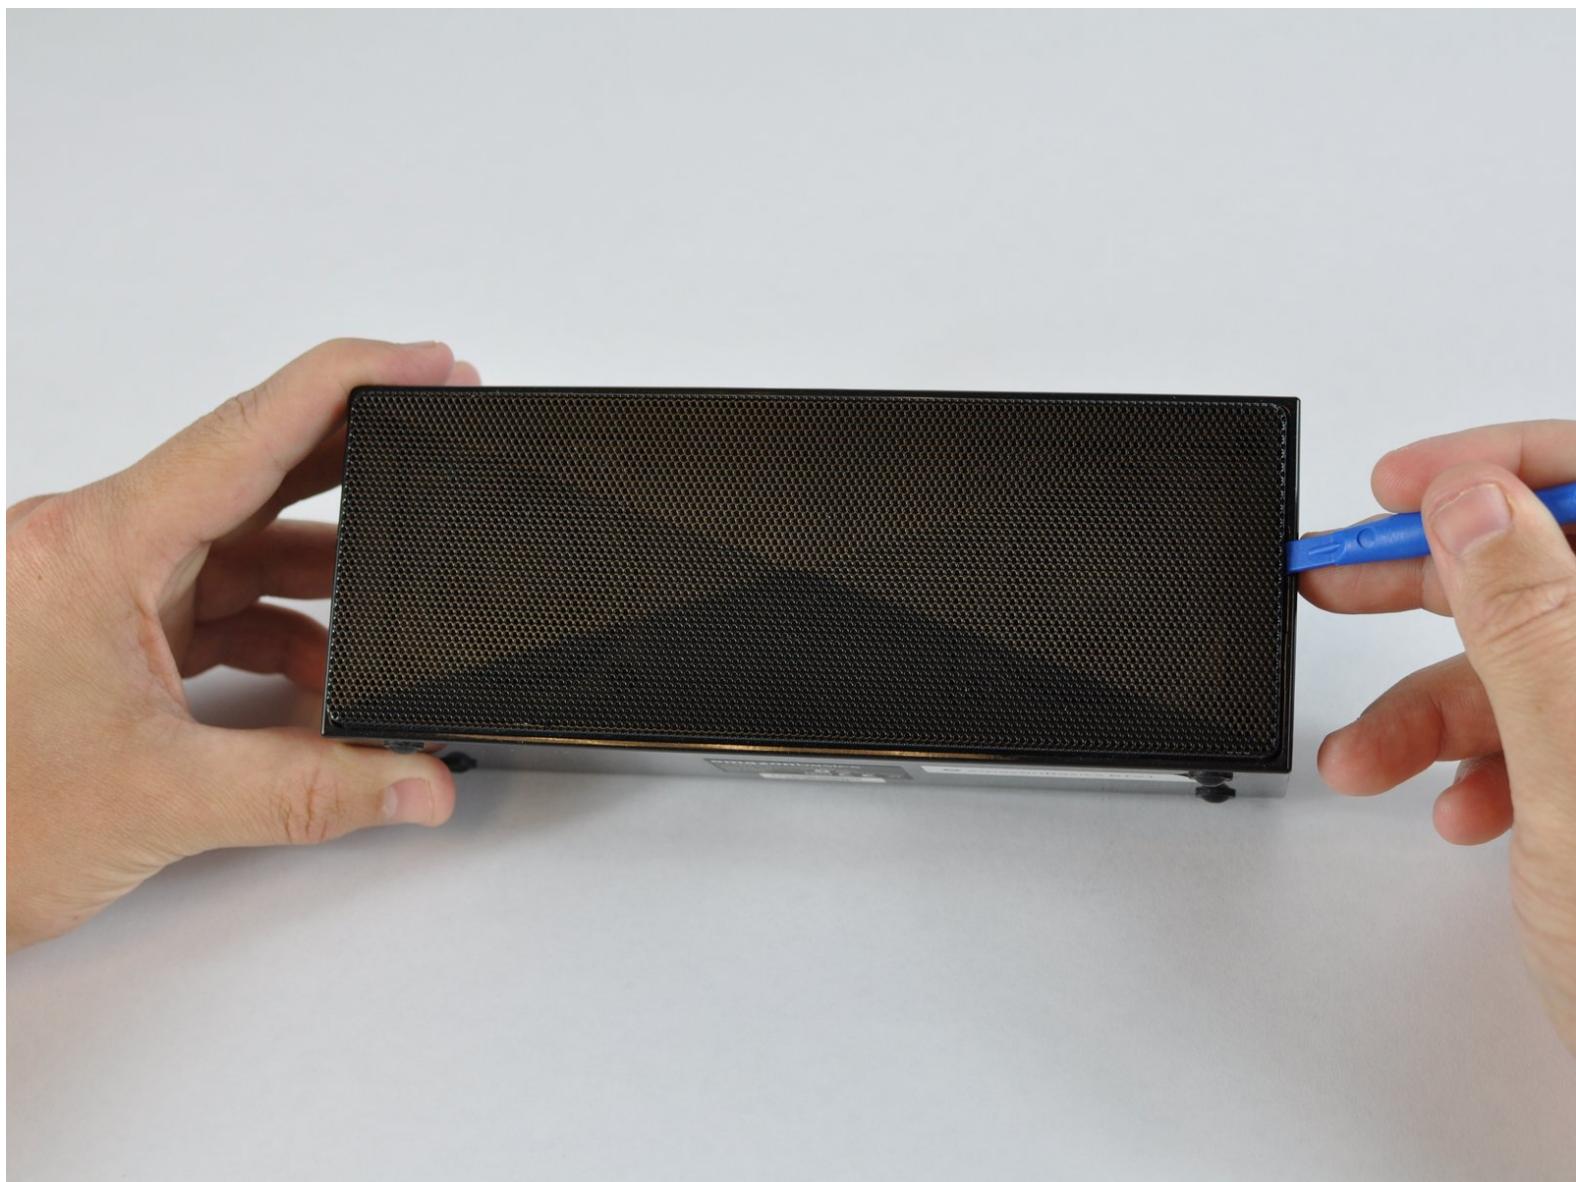


## INTRODUCTION

Sometimes batteries get damaged or lose their ability to hold charge over time. In this guide we will show you how to open up your AmazonBasics BTV1 to replace a defective battery.

### TOOLS:

- [iFixit Opening Tools](#) (1)
- [Phillips #1 Screwdriver](#) (1)

## Step 1 — Battery

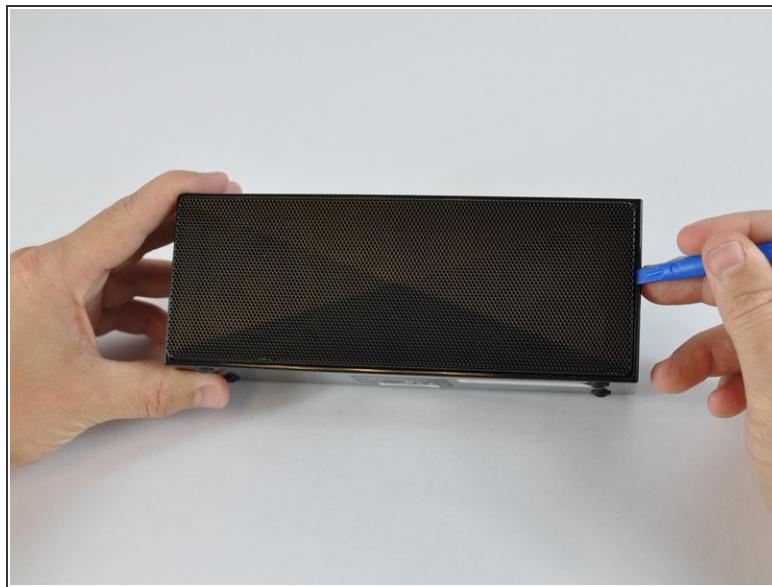


- Hold the speaker firmly and wedge a plastic opening tool in between the faceplate and the body of the speaker.
- Move the tool back and forth along the entire perimeter of the face plate until you feel the plate loosen, then pry the plate off.

## Step 2




- Using a Phillips #1 screwdriver, remove the four black 10mm screws around each of speakers.
- Using a Phillips #1 screwdriver, remove the four black 10mm screws securing the inside panel to the case.

## Step 3

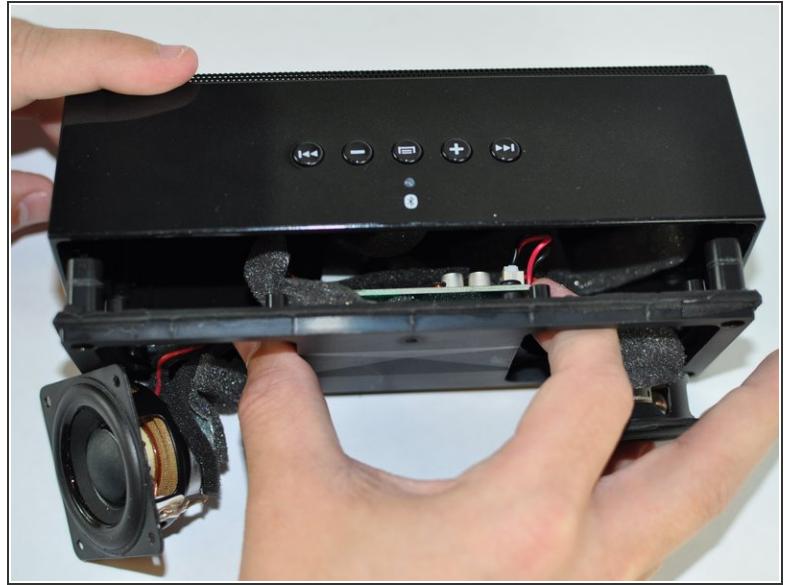


- Tilt the case downwards until the speakers fall out of their housings.
- Reach your thumb and forefinger past the speakers and detach the front speaker panel from the unit.

## Step 4

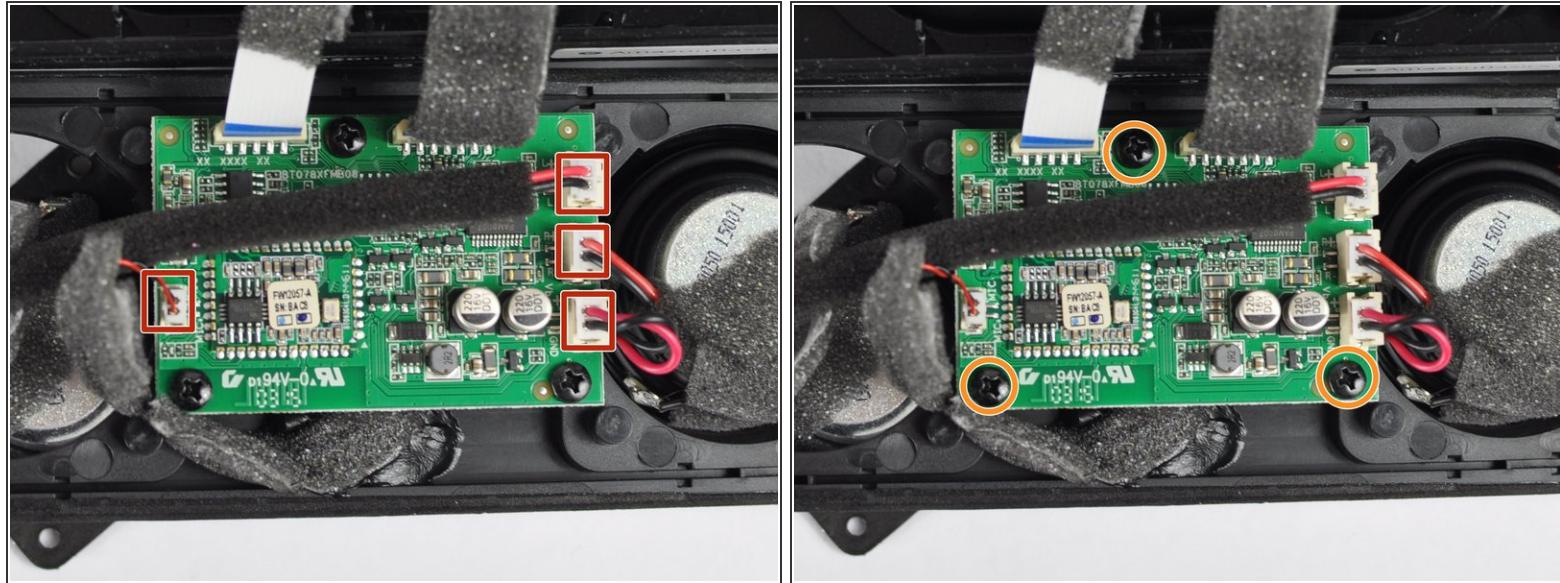

- Gently pull each plastic connector from the motherboard.
- ▣ Take a note of which connector goes with each component for easy reassembly.
- Use a Phillips #1 screwdriver to remove each of the three black 9.6mm screws from the motherboard.

## Step 5

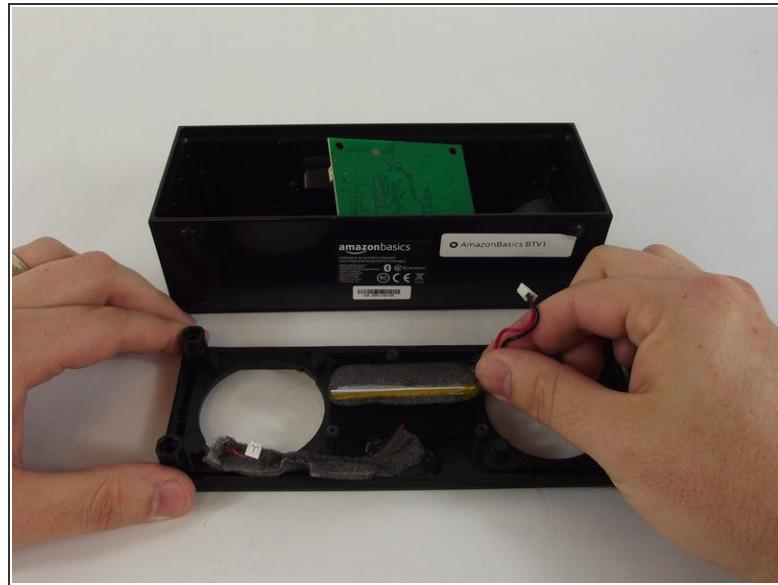

- Lift the motherboard off the face plate, exposing the battery.
- Lift the battery out of its housing.

**⚠** Use caution when using tools around the battery; batteries can be dangerous if punctured.

To reassemble your device, follow these instructions in reverse order.