



Andis T Outliner Trimmer with T Blade Model G Top Blade Replacement

This guide will teach you how to replace the top blade of the close-cutting T-Blade Andis Model G Trimmers.

Written By: David Taylor



This document was generated on 2019-12-07 03:12:03 AM (MST).

INTRODUCTION

Use this guide to replace the blades on your Andis T Outliner Trimmer with T Blade Model G.

TOOLS:

- Phillips #0 Screwdriver (1)

Step 1 — Disconnect plug from electrical outlet.



 Complete this step to reduce the risk of burns, fire, electric shock, or injury.


- Turn the control on the trimmers to "off".
- Remove the plug from the electrical outlet.

Step 2 — Remove two blade screws from top blade.




- Remove the two blade screws from the top blade of the trimmer.

Step 3 — Lift top blade from the device.

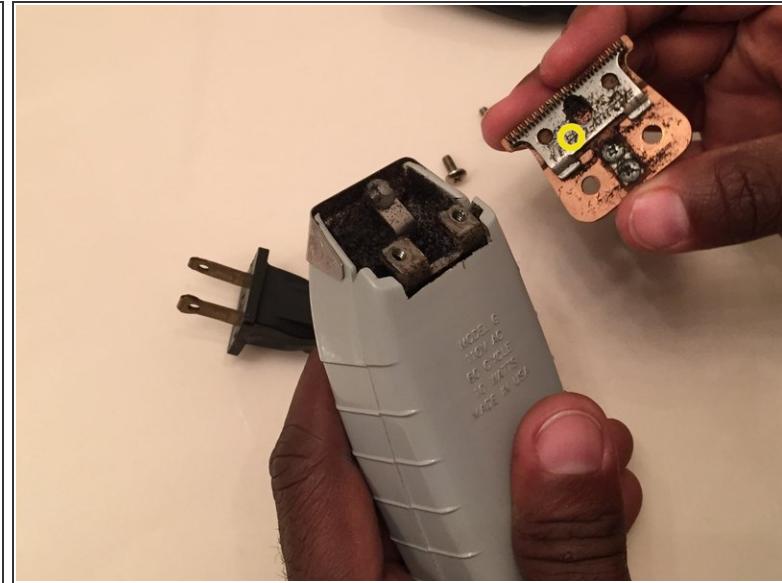

- Lift the top blade from the device.
- The bottom blade is attached, but not secured, to the underside of the top blade.

Step 4 — Remove bottom blade from top blade.

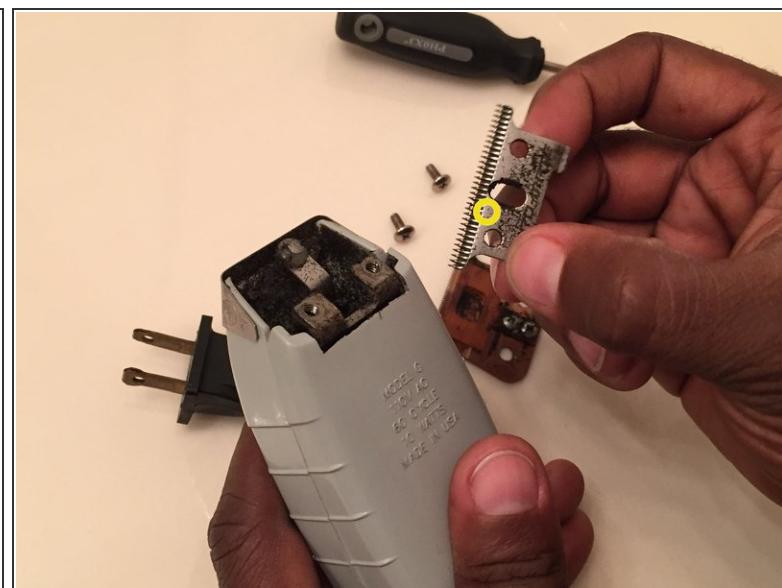

- Flip the top blade over.
- Lift the bottom blade from the top blade.

Step 5 — Clean and lubricate the device if necessary.



- Clean or lubricate the device if necessary.

To reassemble your device, follow these instructions in reverse order.