



# Andoer HDV 107 Directional Buttons Replacement

Written By: Isaac Saron



## INTRODUCTION

This guide will show you how to replace the directional buttons in case they get jammed or break.

### TOOLS:

- [Phillips #000 Screwdriver](#) (1)
- [iFixit Opening Tools](#) (1)

## Step 1 — Directional Buttons



- At the bottom of the camera you will see the battery compartment cover as seen in the picture
- To open this compartment, apply pressure in the direction of the arrow and remove it.

## Step 2




- Remove the 1mm screws above and below the screwdriver.

## Step 3




- Remove the 1 mm screw shown in the picture

## Step 4

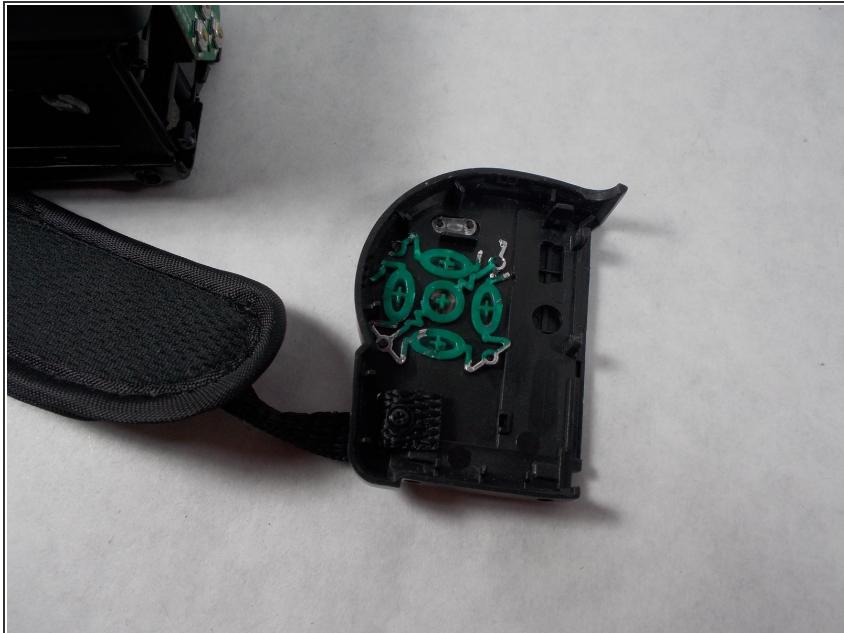

- Once all previous screws have been removed, remove the panel.

## Step 5

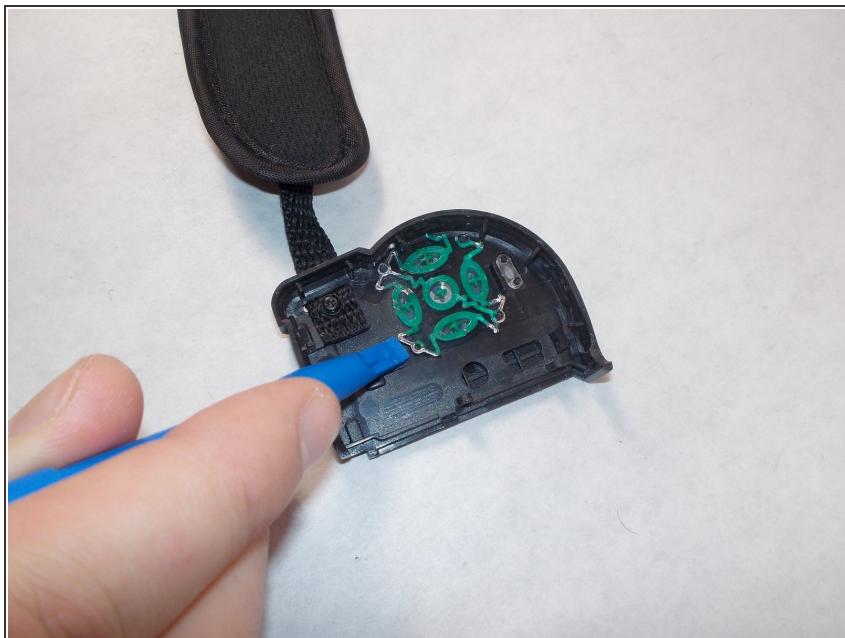

- Now remove the directional button.

To reassemble your device, follow these instructions in reverse order.