



# Andoer HDV 107 SD Card Replacement

Replace SD Card

Written By: Isaac Saron



## INTRODUCTION

This guide is to remove the SD card so you can transfer videos and pictures or to replace one that's not working.

## Step 1 — SD Card



- At the bottom of the camera you will see the battery compartment cover as seen in the picture.
- To open this compartment, apply pressure in the direction of the arrow.

## Step 2



- Press down and release pressure quickly on the SD card and remove it out of its socket.

To reassemble your device, follow these instructions in reverse order.