



Anker 2.4G Wireless Mouse Battery Replacement

Battery replacement.

Written By: Vincent Lee



INTRODUCTION

Battery replacement.



PARTS:

- [1 AA Battery](#) (1)
-

Step 1 — Battery



- Use a finger nail or flat head screwdriver to remove the battery cover.

Step 2



- Remove the battery with a finger nail, or other nonmetal tool.
- Replace it with a new one.

To reassemble your device, follow these instructions in reverse order.