




Anker 2.4G Wireless Mouse Side Button Replacement

This guide will list all the crucial steps to replacing the side button on the Anker Wireless Mouse. This would be the button above the thumb indent on the left side of the mouse, when the mouse is facing away from the viewer.

Written By: Andreas Apitz

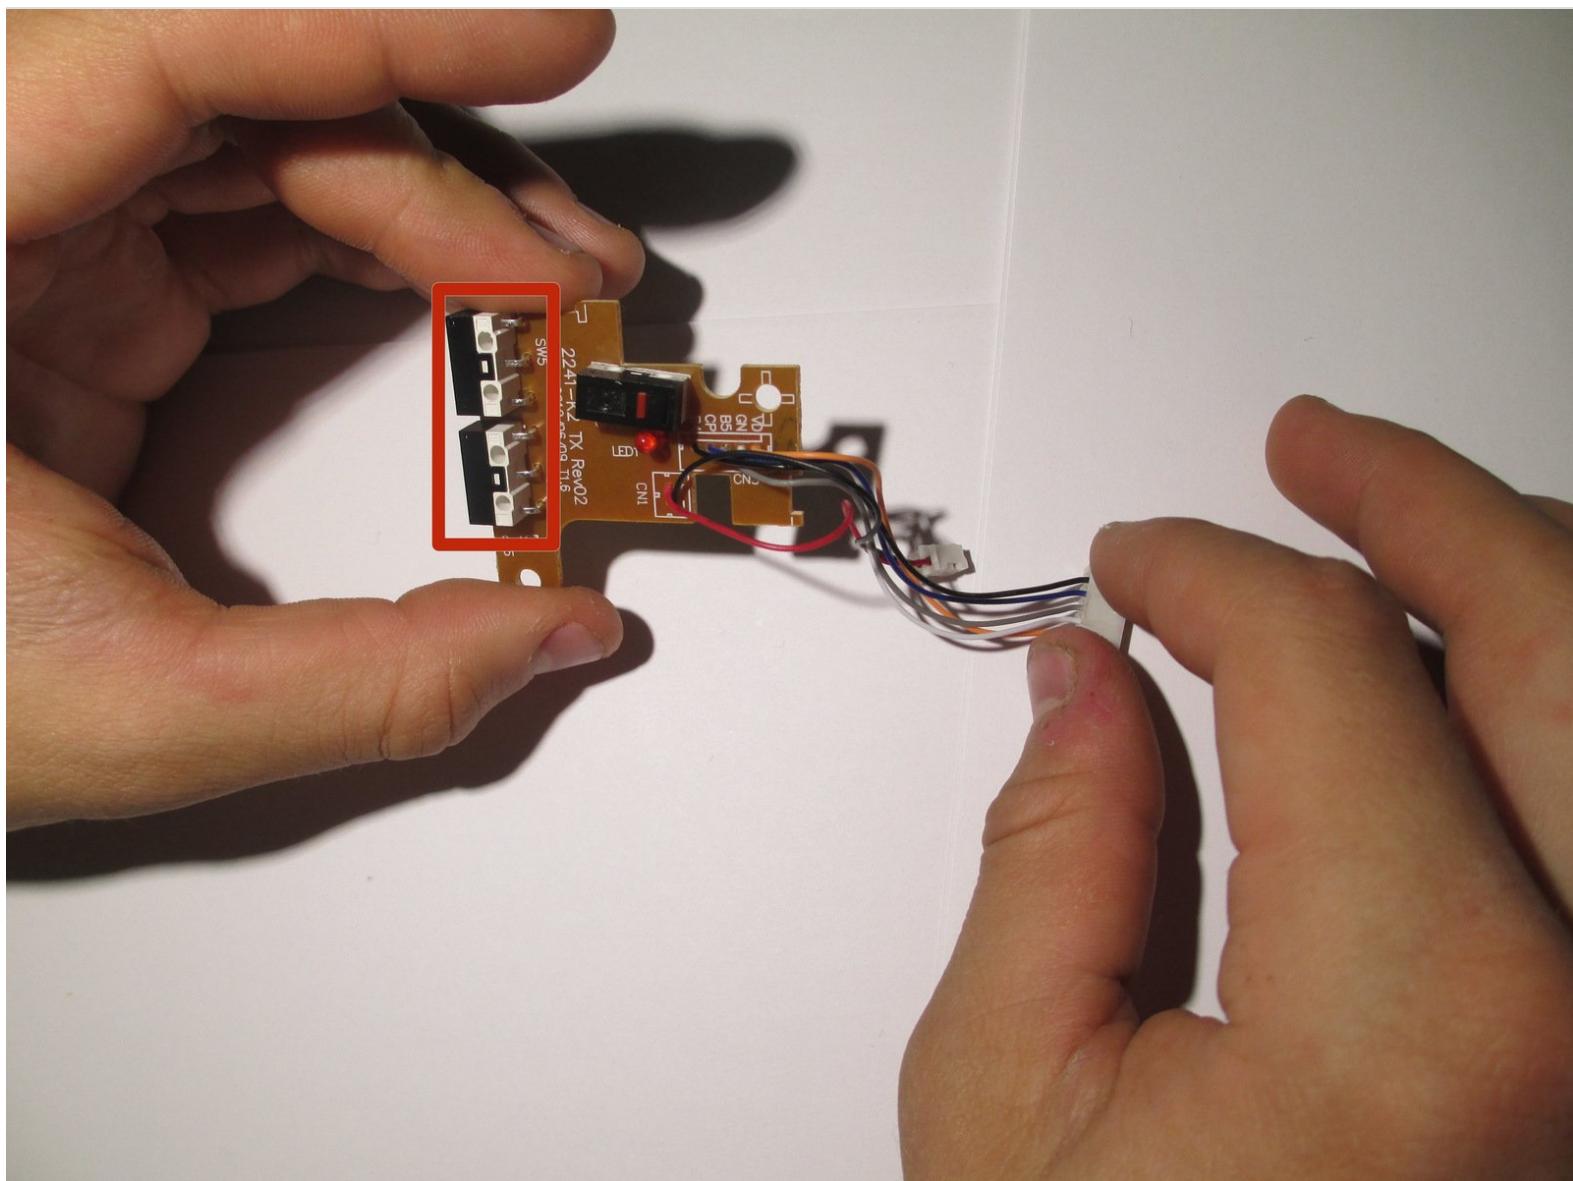

 **TOOLS:**

- Phillips #0 Screwdriver (1)

Step 1 — Side Button



- Use the screwdriver to pry off the stickers marked in red to reveal the location of 4 screws.

Step 2



- Remove the 4 screws to continue.

Step 3



- Pry the center of the mouse apart to separate the upper and lower housing of the boards.

Step 4



- Remove the wires from the white crimp headers. This will separate the upper and lower housing units of the mouse.

⚠ Pull as far up on the wire as possible, but be careful to avoid ripping the wires.

Step 5




- Take the upper housing of the mouse and begin to remove the two screws (highlighted in red) that hold the board in place.

Step 6



- Gently remove board.

Step 7

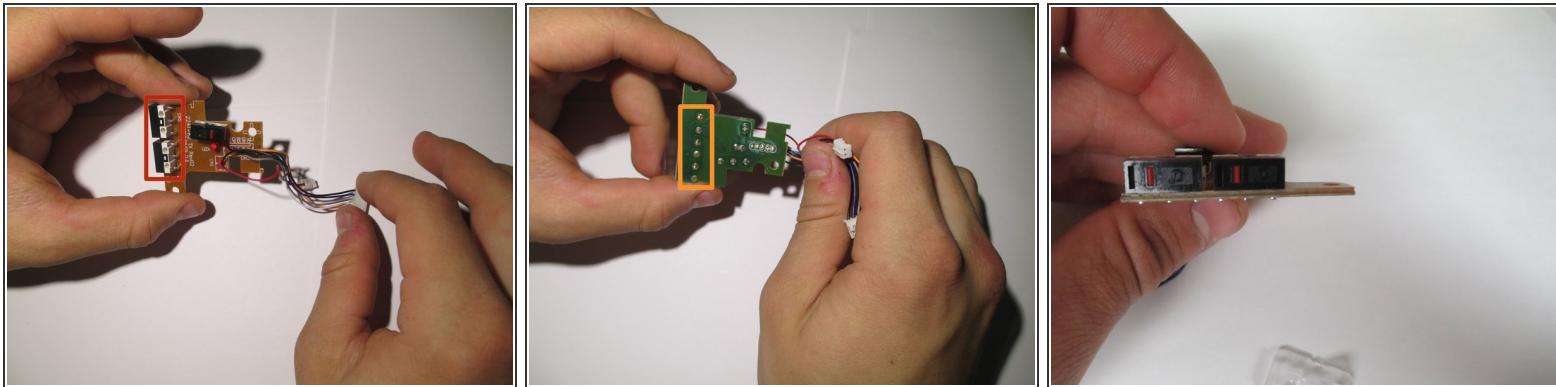

- The side buttons are the red push buttons highlighted in red.
- To remove them, flip the board over and desolder the leads highlighted in orange.
- Replace components with new ones and resolder back in place.

To reassemble your device, follow these instructions in reverse order.