



# Anker LC-90 Rechargeable Flashlight Teardown

This guide overviews the process of tearing down the Anker LC-90 rechargeable flashlight.

Written By: Nick Wolfe



## Step 1 — Anker LC-90 Rechargeable Flashlight Teardown



- Unscrew the battery cap
- Remove battery

*(i)* The cap is heavily tightened from the factory, therefore it may be necessary to use a rubber mat for added grip.

## Step 2



- Unscrew the lens holder as shown in the picture

## Step 3



- Slide the lens housing down, toward the base, to remove

 Note that once the lens housing is pushed down the lens and reflector pop out.

## Step 4



- The Anker LC-90 is now torn down

To reassemble your device, follow these instructions in reverse order.