



Anker Soundcore A3102 Partial Teardown

Opening my dead Soundcore just to see what's inside + PDF of parts inside the Soundcore from the FCC.



Written By: Daniel Bui



 **TOOLS:**

- Metal Spudger (1)
- Phillips #1 Screwdriver (1)
- 64 Bit Driver Kit (1)

Step 1 — Anker Soundcore A3102 Partial Teardown

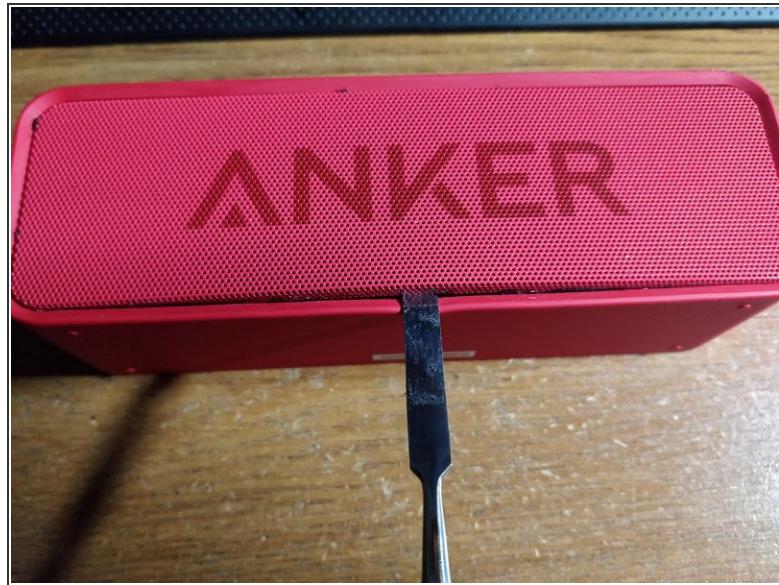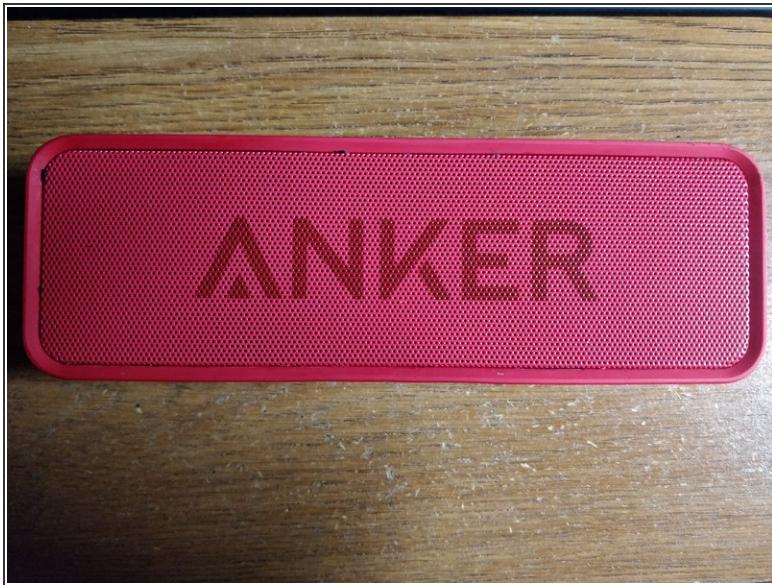

- Insert metal spudger between metal grill and rubber.
- Pry the grill off.

(i) Grill is held on with adhesive.

Step 2




- Unscrew 8 screws using a size 1 phillips head screwdriver.

(i) Screws may be difficult to remove.

(i) 4 screws are around each audio driver, totaling 8.

Step 3

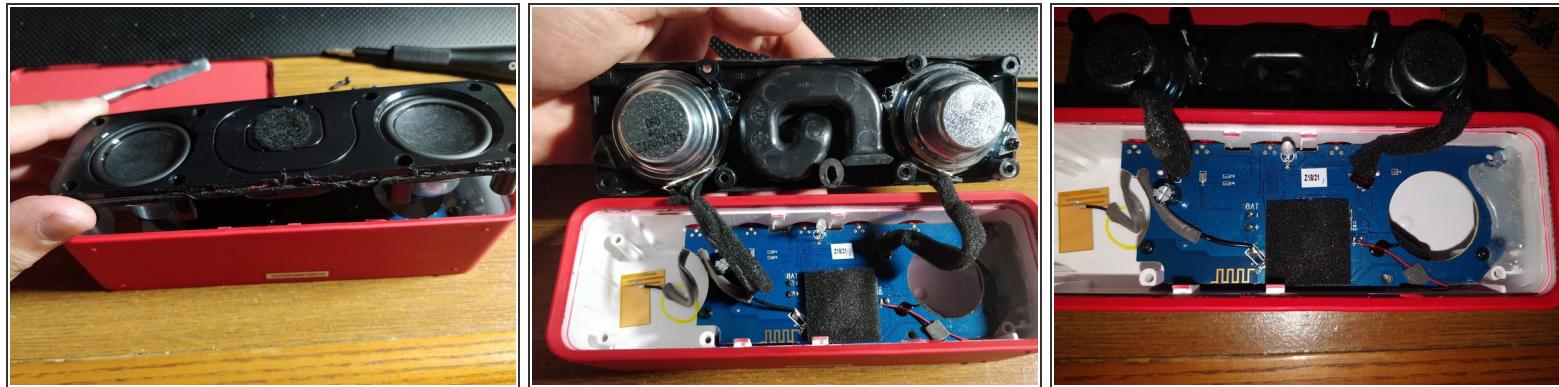

- Using the same prying method in Step 1, remove the plastic holder for the two speakers.
- Carefully lift up and away from the rest of the device.

⚠ There are speaker wires that permanently connect the audio drives to the board.