



Apple Powerbook 5300 Memory Replacement

How to remove and replace the memory on the Apple 5300

Written By: Scott



INTRODUCTION

How to remove and replace the memory on the Apple 5300

TOOLS:

- [T8 Torx Screwdriver](#) (1)

Step 1 — Battery



- Position the Powerbook towards you with the monitor closed.
- Press the battery removal latch located on the right side of the front panel.
- Gently slide the battery out.


⚠ The keyboard, front pane, and hard drive are connected to the laptop's logic board via a ribbon cable. Lift up slowly on each component with one hand and disconnect the ribbons from their ports on the logic board.

Step 2 — Keyboard



- Turn the laptop over and remove the three T8 torx screws from the bottom panel.

Step 3

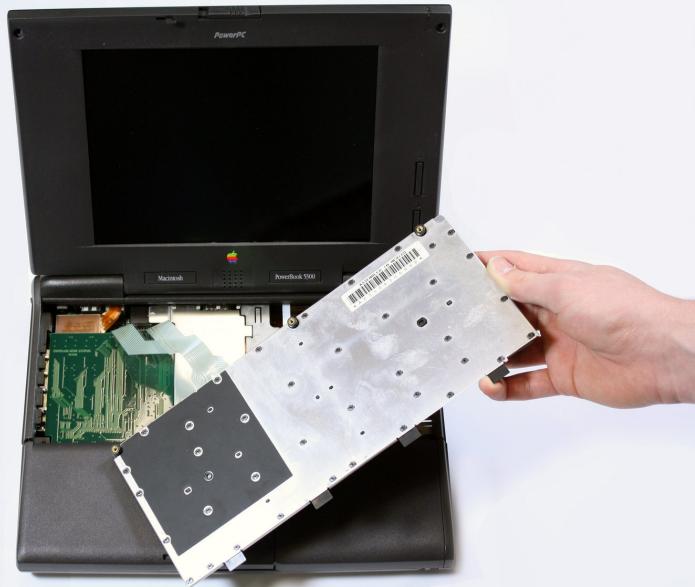

- Turn the laptop back over and open the monitor.
- With the monitor facing towards you, gently pull up on the keyboard panel from the bottom.

⚠ With the keyboard turned over as pictured, carefully remove its ribbon cable from the connection port on the logic board. Use a spudger to lift the white plastic retainer about 1/16" to release the cable.

Step 4 — Memory



- Pull up on the large green memory chip on the left side of the laptop. It will simply lift out.

To reassemble your device, follow these instructions in reverse order.