



ArmorAll AA255 Lower Motor Housing Replacement

Instructions for separation of main housing from the vacuum bucket and replacement of the lower component of the main housing. Prerequisite Only

Written By: Brad Patterson



This document was generated on 2019-09-22 06:58:47 AM (MST).

INTRODUCTION

This guide describes the process of removing the main housing of the vacuum from the vacuum bucket and the opening of the main housing as a prerequisite to servicing or replacing the internal components.

TOOLS:

- **Phillips #2 Screwdriver** (1)
- **T20 Torx Screwdriver** (1)

Step 1 — Lower Motor Housing



- Remove the orange main housing unit from the vacuum bucket by pulling outward on the handle tabs while lifting upward as shown.

Step 2



- Remove the five 15mm PH2 screws.

Step 3



- Remove the 15 mm T20 screw. This screw is located nearest the power cord.

Step 4



- Gently separate the upper and lower sections of the main housing.

To reassemble your device, follow these instructions in reverse order.