



Aroma ARC-363NG Rice Cooker Teardown

This teardown will provide instructions on how to take apart a simple rice cooker.

Written By: Rory McDermott



 **TOOLS:**


- **Screw drivers** (1)
- **Adjustable Wrench, small** (1)

Step 1 — Unscrew bottom portion of the rice cooker.




- Insert wisdom here.

Step 2 — Unscrew the bolts that connect the brown power wires to the device electronics.

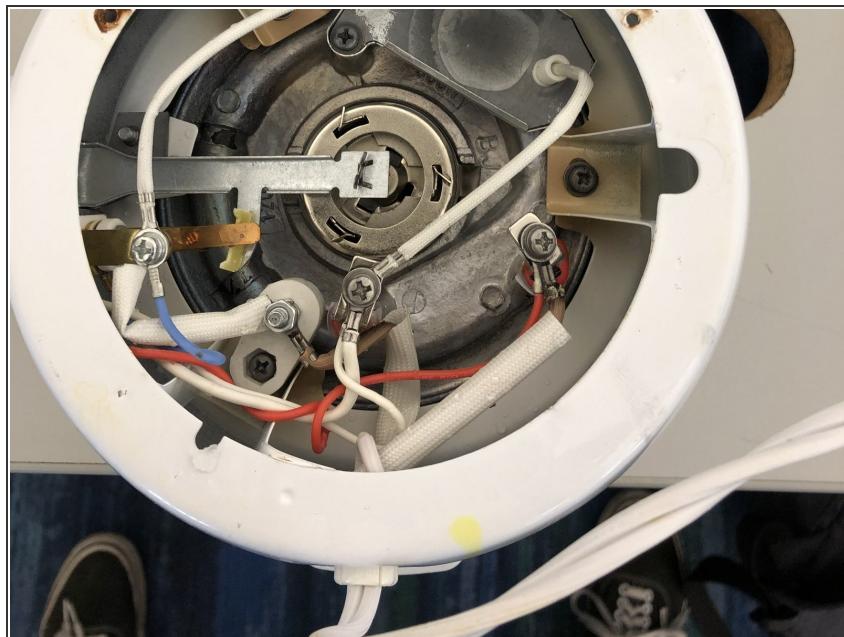


- These wires connect the rice cooker to a 120 VAC power source.

Step 3 — Remove inductor.

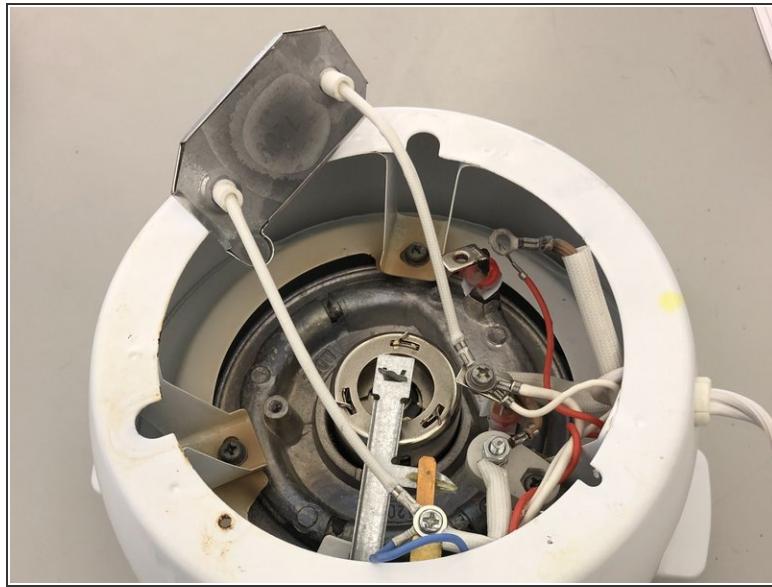

- This is the rectangular metal piece of metal connected to the same nodes as the power wires. See pictures.

Step 4 — Unscrew all bolts to remove all control and power wires.

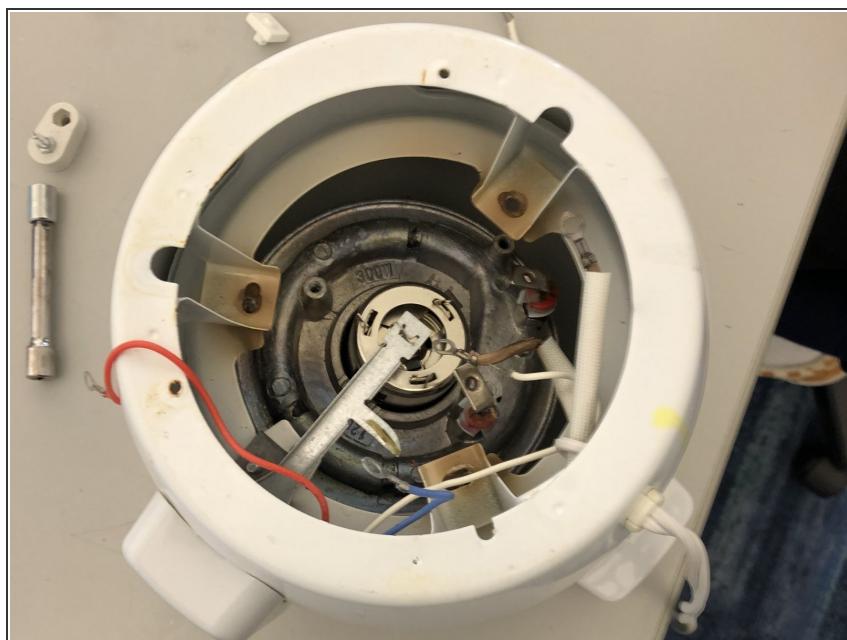

- Once this step is complete, the rice cooker (flipped upside down) should look like the photo.

Step 5 — Undo metal fixture that holds spring system to the heating plate.



- You have to bend the metal (shown in the picture) so that it will fit through the slot. Once this is done the pressure spring will separate from the heating plate.

Step 6 — Remove heating plate from rice cooker.




- Insert wisdom here.

Step 7 — Remove control switch and LED plastic housing.



- Insert wisdom here.

Step 8 — Remove LED printed circuit board.

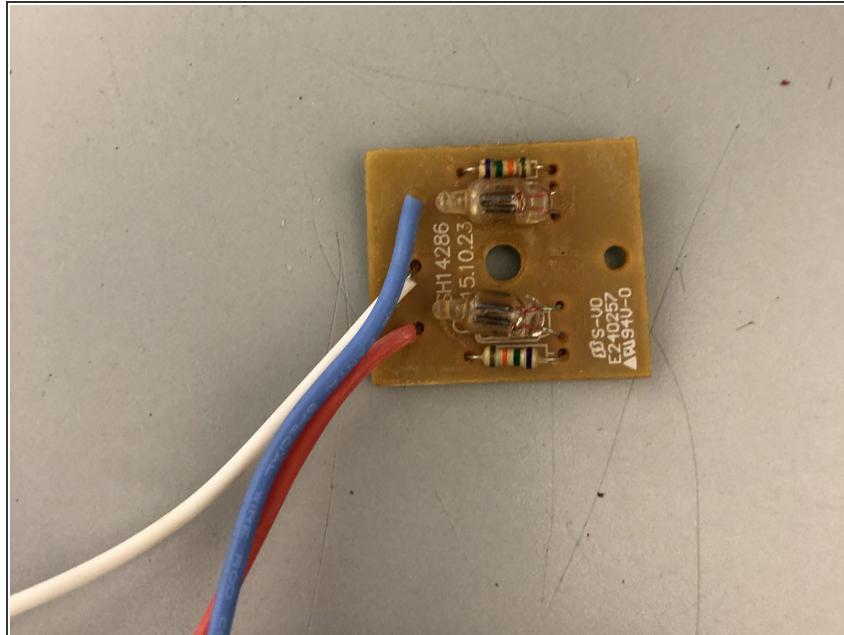

- Insert wisdom here.