




# Aspen A720 Back Cover Replacement

How to replace an Aspen A720 back cover.

Written By: Ben

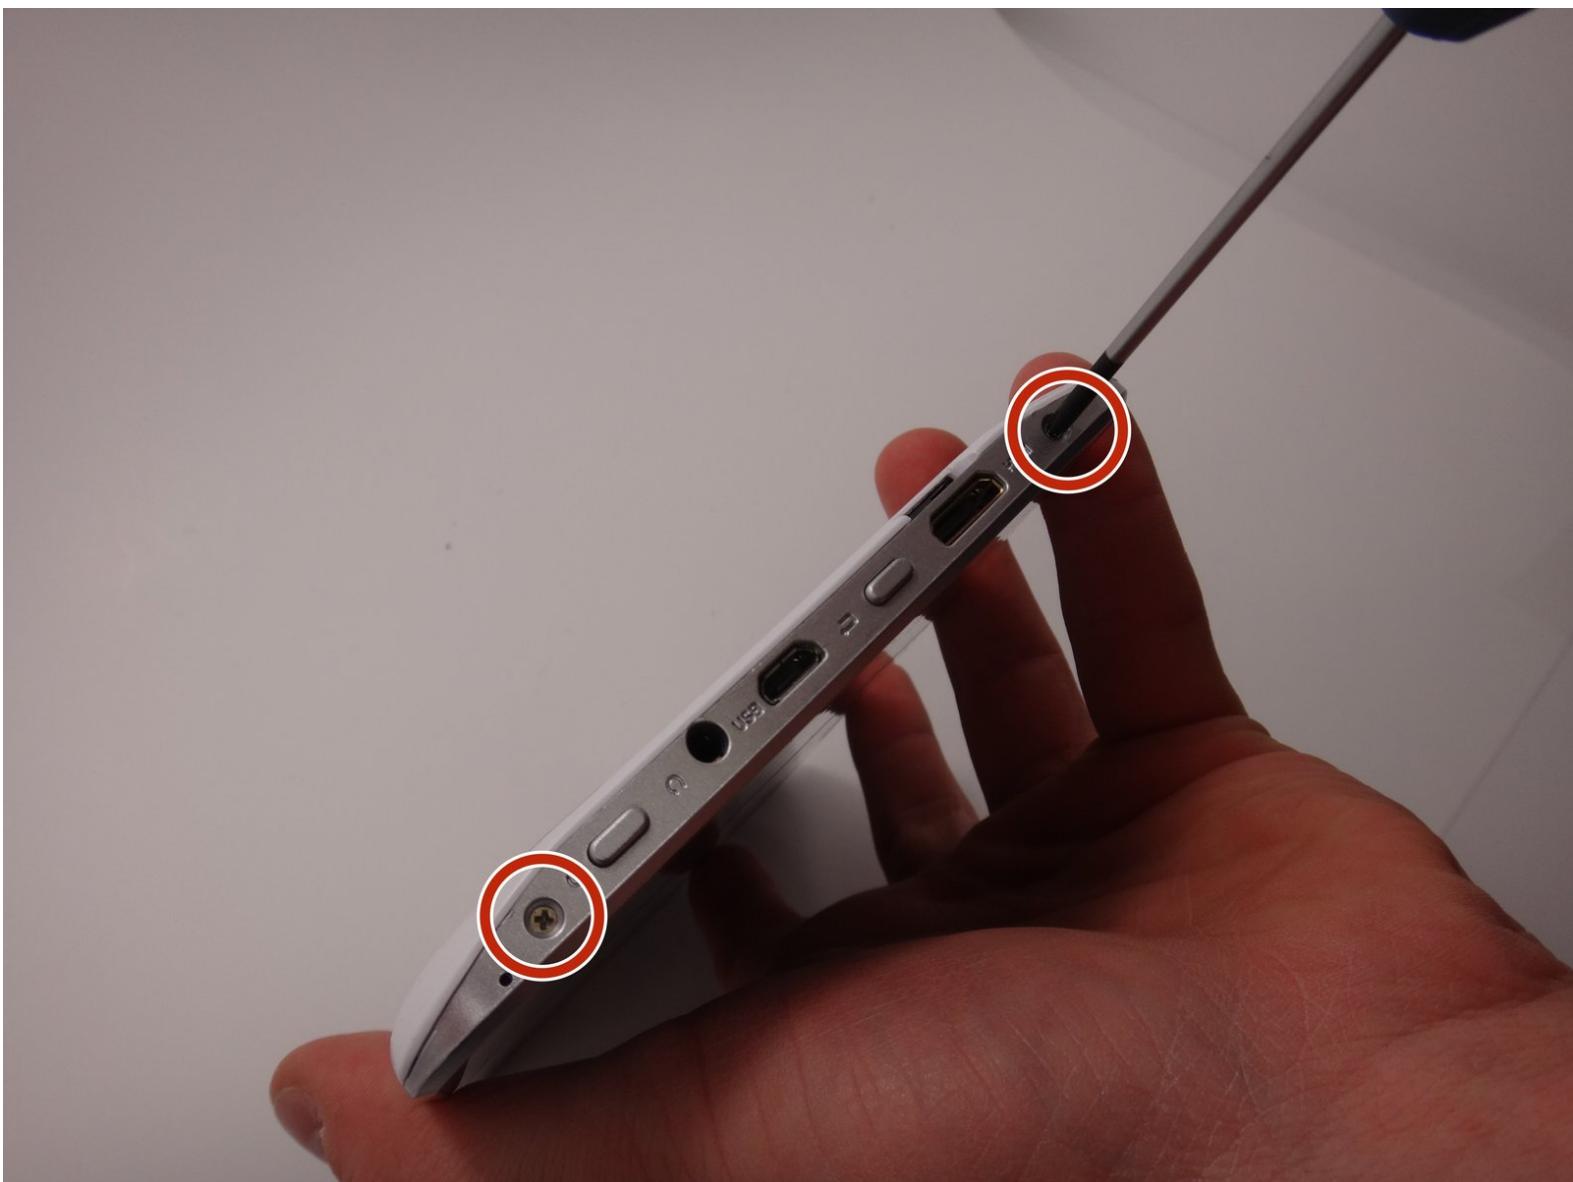


## INTRODUCTION

All of the key components that could fail are accessed by removing the Aspen A720 back cover. The process will include removing a couple of screws and then utilizing the plastic opening tool to pry the cover apart from the body of the device.

### TOOLS:

- [Phillips #00 Screwdriver](#) (1)
- [Magnetic Project Mat](#) (1)
- [iFixit Opening Tools](#) (1)

## Step 1 — Aspen A720 Back Cover Replacement

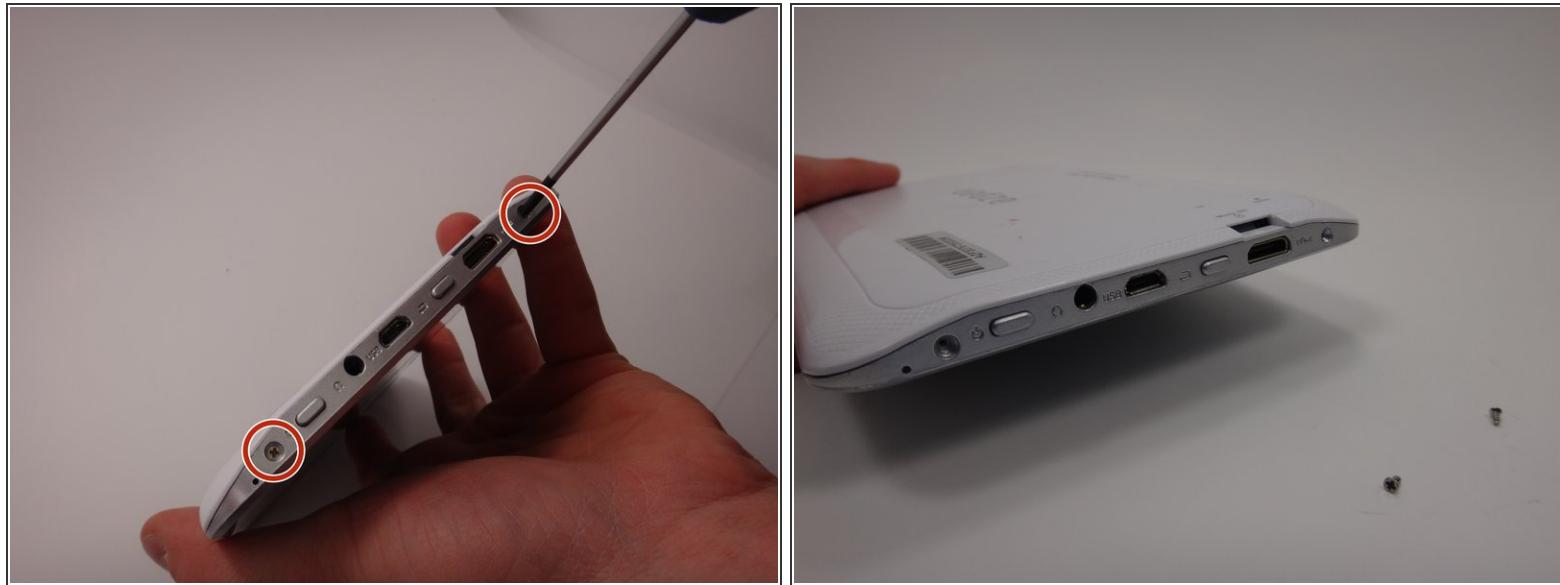

- Use the Phillips # 00 screwdriver to remove the two 4mm screws found on the top edge of the tablet near the power button and mini HDMI port.

## Step 2



- Lay the tablet screen-side down.

## Step 3



- Use the plastic opening tool to pry the white back from the silver frame. Start near the micro SD slot.
- Slide the plastic opening tool around the perimeter of the casing until the back is disconnected.

## Step 4



- Take the white backing off your tablet.

Now all of the components are accessible for maintenance