



Asus A52F Screen Replacement

This guide shows how to replace a broken screen.


Written By: Morgan Hays



 **TOOLS:**

- [iFixit Opening Tools \(1\)](#)
- [Phillips #0 Screwdriver \(1\)](#)

Step 1 — Screen

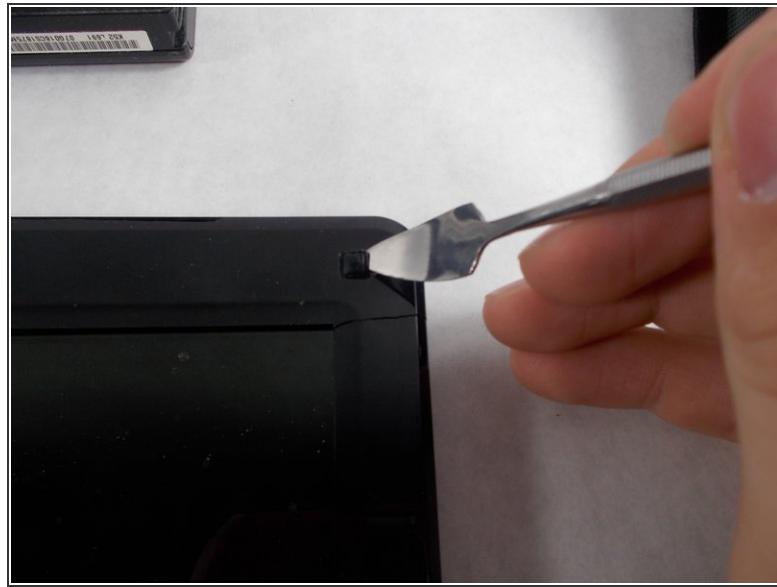


- Locate and remove the rubber pads that cover the screws on the screen.

Step 2




- Remove the six Philips head screws with a Philips 0 screwdriver.

Step 3

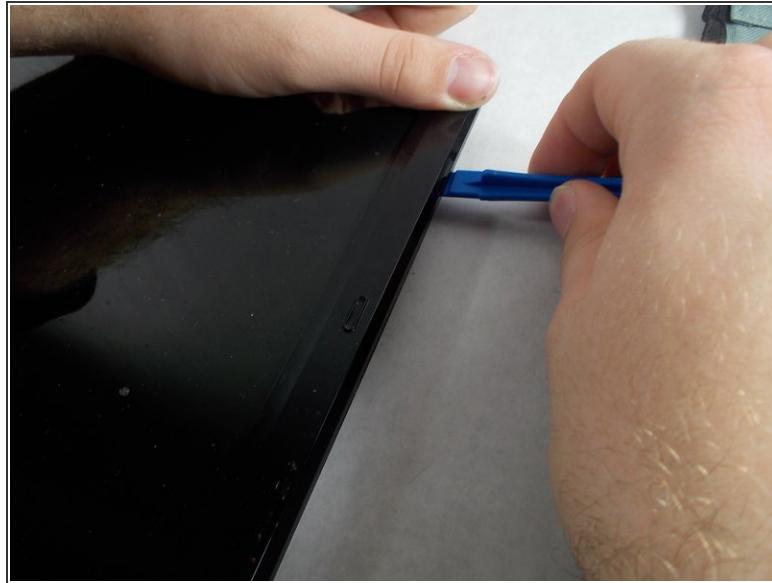


- Using the blue plastic opening tool, separate the plastic border from around the screen carefully.

Step 4

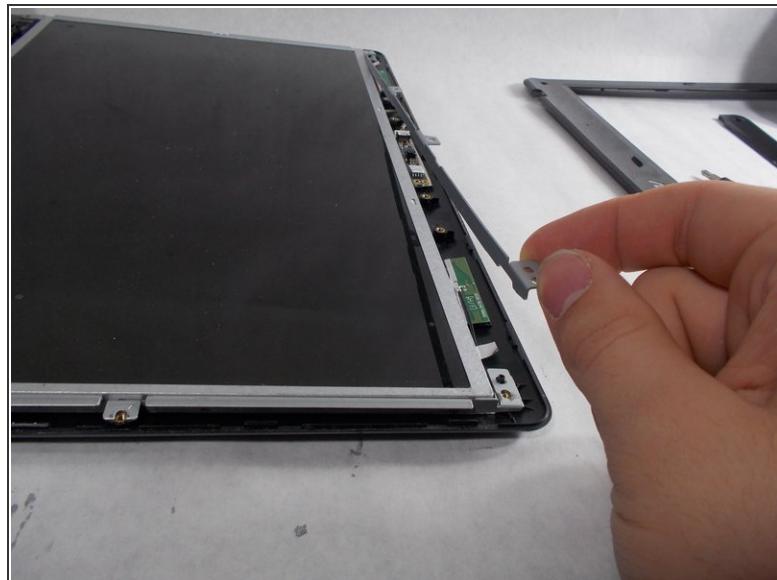

- Lift out metal bar at the top of the screen.

Step 5

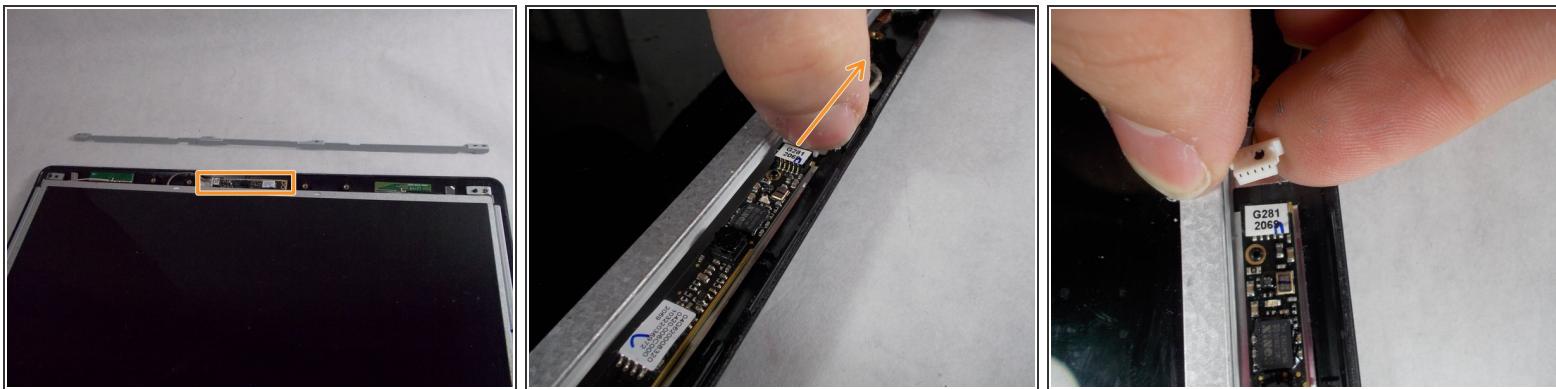


- Locate the webcam at the top center of the screen and the connecting wire on the left of the webcam.
- Gently wiggle the wire to the left to disconnect the webcam.

Step 6



- Carefully pull the screen toward you and lay it on the keyboard.
- Peel the webcam wire off the back of the screen.

Step 7

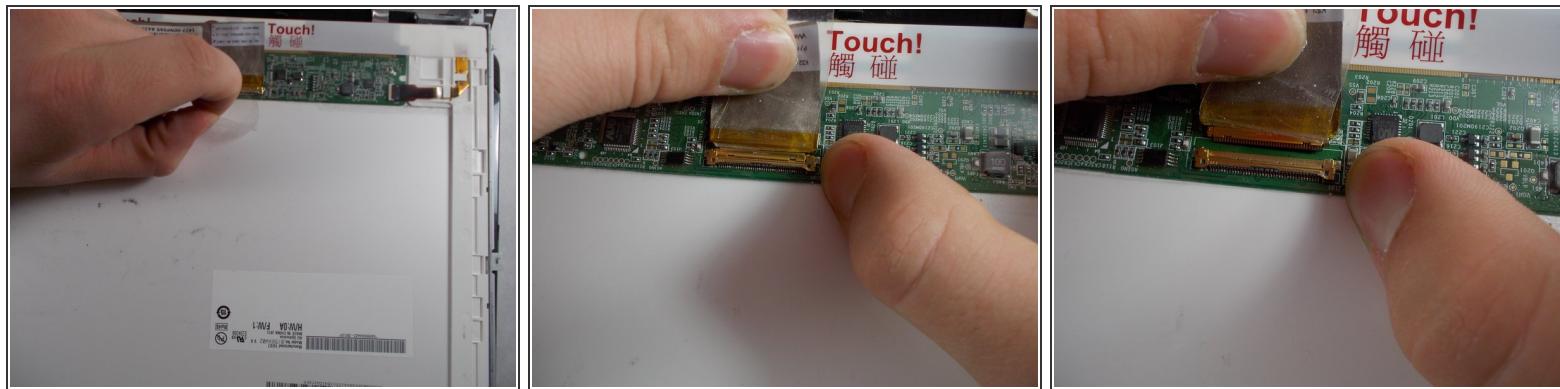

- Peel back the tape holding the screen cable in its socket.
- GENTLY pull the tape and cable away from you to remove the cable from the socket.
- The screen is now disconnected and can be removed.

To reassemble your device, follow these instructions in reverse order.