



# Asus A52F XE2 Battery Replacement

Replace the battery of the Asus A52F XE2.

Written By: Morgan Hays



## INTRODUCTION

Battery life of any device will eventually shorten over time. This guide will show you how to replace the battery of the Asus A52F XE2.

## Step 1 — Battery



- Place the laptop face down with the battery facing away from you.
- Locate the two buttons next to the battery.
- Slide the right slider to the unlocked (red) position.

## Step 2



- Hold the left button to the left.
- Slide the battery with your other hand away from you and it should disconnect.

To reassemble your device, follow these instructions in reverse order.