



Asus A53E-ES92 Battery Replacement

How to take out and replace battery on the Asus A53E-ES92 laptop. No tools are required for this replacement besides a new replacement battery.

Written By: Robyn Lam



INTRODUCTION

This guide will show you how to remove a battery on an Asus A53E-ES92.

Step 1 — Battery

- Place the device face down.



Step 2



- Shift both of the unlocking keys outward.
- You should be able to see the red line on the left key after shifting it outwards.

Step 3



- Pull battery away while simultaneously pushing the right key outwards. Remove the battery from the device.
- You do not need to keep pushing the left button outwards if you see the red line, as it is locked.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2018-12-16 09:43:40 PM.