



Asus A53E-ES92 Hard Drive Replacement

How to remove and replace the hard drive. A screwdriver and new hard drive will be needed to perform this replacement.

Written By: Robyn Lam



INTRODUCTION

This guide will show you how to remove the hard drive on an Asus A53E-ES92.

TOOLS:

- Phillips #0 Screwdriver (1)

Step 1 — Hard Drive



- Turn laptop over to expose the bottom panel

Step 2



- Use a Phillips #0 screwdriver to remove the two screws circled in picture.

Step 3



- Place fingers on panel as shown below.
- Apply slight force while gently sliding the panel away from the laptop.
- Remove panel.

Step 4




- Locate hard drive, circled in red.

Step 5



- Remove the four screws with a Phillips #0 screwdriver.

Step 6

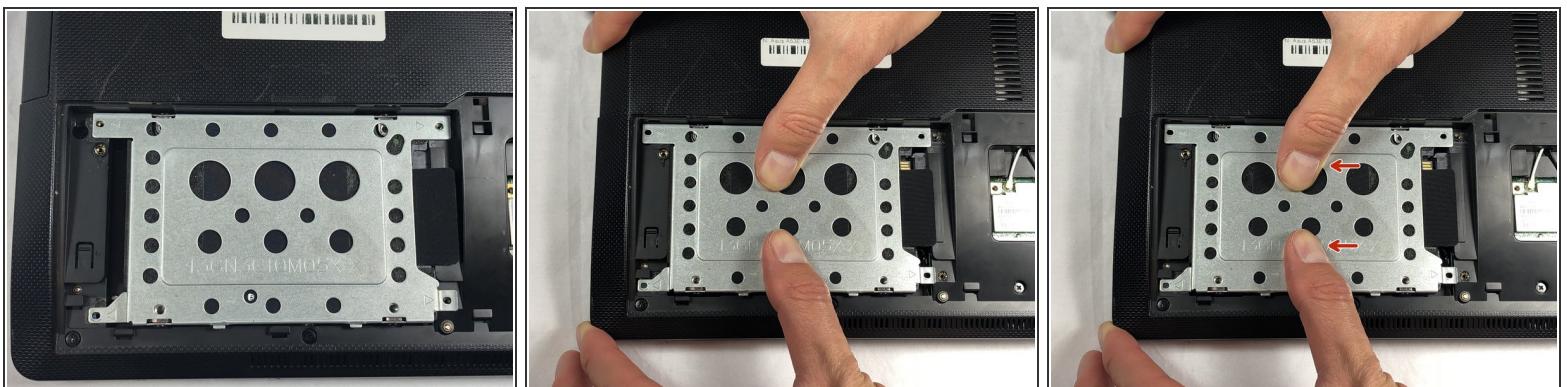

- Apply slight pressure on the hard drive.
- Slide hard drive to the left to unlock it.

Step 7



- Remove the hard drive from the device.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2019-07-27 07:38:47 AM.