




Asus Chromebook C101P Keyboard Replacement

How to remove an Asus Chromebook C101P keyboard.

Written By: Bryan Acosta

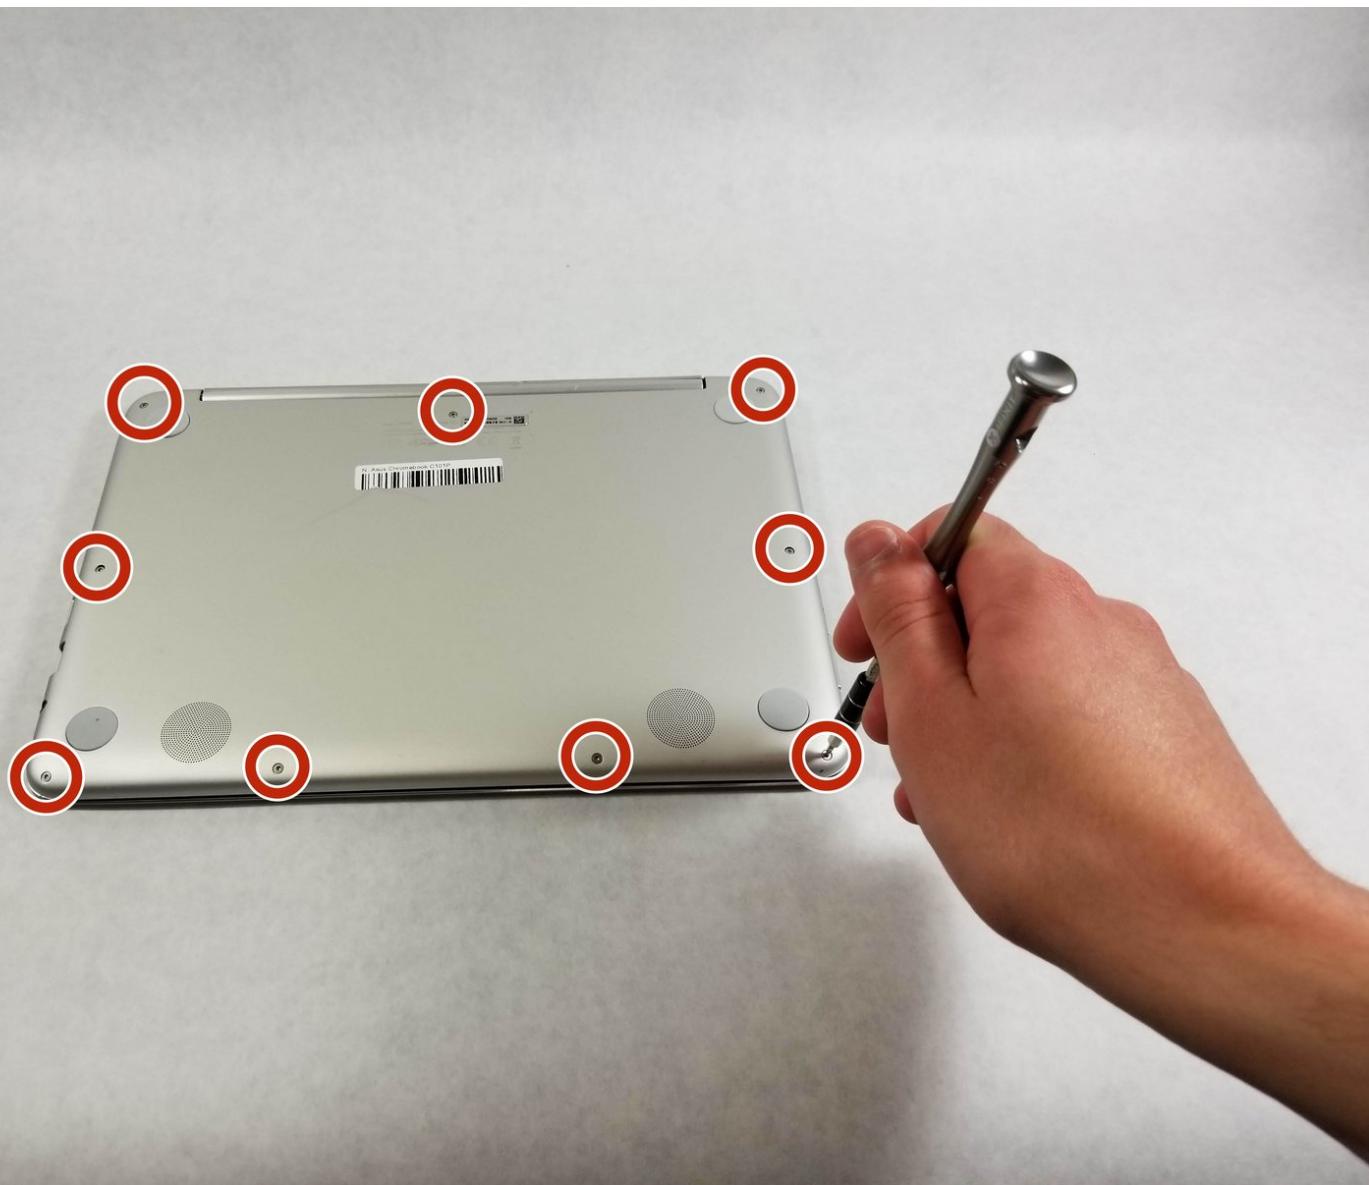

INTRODUCTION

The keyboard of the Asus Chromebook C101P is not too difficult to remove and is the most important step to replace other parts. If your keyboard ever fails to work, for example, after being covered in water and not responding, all you need to do is unscrew a few screws, swap the keyboard, and screw the case tight. **It is important** that you unplug and shut your Chromebook off before attempting this replacement in order to prevent electrocuting yourself.

TOOLS:


- [T5 Torx Screwdriver](#) (1)
- [iFixit Opening Tools](#) (1)
- [Tweezers](#) (1)

Step 1 — Keyboard



- Flip the Chromebook so that the bottom is facing up.
- Remove the eight T5 Torx screws.

Step 2

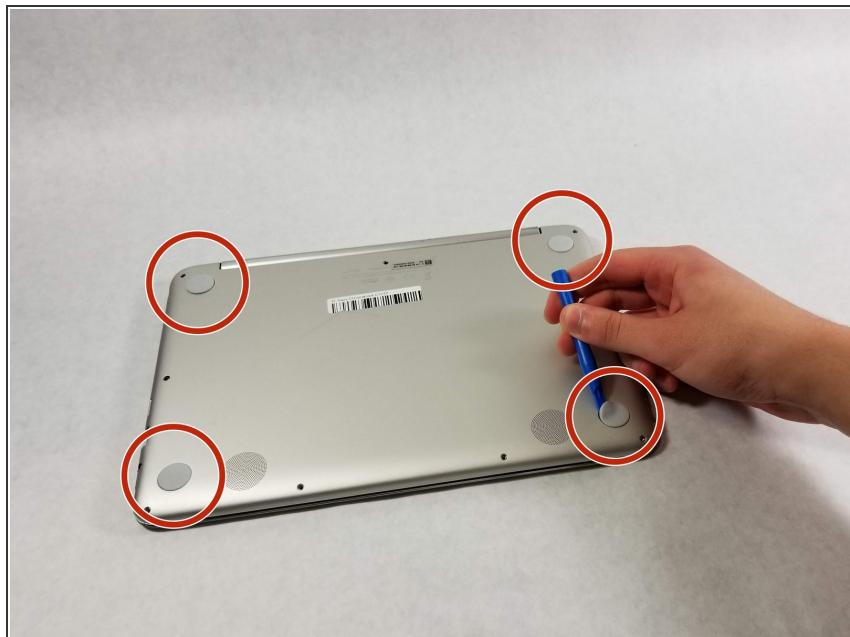


- Remove the four rubber grips on the bottom side of the Chromebook using an opening tool.

Step 3




- Remove the four black screws where the rubber grips were.

Step 4

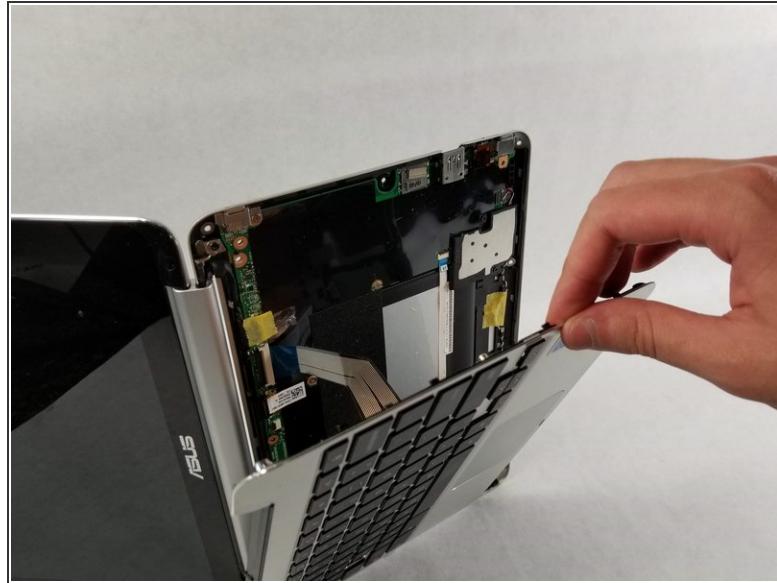

- Reorient the Chromebook so the right side is facing upwards.
- Wedge an opening tool or spudger between the keyboard (upper case) and the lower case of the bottom portion of the Chromebook.

Step 5

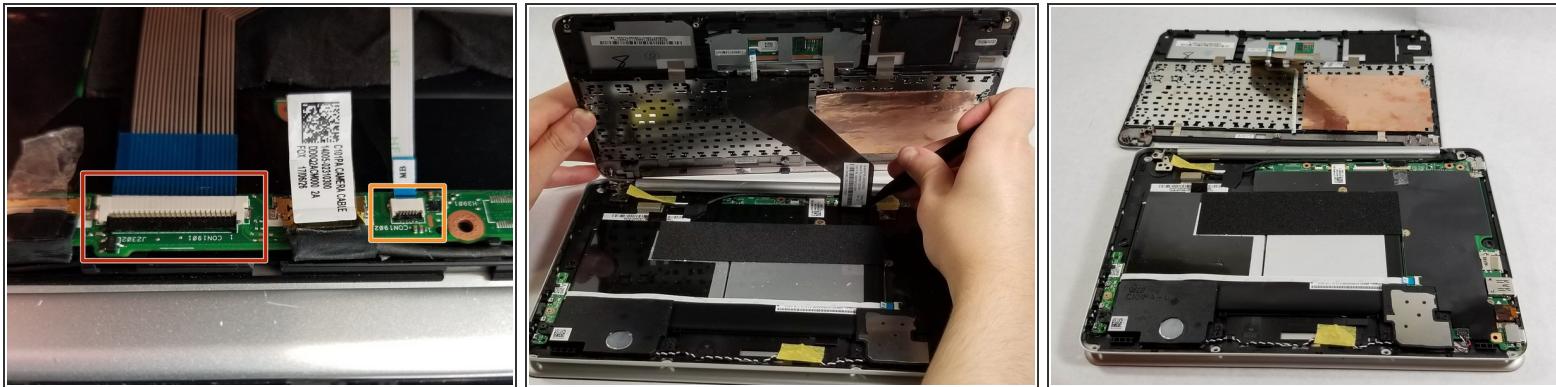

- Pull back the black lever on the base of the cable. While pulling back, take your tweezers and pull back on the large ribbon cable.
- Pull back the black lever on the base of the cable. While pulling back, take your tweezers and pull back on the small ribbon cable.
- Separate the keyboard from the rest of the laptop.

To reassemble your device, follow these instructions in reverse order.