




# Asus Chromebook C201 LCD Screen Replacement

To carefully remove and replace the LCD screen in case of any malfunction to the display.

Written By: Taylor Allen

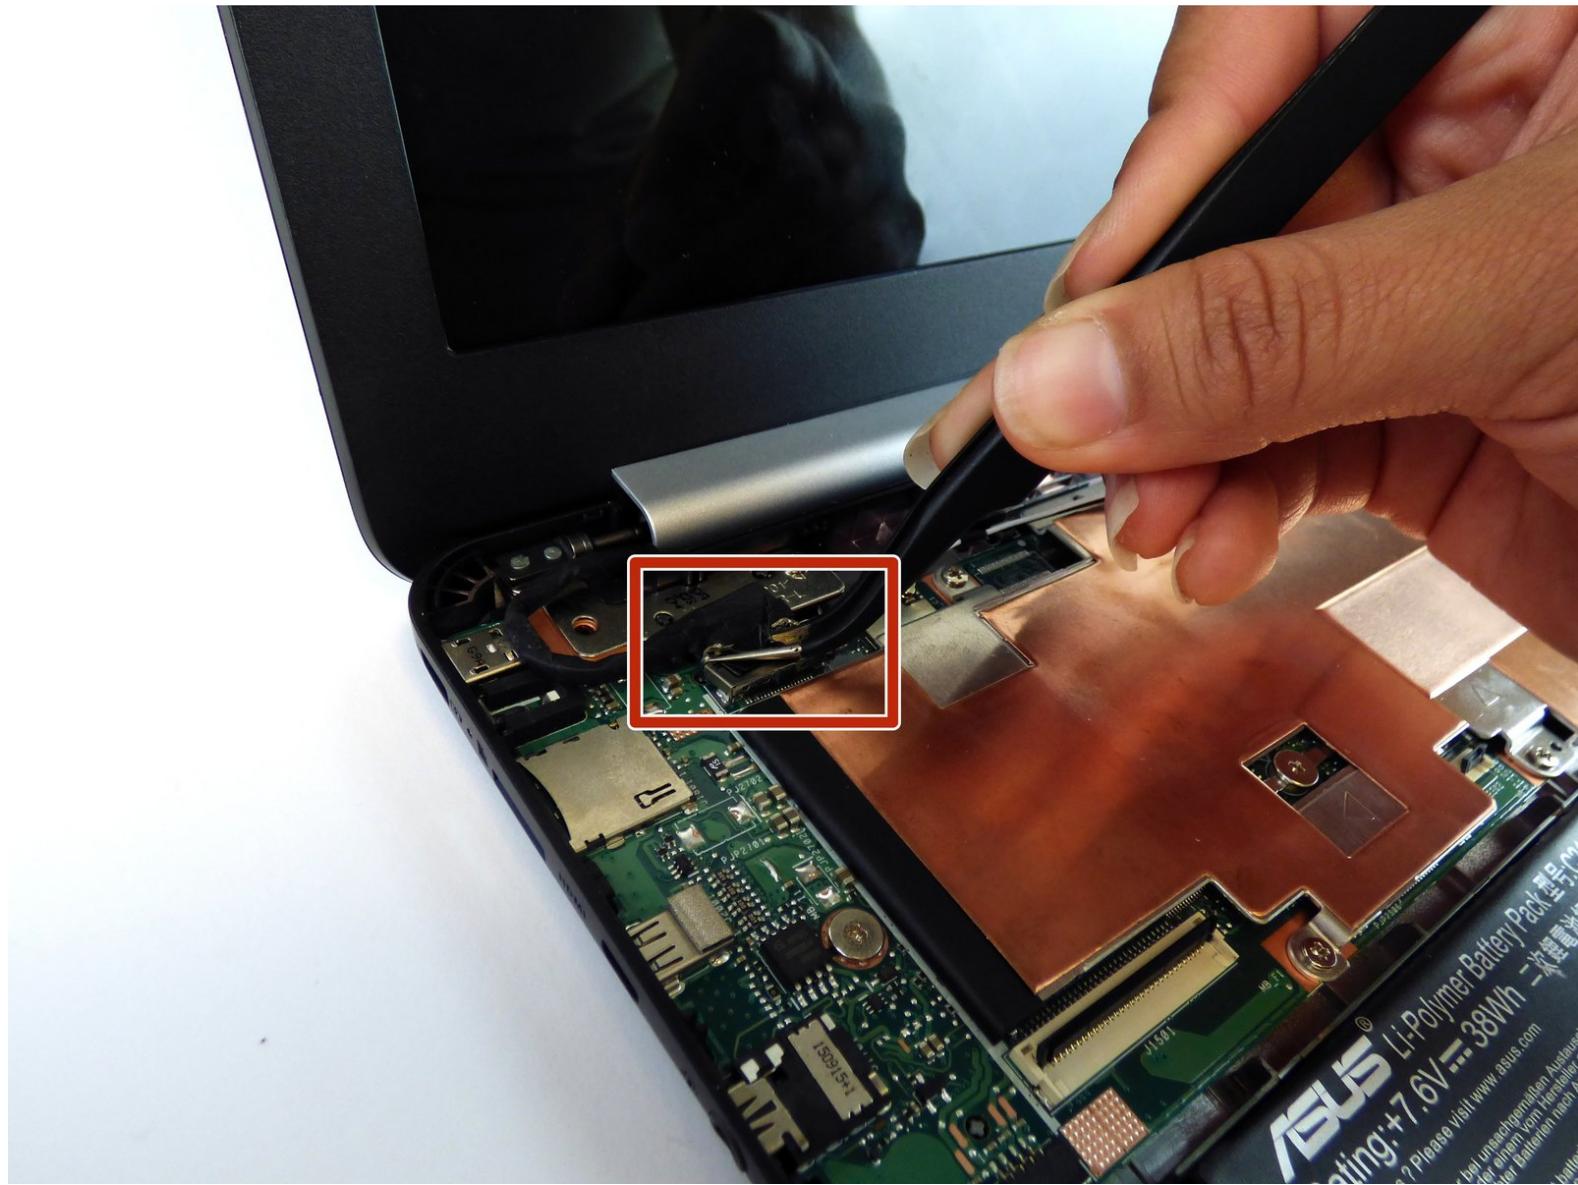

## INTRODUCTION

If your Chromebook is giving you a blank screen or messed up colors, then this guide will help you replace your screen. While following these steps, be sure to ground yourself. Static can short circuit your Chromebook, so be sure to either wear an anti-static wrist strap or work on a surface that does not generate static electricity, like wood tile.

## TOOLS:

- [64 Bit Driver Kit \(1\)](#)
- [Metal Spudger \(1\)](#)
- [iFixit Opening Tools \(1\)](#)
- [Phillips #0 Screwdriver \(1\)](#)
- [Precision Tweezers Set \(1\)](#)

## Step 1 — Palm Rest Assembly




- Flip the laptop upside down with the rear end of the computer away from you.

## Step 2



- Remove the two rear rubber feet by using one of the small, blue plastic spudgers.

## Step 3

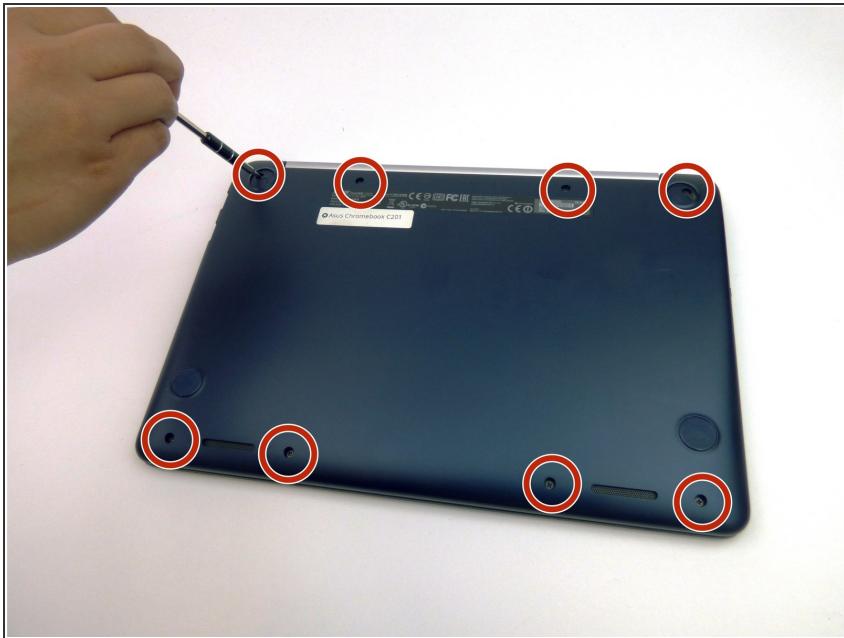


- Use the J0 screwdriver to remove the eight 5mm black screws on the bottom of the laptop, which includes the two that were hidden under the rear rubber feet.

## Step 4




- Turn the laptop on its side. Use a small, blue opening tool to pry the keyboard cover and laptop apart. Begin from the top right, next to the power button, and slowly work your way around to the opposite side until the keyboard cover is detached.

## Step 5

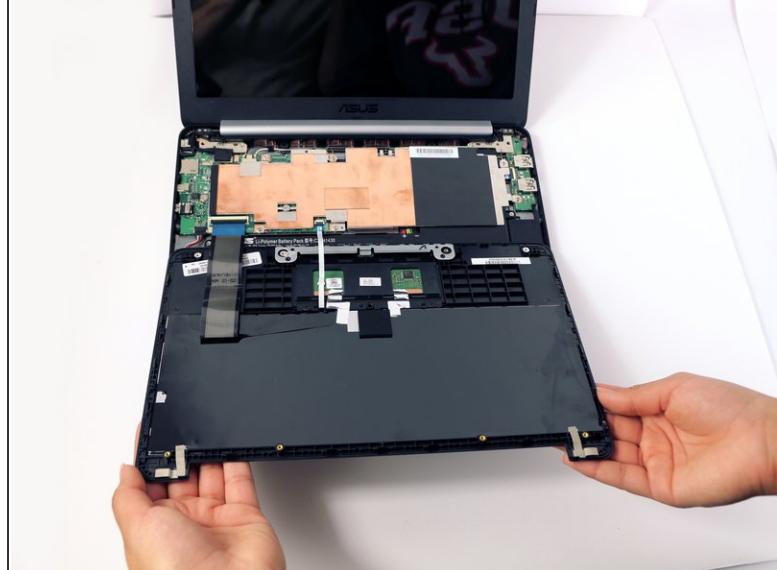


- Gently flip the keyboard cover away from the laptop. Rest it safely upside down so the cables are not strained and are easily accessible.

## Step 6

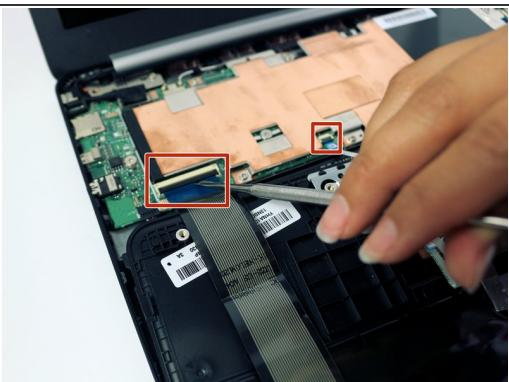


- Use the metal spudger to gently pry up the small tabs that are clamping down on the keyboard cables.

## Step 7

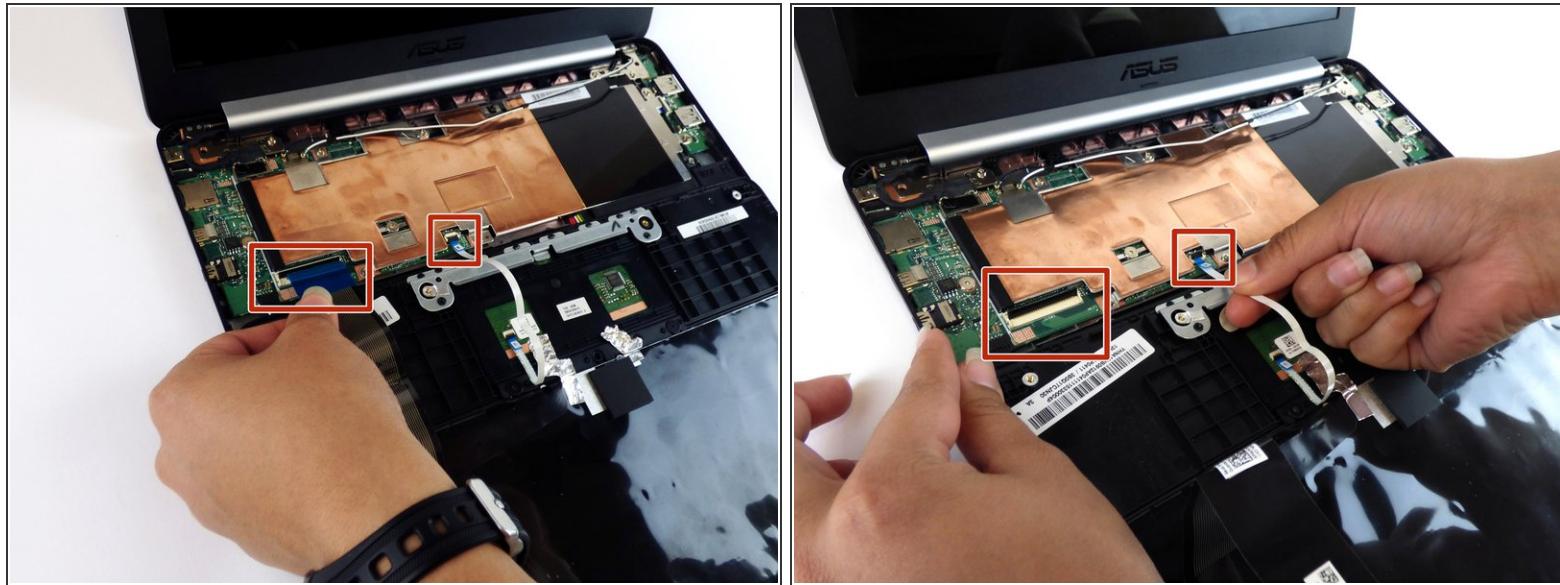


- Carefully pull the keyboard cables out of the connecting ports that are attached to the motherboard.

## Step 8

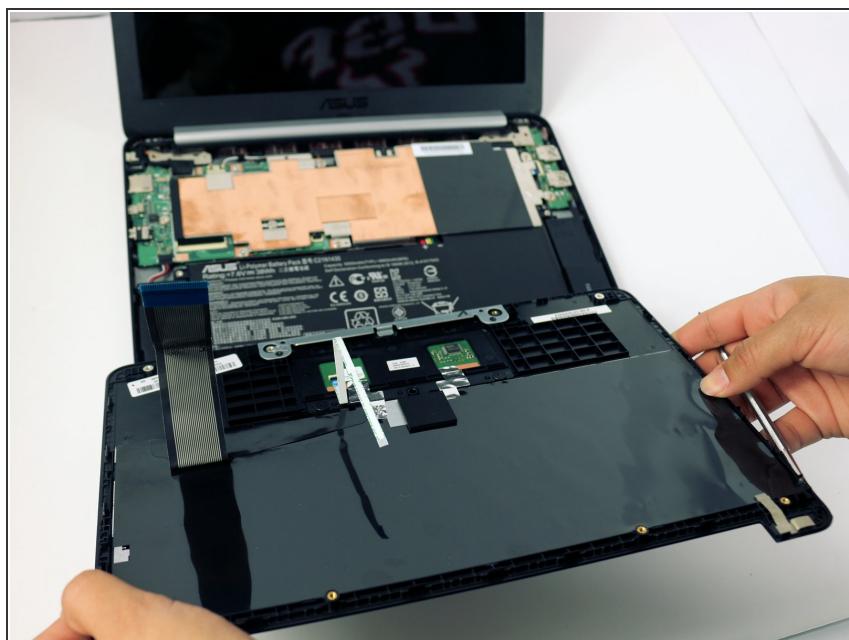


- Remove the keyboard cover and safely place it somewhere face down.

## Step 9 — LCD Screen

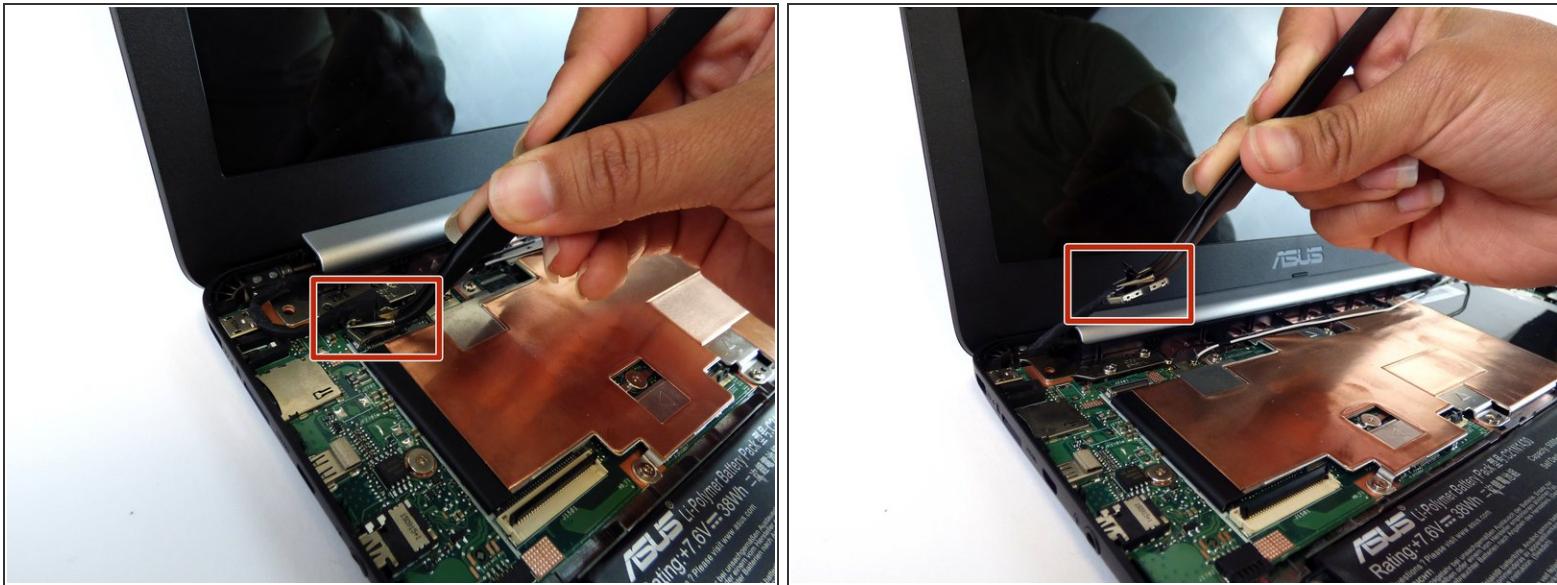



- Locate the LCD cable and its connector which is located in the upper left hand corner of the computer. Carefully flip up the tiny tab and safely remove the cable using precision tweezers.

## Step 10

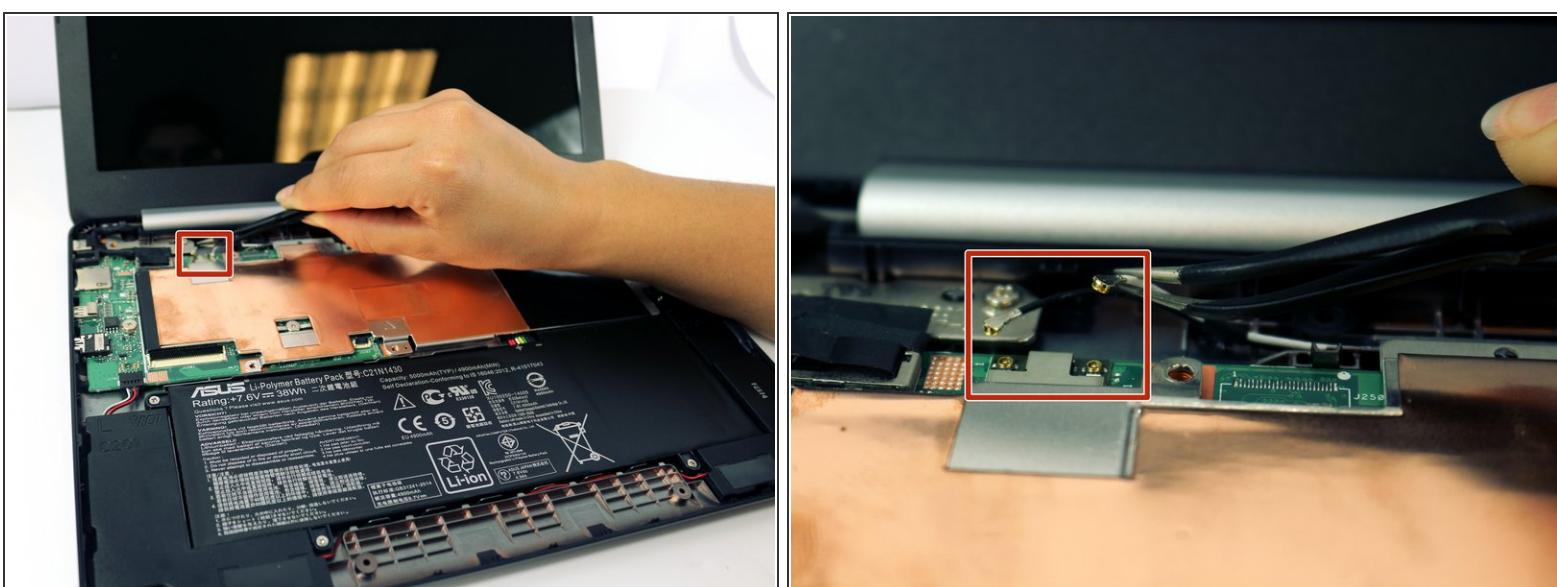


- Disconnect the black and white cables located near the screen hinge.

## Step 11

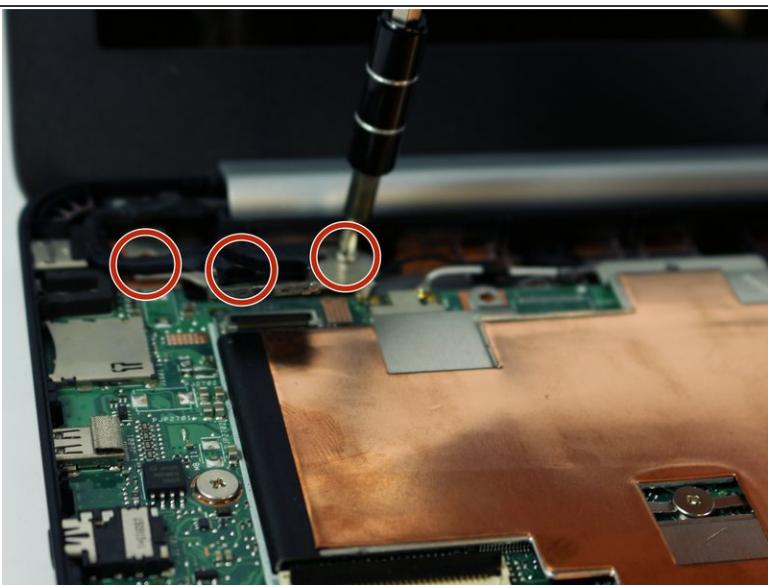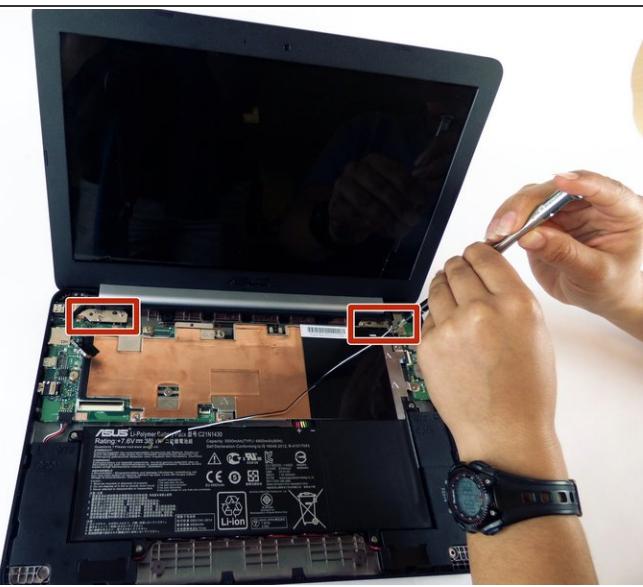

- Remove the 6, 4mm silver screws from the hinges attaching the LCD to the laptop using the J0 Phillips screwdriver.

## Step 12

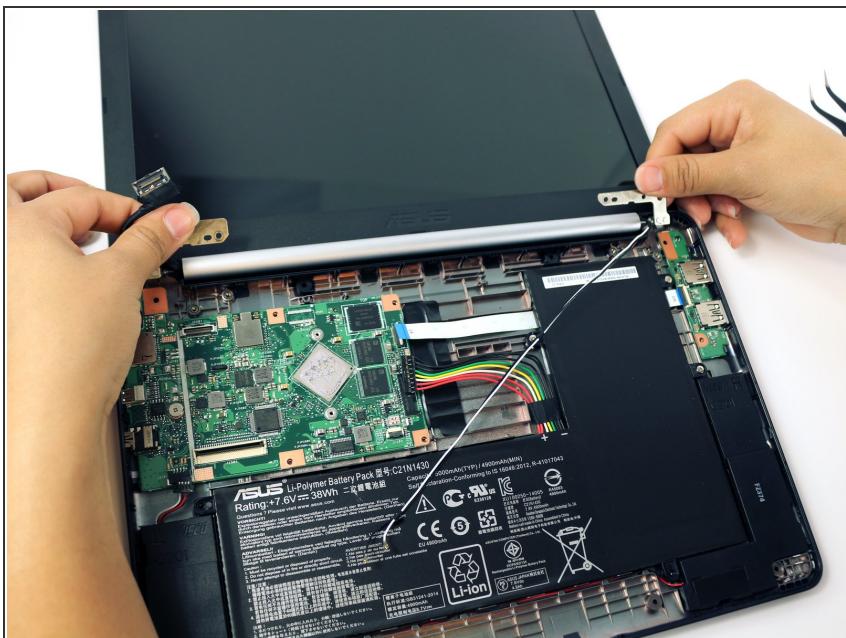

- Turn the hinges to an upright position.

## Step 13




- Carefully pop the LCD screen assembly out of the laptop case.

## Step 14




- Remove the silver cover.
- Make sure to put the cover back in right side (longer side) up when re-installing

## Step 15

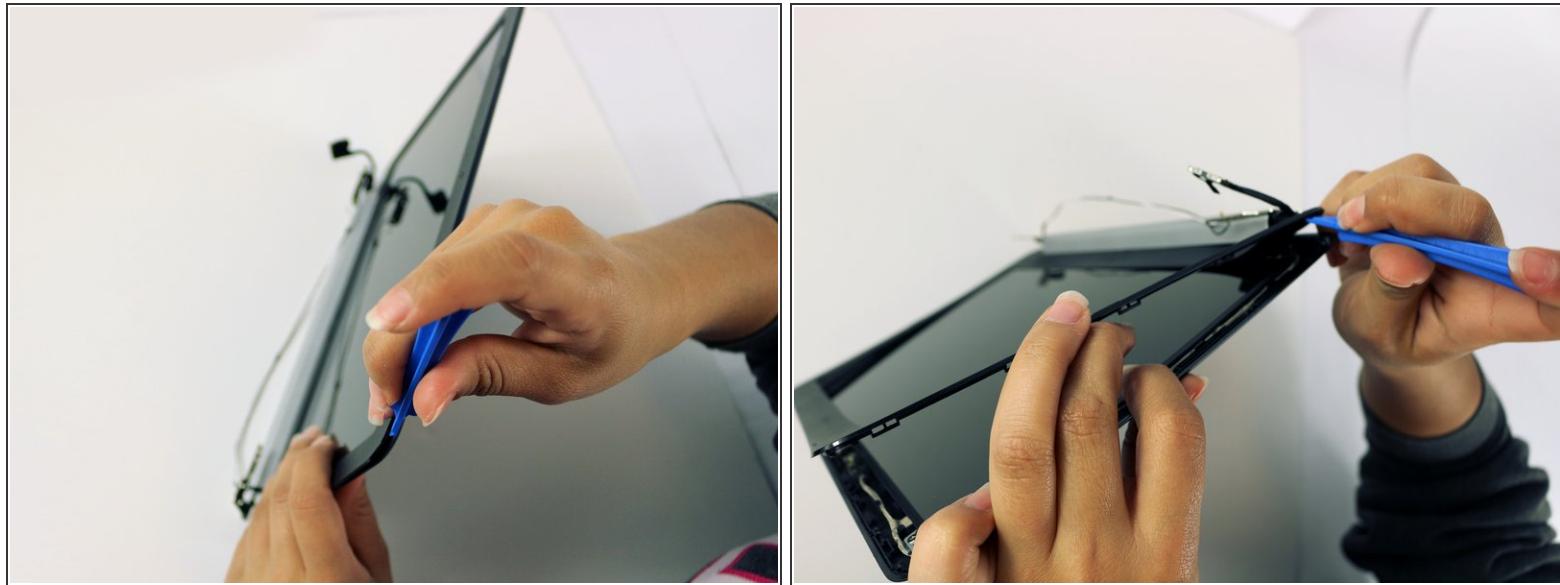


- Use a blue plastic spudger to snap the LCD cover off, working the spudger around the perimeter and completely remove the cover.

## Step 16

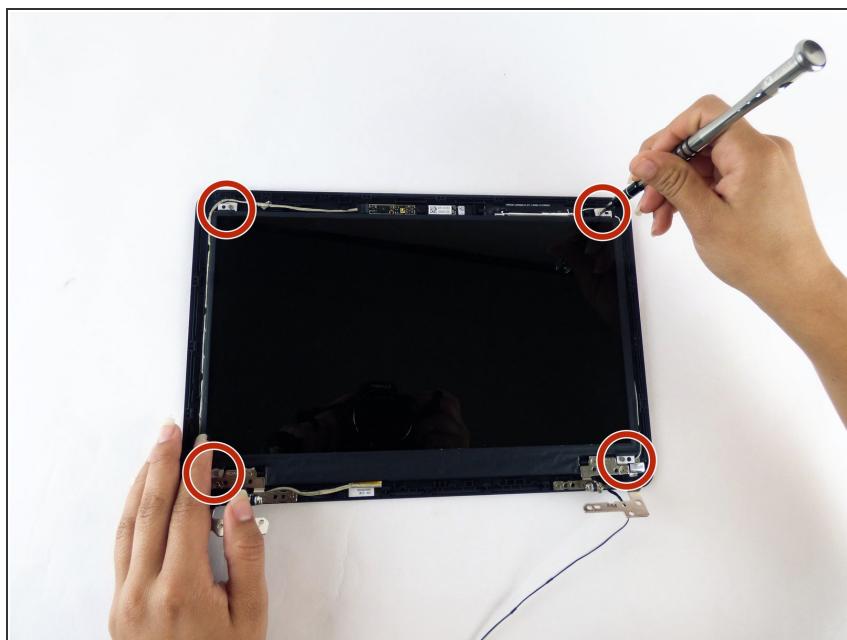


- Remove the 4, 3mm silver corner screws holding in the LCD.

## Step 17

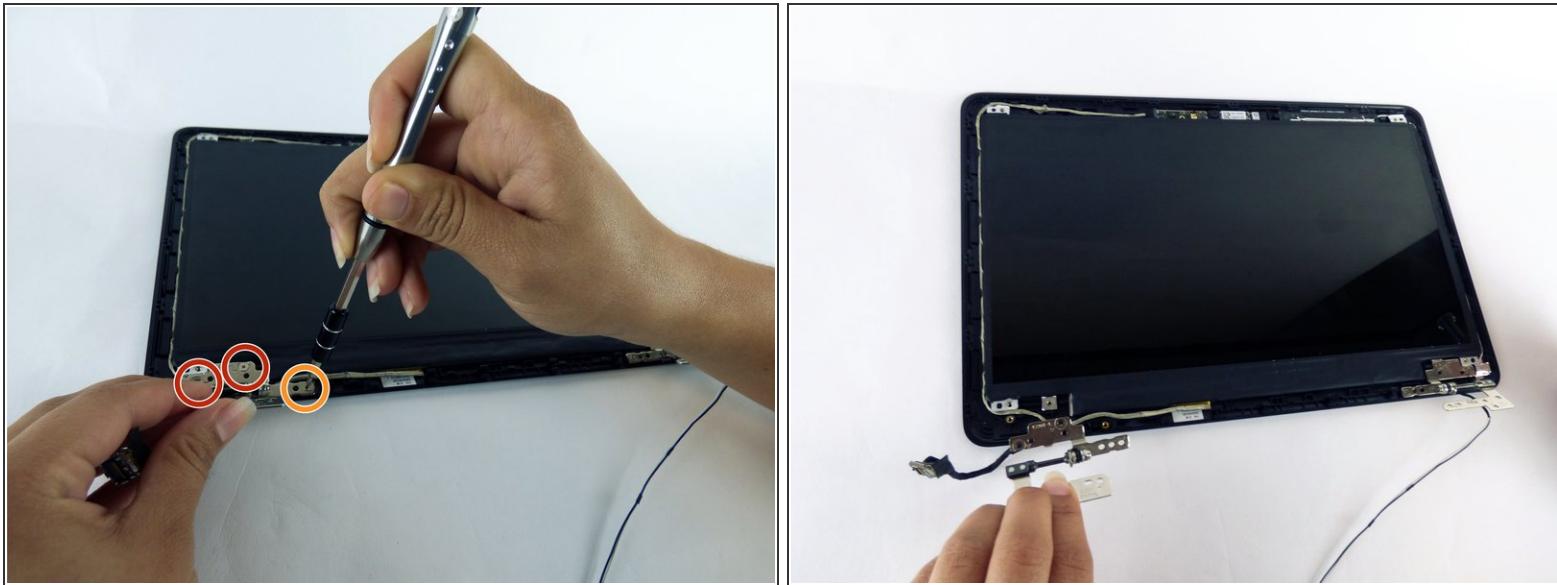

- Remove the left hinge by unscrewing the two 3mm large Phillips head screws.
- Unscrew the one 3mm small Phillips head screw.

## Step 18

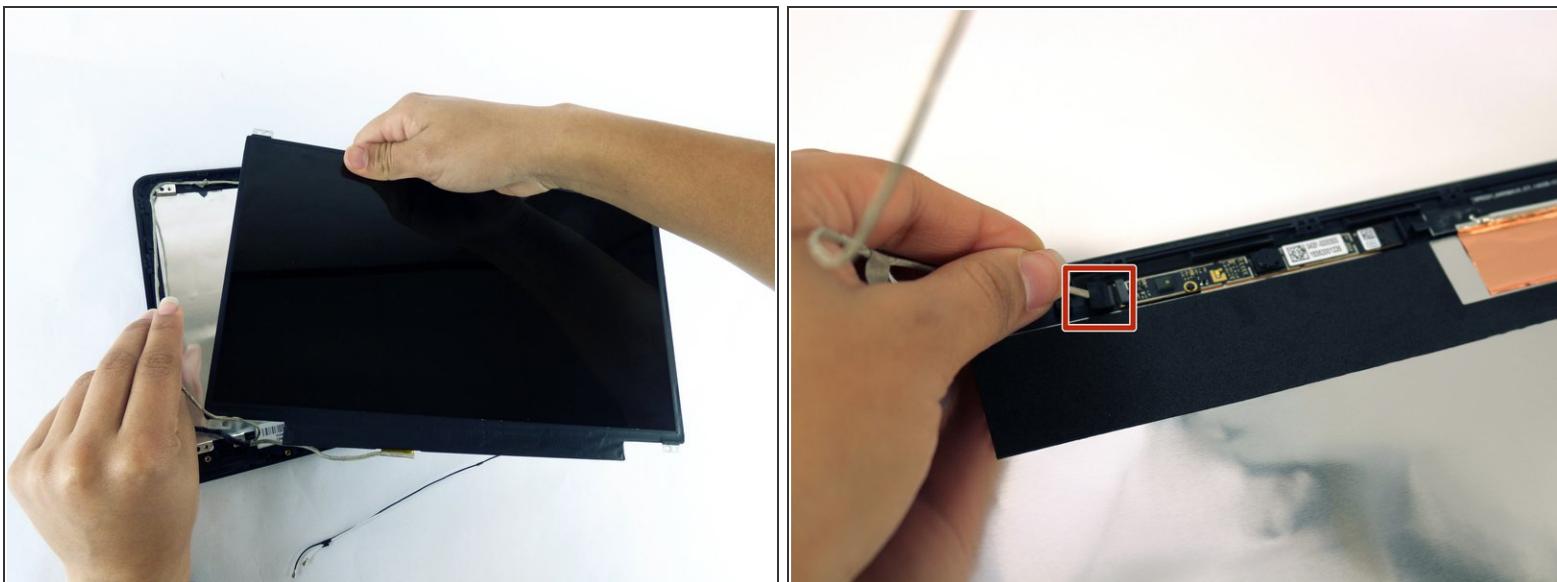

- Carefully lift the screen. Gently unravel and unplug the LCD cord.

To reassemble your device, follow these instructions in reverse order.