



Asus Chromebook C202SA-YS02 Screen Replacement

This replacement guide will show you how to replace the screen. This guide will also show you how to access the screen connection cable.

Written By: Beau Hansen



This document was generated on 2019-09-23 06:23:28 AM (MST).

INTRODUCTION

This guide will show how to replace the LCD screen for the device. Note that the screen is only one piece of the total display, for which there is another guide.

TOOLS:

- [Phillips Head Screwdriver: Size PH1](#) (1)
- [Spudger](#) (1)

Step 1 — Bezel



- Using a flat blade, remove the two screw covers on the front of the bezel. They are attached by adhesive, so you may have to dig at it a little bit.

Step 2





- Unscrew and remove the two Phillips #1 4.5 mm screws that are now visible.

Step 3




- Using the plastic opening tool, carefully pry off the bezel. It will come off entirely, so be careful not to break it.

Step 4 — Screen

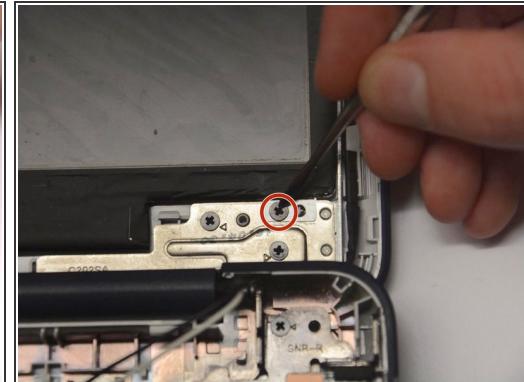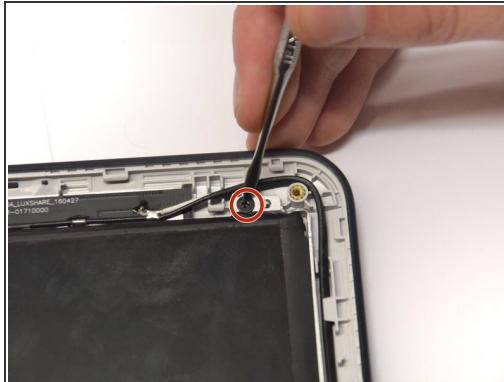

- Unscrew and remove the four screws holding the screen in place.

Step 5

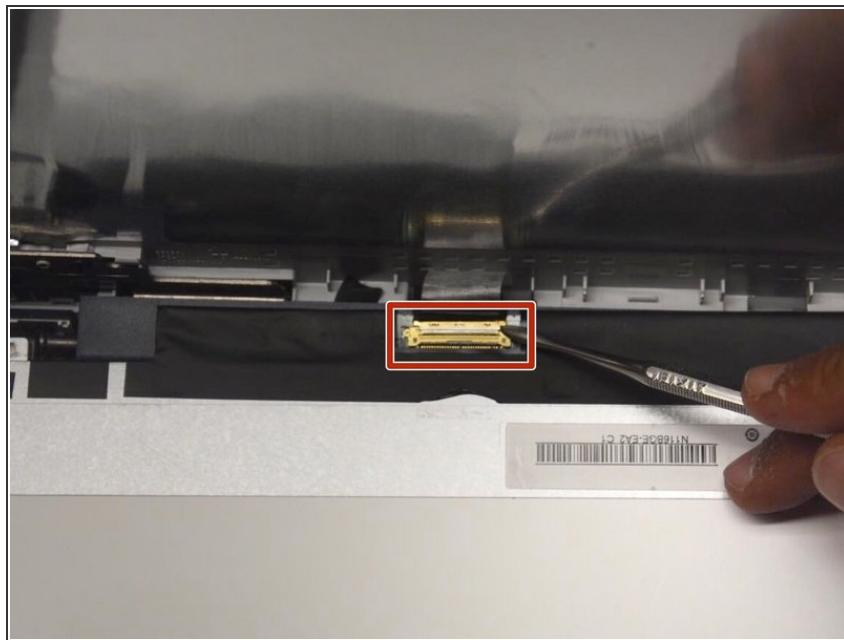

- Fold down screen and remove the screen connector band. You may have to use a small flat blade or a spudger, since the latch is very small.

To reassemble your device, follow these instructions in reverse order.