



Asus Chromebook C300MA DB01 Repair


Screen Replacement

Screen Replacement

Written By: Earl Gill IV



Step 1 — Screen

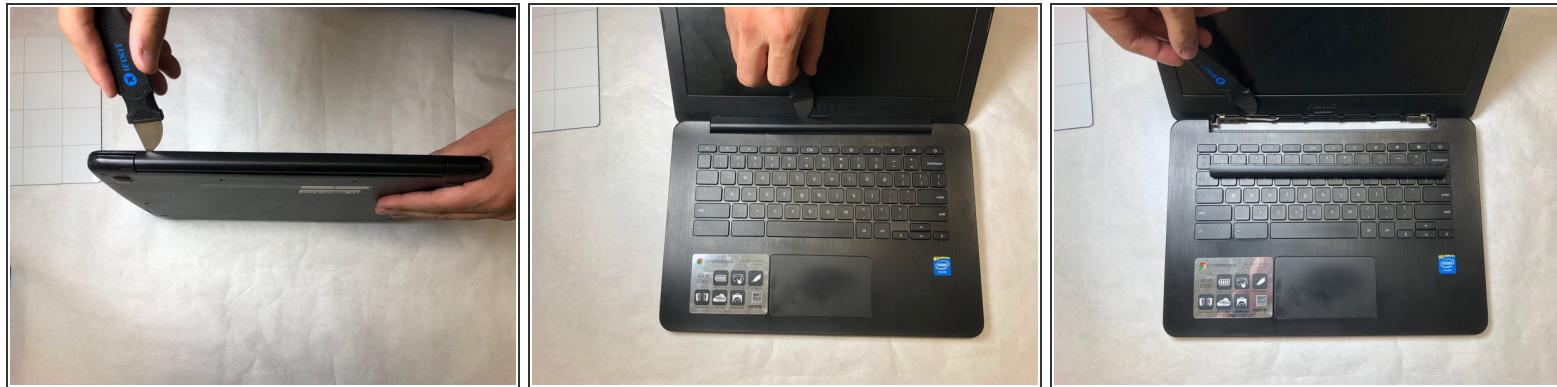

- Use the Jimmy tool from the iFixit Pro Tech Toolkit, or a comparable tool for prying, to pop off the hinge cover.

Step 2



- Run the tool along the edges of the screen frame to free it from its snap connectors.
- Remove the screen frame by hand.

Step 3



- Use a Phillips head screwdriver to remove the four screws on each corner of the screen.
- Separate the screen from the top of the Chromebook.

⚠ Avoid pulling the screen too far away from the device. There is a wire connector at the bottom.

- Use the screwdriver to lift the latch on the wire jack.
- Remove the wires by hand and detach the screen from the device.

To reassemble your device, follow these instructions in reverse order.