



# Asus Chromebook C300MA-BBCLN12 Battery Replacement

Replace your defective battery to bring the power back to your Chromebook.

Written By: Brooke Austin



## INTRODUCTION

This guide will show you how to open the casing on your Chromebook and remove your battery to replace it.

### TOOLS:

- [Phillips #00 Screwdriver](#) (1)
- [Tweezers](#) (1)
- [iFixit Opening Tools](#) (1)
- [Spudger](#) (1)

## Step 1 — Battery



- Remove the eight 9.0mm Phillips #00 screws.
- Remove the three 6.0mm Phillips #00 screws.

## Step 2




- Separate the palm rest assembly from the bottom housing using the plastic opening tool.

*(i)* It is recommended that you start from a corner and run the plastic opening tool along the edge of the housing.

**⚠** Lift the palm rest assembly slowly to prevent damaging the two cables that connect it to the motherboard.

## Step 3

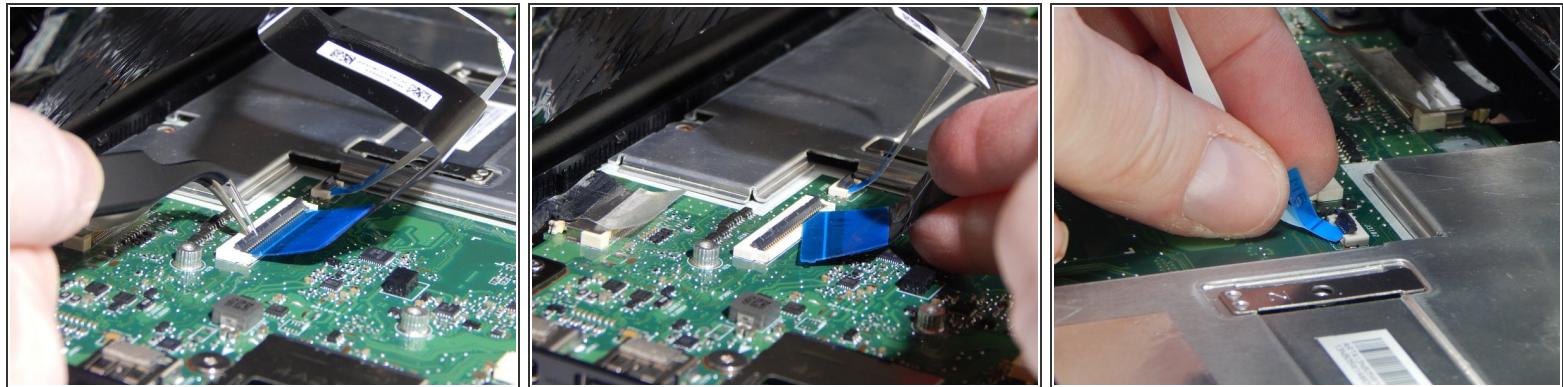


- Flip back the hinges on the connectors that secure the wide black cable and the narrow white cable using the tweezers.
- Disconnect the wide black cable from the motherboard by pulling the blue cable tab away from the connector.
- Disconnect the white ribbon cable from the motherboard by pulling the blue cable tab away from the connector.

## Step 4



- Remove the six 6.0mm Phillips #00 screws that secure the battery to the bottom housing.

## Step 5

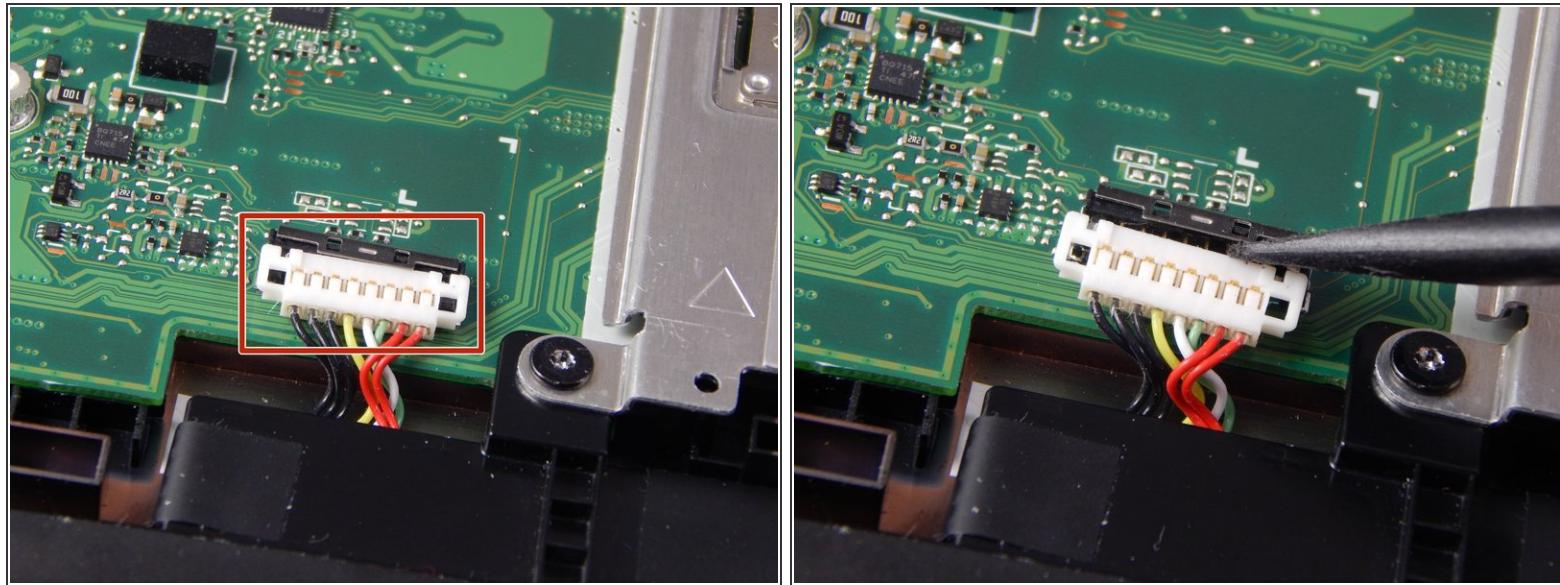

- Disconnect the bundled cable connector that attaches the battery to the motherboard using the small plastic spudger.

## Step 6



- Remove the battery from the bottom housing.

To reassemble your device, follow these instructions in reverse order.

This document was generated on 2019-09-28 03:17:26 PM (MST).

