



# Asus Chromebook C300MA-BBCLN12 Display Replacement

Replace broken Asus Chromebook C300MA-BBCLN12 LCD display screen.

Written By: Brooke Austin



## INTRODUCTION

This guide will show you how to open the casing on your Chromebook and replace the LCD display.

### TOOLS:

- [Phillips #00 Screwdriver](#) (1)
- [Tweezers](#) (1)
- [Spudger](#) (1)

## Step 1 — Display



- Wedge the tip of the plastic spudger between the outer display casing and the inner display panel liner.
- Separate the outer display casing from the inner display panel by sliding the plastic spudger around the perimeter of the display.
- *(i)* It is necessary to pull the inner display panel firmly when separating it from the outer display casing along the bottom of the device.

## Step 2



- Remove the four 3.0mm PH00 screws from the four corners of the display.
- Grip the edges of the display and tip it forward until it rests on the keyboard.

**⚠** A cable connects the display to the display casing at the bottom. Separate the display panel slowly to prevent damaging the cable.

## Step 3



- Locate the gold cable connector that attaches the display to the bottom of the display housing.
- Peel back the protective tape that covers the gold connector.
- Disconnect the display from the display housing by gripping the sides of the gold display cable connector and pulling away from the bottom of the display.

To reassemble your device, follow these instructions in reverse order.