




Asus Chromebook C300MA-BBCLN12 Key Replacement

Replace a broken or sticky key on your keyboard.

Written By: Lainie Clem

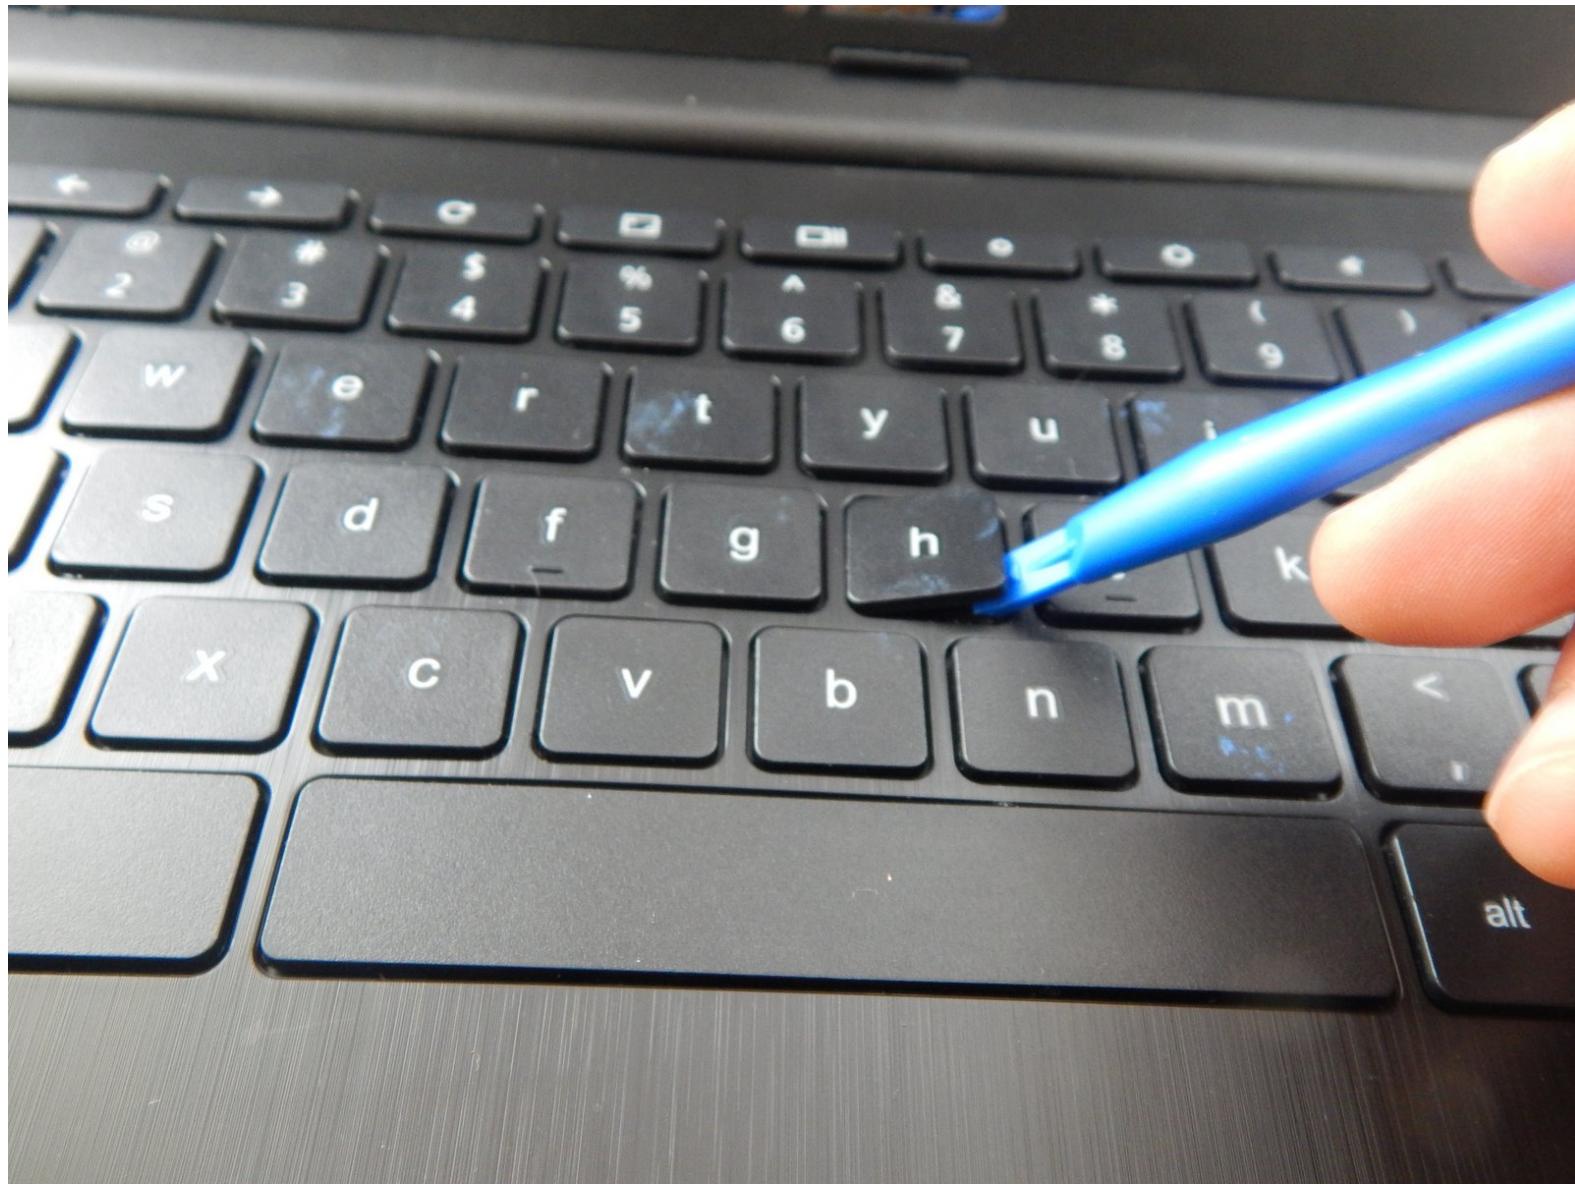

INTRODUCTION

This repair guide provides step-by-step instructions for replacing individual keys of the ASUS Chromebook C300M-BBCLN12 keyboard. The repair may be required if keys are sticking or are not working.

TOOLS:

- [Phillips #00 Screwdriver](#) (1)
- [Tweezers](#) (1)
- [iFixit Opening Tools](#) (1)
- [Spudger](#) (1)

Step 1 — Individual Key



- Wedge the plastic opening tool between the defective key and the keyboard.
- Pivot the plastic opening tool back and forth to loosen the defective key.

Step 2



- Grip the edge of the loosened key with the tweezers and pull upward until it separates from the keyboard.

 Individual keys are designed to snap on and off the keyboard. Remove the defective key and press the replacement key firmly in its place. There will be a clicking sound when it is secured.

To reassemble your device, follow these instructions in reverse order.