




Asus Chromebook C300MA-DB01 Back Cover Replacement

Step-by-step procedure to remove the outer shell of a Asus Chromebook C300MA DB01 laptop.

Written By: Gustavo Moncada Gomez

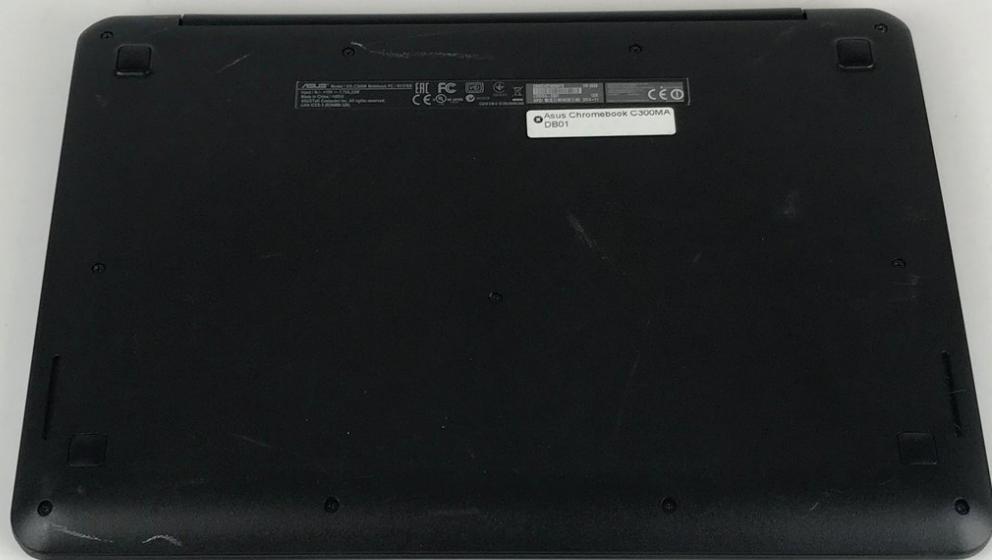

INTRODUCTION

The present repair guide provides a step-by-step procedure on how to remove the back casing on your Chromebook. Be careful when prying off case if it does not budge be sure all screws are removed as to a void breaking the case.

TOOLS:

- [iFixit Opening Tools](#) (1)
- [64 Bit Driver Kit](#) (1)

Step 1 — Back Cover



- Place device bottom-side up.

Step 2



- Remove the eight 9.0 mm Philips screws along the perimeter of the case.
- Remove the three 6.0 mm Philips screws from the center of the case.

Step 3



- Using a plastic opening tool, separate the bottom case at the steam.

Step 4



- Open the Chromebook at hinges.

To reassemble your device, follow these instructions in reverse order.