



# Asus Chromebook C300MA-DB01 Battery Replacement

This guide will show you how to remove and replace the battery of your Chromebook.

Written By: wyatt boyatt



## INTRODUCTION

If your laptop is not turning on this guide will be very useful. Be careful when removing any wires, make sure you are safely opening the clips and not tearing anything.

### TOOLS:

- [iFixit Opening Tools](#) (1)
- [64 Bit Driver Kit](#) (1)

## Step 1 — Back Cover



- Place device bottom-side up.

## Step 2



- Remove the eight 9.0 mm Philips screws along the perimeter of the case.
- Remove the three 6.0 mm Philips screws from the center of the case.

## Step 3




- Using a plastic opening tool, separate the bottom case at the steam.

## Step 4




- Open the Chromebook at hinges.

## Step 5 — Battery

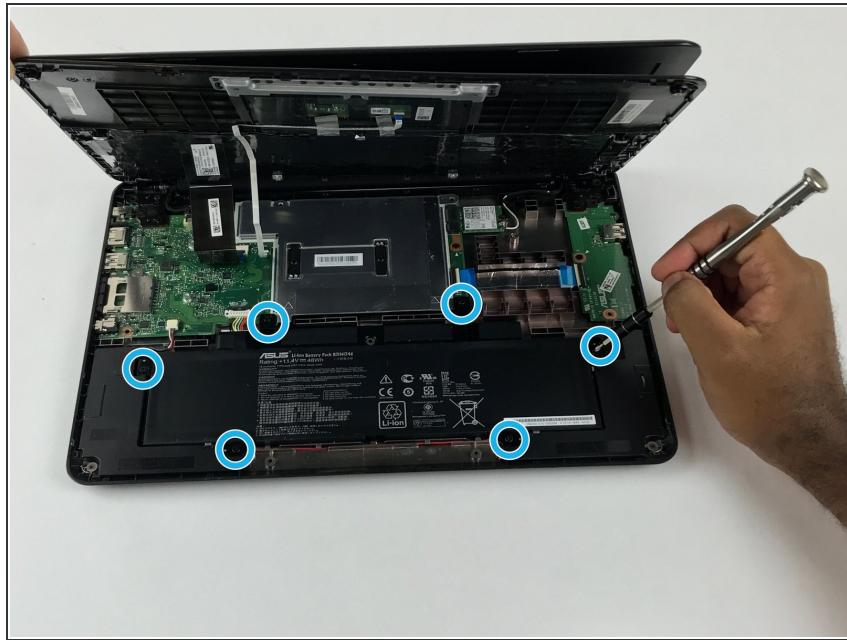

- Remove the 6 6.0mm Philips screws, using the 64 bit driver from around the battery.

## Step 6

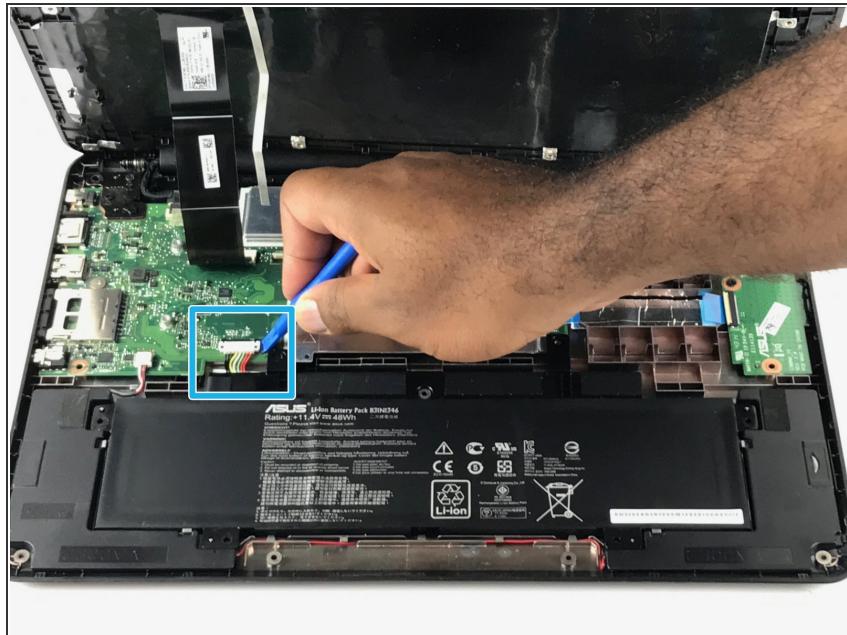

- Unplug wire using the plastic opening tool that connects battery with board

## Step 7



- Lift the battery out of the laptop

To reassemble your device, follow these instructions in reverse order.