



Asus Chromebook C300MA-DB01 Keyboard Replacement

This guide will show you how to remove and replace the keyboard for your Chromebook.

Written By: wyatt boyatt



INTRODUCTION

If your keyboard is not working this guide will be very useful. There is not much that can go wrong with this but as always be wary when unplugging wires as to avoid tearing.

TOOLS:

- [iFixit Opening Tools](#) (1)
- [64 Bit Driver Kit](#) (1)

PARTS:

- [Asus Chromebook C300MA DB01 Keyboard](#) (1)

Step 1 — Back Cover



- Place device bottom-side up.

Step 2



- Remove the eight 9.0 mm Philips screws along the perimeter of the case.
- Remove the three 6.0 mm Philips screws from the center of the case.

Step 3



- Using a plastic opening tool, separate the bottom case at the steam.

Step 4




- Open the Chromebook at hinges.

Step 5 — Keyboard



- Use plastic opening tool to pry open clip holding keyboard wires to the circuitboard.

Step 6

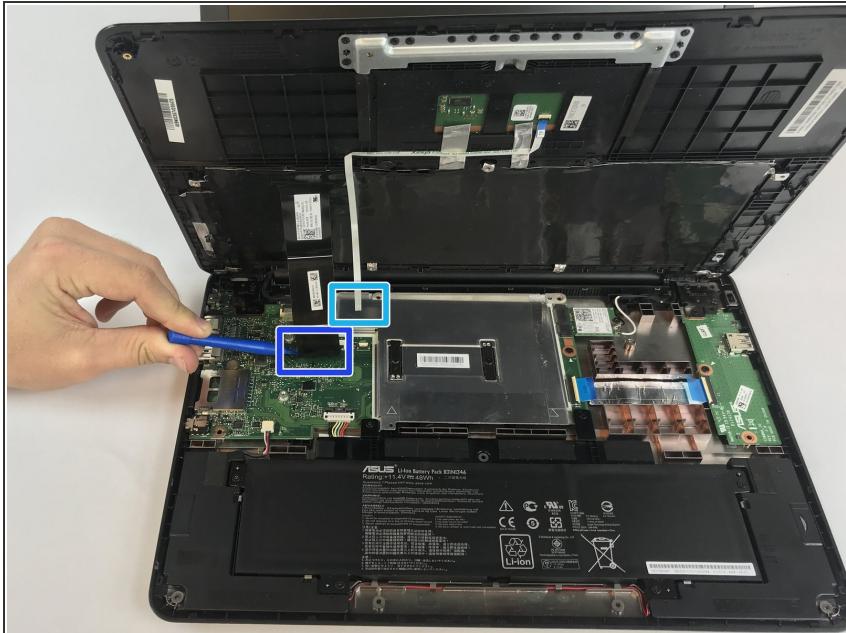

- Use plastic opening tool to pry open clip holding mouse pad wires to the circuit board.
- Use plastic opening tool to pry open clip holding keyboard flat black wire
- Use plastic opening tool to pry open clip holding keyboard thiner white wire

Step 7



- Lift and remove keyboard from device.

To reassemble your device, follow these instructions in reverse order.